

REP. NO.	DESCRIPTION	QTY.
1	DISCHARGE HEAD CAP	1
2	CHECK VALVE BUSHING	1
3	O'RING - DISCHARGE FLANGE	2
4	DISCHARGE FLANGE	2
5	HEX HEAD CAP SCREW	2
6	CHECK VALVE PLATE	1
7	CHECK VALVE RUBBER	1
8	CHECK VALVE DIFFUSER	1
9	BRASS PIN	1
10	STRAINER FLANGE GASKET	2
11	STRAINER FLANGE	1
12	STRAINER	1
13	SUCTION HEAD - PRIMER SIDE	1
14	STUFFING BOX SCREW	6
15	O'RING - STUFFING BOX	2
16	STUFFING BOX - OUTBOARD	1
17	BEARING - IMPELLER SHAFT	1
18	WATER SLINGER - OUTBOARD	1
19	OIL SEAL - OUTBOARD	1
20	BEARING CAP	1
21	1/8" NPT PLUG	2
22	O'RING - SUCTION HEAD	2
23	DRAIN COCK	1
24	VOLUTE	1
25	GASKET - VOLUTE	2
26	PACKING PLUNGER SCREW	2
27	PACKING PLUNGER NUT	2
28	PACKING PLUNGER PISTON	2
29	PACKING PLUNGER GUIDE	2
30	PUMP PACKING	2
31	OIL SEAL - INBOARD	1
32	IMPELLER SHAFT	1
33	WATER SLINGER - INBOARD	1
34	STUFFING BOX - INBOARD	1
35	SUCTION HEAD - RELIEF VALVE SIDE	1
36	RETAINING RING	2
37	SEAL RING	2
38	IMPELLER	1
39	RELIEF VALVE ELBOW	1
40	RELIEF VALVE ASSEMBLY	1
41	O'RING - RELIEF VALVE ELBOW	1
42	GASKET - DISCHARGE HEAD	1
43	CHECK VALVE SEAT	1
44	CHECK STEM	1
45	O'RING - DISCHARGE HEAD CAP	1

