


- NOTES:
- 1) BRANCH CIRCUIT PROTECTION REQUIRED.
200% Min. - 250% Max. MOTOR FLA AND IN
ACCORDANCE WITH NEC TABLE 430.52
 - 2) REMOTE START IS INTERNALLY LATCHED.
OPEN DISCONNECT SWITCH TO STOP PUMP.
 - 3) JUMPER ON TERMINALS 11 & 12 IS FOR FACTORY
USE ONLY. DO NOT LEAVE CONNECTED FOR FIRE
PROTECTION.

TO 230 VAC SUPPLY
DEDICATED BRANCH CIRCUIT
SEE NOTE 1

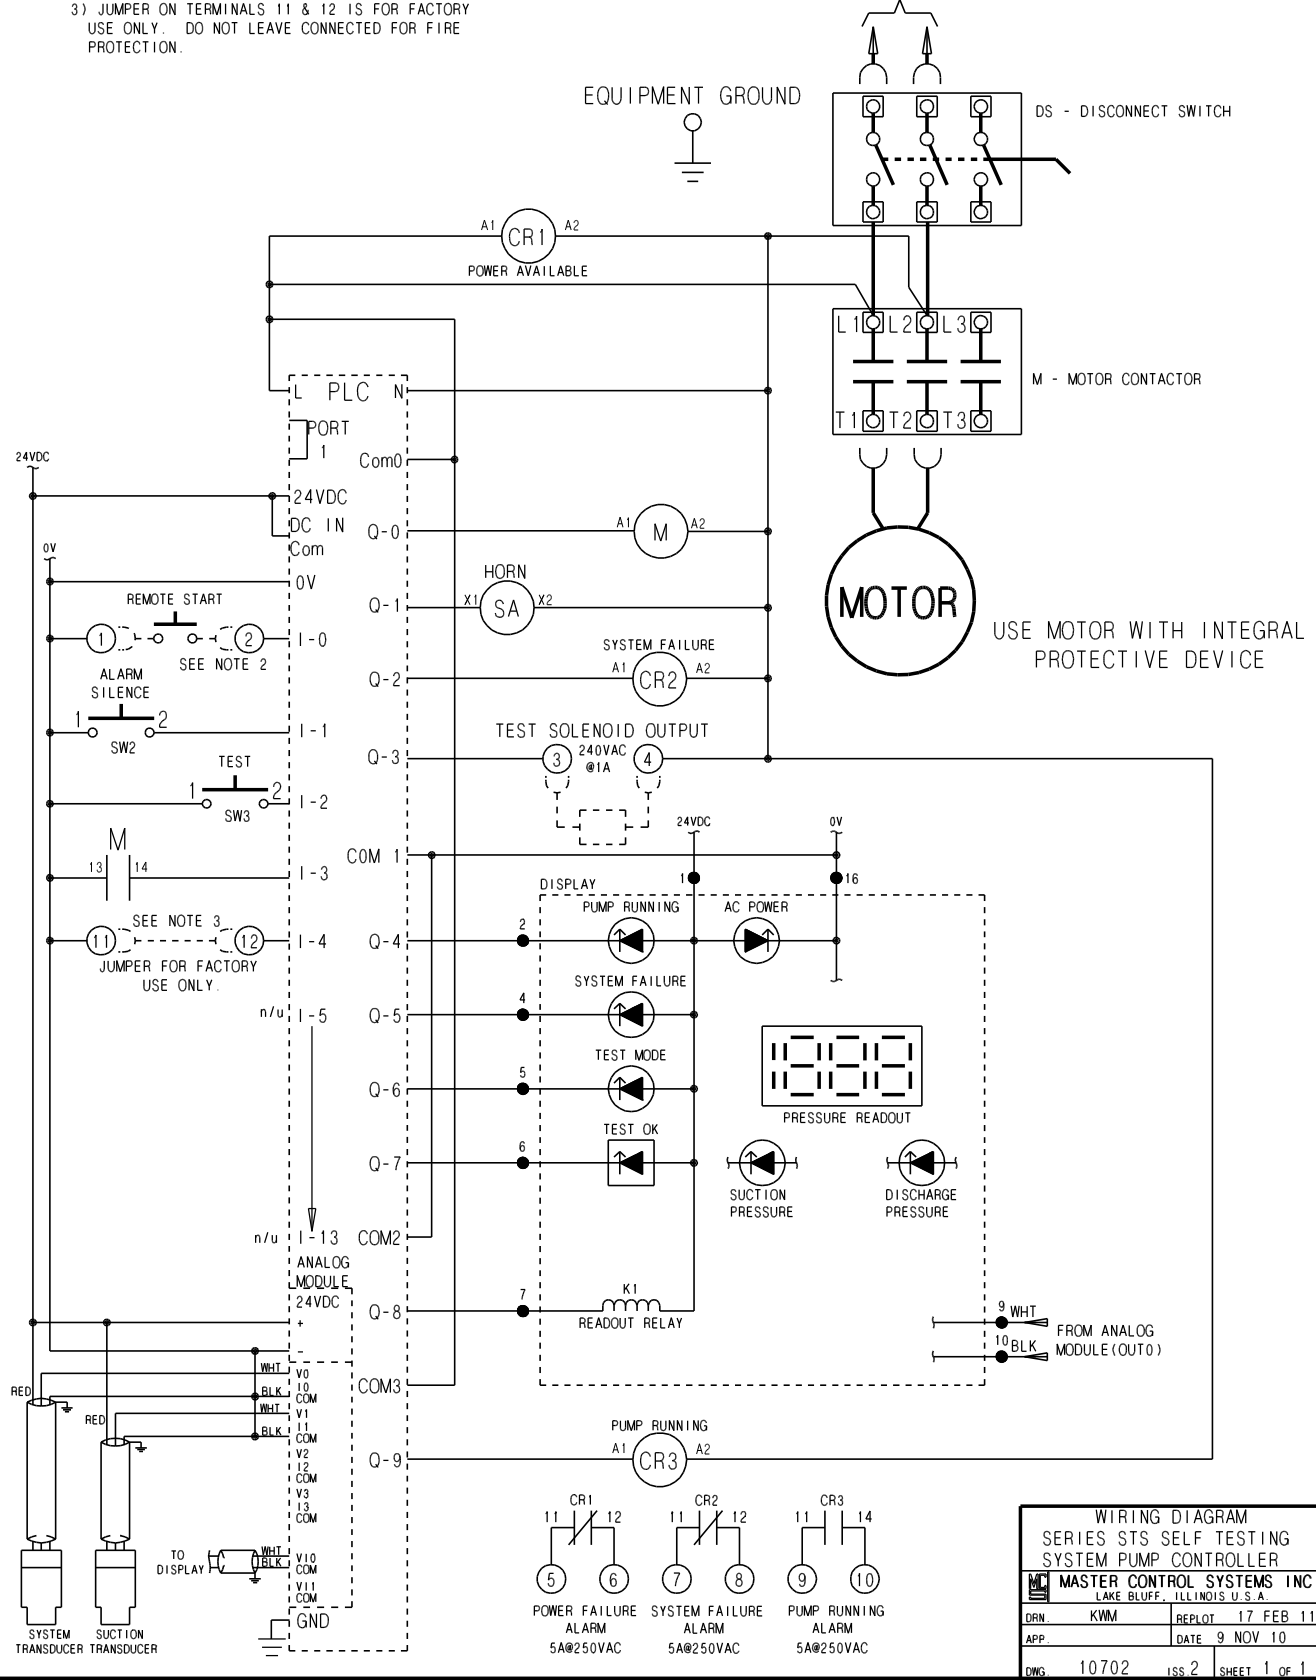

WIRING DIAGRAM		
SERIES STS SELF TESTING SYSTEM PUMP CONTROLLER		
MASTER CONTROL SYSTEMS INC. LAKE BLUFF, ILLINOIS U.S.A.		
DRN: KWM	REPLT: 17 FEB 11	
APP:	DATE: 9 NOV 10	
DWG: 10702	ISS: 2	SHEET: 1 OF 1