

NUMBER	PART NUMBER	PART DESCRIPTION	NUMBER	PART NUMBER	PART DESCRIPTION
1	A901	Prime Pump	15	D909	Shim
1A	D1902	Prime Pump grip	16	B5036	Engine, 5.5 hp
2	B3047	Hose clamp	17	B227	Discharge hose
3	D2281	Elbow, 90	20	B3048	Hose clamp
4	B273	Inlet hose	21	A6001	Discharge check valve assy.
5	C743	Adapter	22	B276	Suction hose
6	C741	Case	23	B198	Coupling
7	C742	Impeller	24	A6002	Suction strainer
8	D702	Sleeve	25	B3050	Hose clamp
9	A802	Seal	26	D705	Prime pump bracket
10	D159	O-Ring	27	B5105	Prime pump spacer
11	*	Drain plug	28	D706	Engine cradle
12	B3025	Hose barb	29	B5106	Bumper
13	B3027	Nipple hose connector	30	D7408	Cradle plug
14	D341	Flinger	31	B3051	Hose clamp
			32	D713	Handle

