

Operator's Manual Table of Contents For Darley PTO Type PSR/PSRH Fire Pump

Description, Operation & Maintenance, & Lubrication -----	1200536
Related Drawings -----	DLC0116 DLC0117 DPC1400 DPD0801 DPD0804
Mechanical Seal -----	1200583
Packing Adjustment -----	1200504 1200514
High Pressure Stage -----	1200511 DLC0104
Pump Shift-----	1200591 1200590
General Operation -----	1200509 1200510 1201500-1201502
Electric Primer -----	1200512 DVC0108 DVC0109
Multiple Drain Valve -----	1204506 DGC0903
Ball Valve -----	1200000 DGC0100
Relief Valve "Suction / Discharge Valve" -----	1200508 DGC0115 1200503 DGC0141 DGD0800 1201002
Tachometer-----	DGC0105 1201001
Butterfly Valve -----	DGD0104 DGD0101 1200572
Pump Overheat Protection -----	DGM0117 5209401 5209402

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

This manual is for DARLEY FIRE PUMP:

Model: PSR/PSRH Pump Serial Number: _____

Description of Pump Type

The **Type PSR/PSRH** pump is a high speed, single stage, centrifugal pump.

The pump is normally powered from a transmission driven power take-off (PTO).

OPERATION AND MAINTENANCE OF TYPE PSR/PSRH FIRE PUMP

Right and left, and front and rear locations are referred to from a position facing the pump suction inlet.

Lubrication

Keep the gear case filled with oil to the level of the oil level plug, which is marked on the pump gear case.

Check the oil level every 25 hours or every 3 month, and change it every 50 hours or 6 months.

Use 80W/90 gear lube oil - not grease - in the pump transmission.

CAUTION: Do not overfill.

Inject grease in zerk fittings on the driveline universal joints once a year.






Operation of Pump

This pump is driven from a standard automotive power take-off with sliding gear engagement. This power take-off is shifted from the driver's seat. Motor clutch must be disengaged while shifting. Engage the PTO shift after pump is primed.

Never run the pump dry except momentarily and at low speeds.

WARNING: Do not use this pump for hose testing.

QTY.	PART NO.	DESCRIPTION
2	1	BEARING-BALL, 708SFF
2	2	BEARING-BALL, 305SFF
1	3	BEARING-BALL, 7305HP UM
1	4	CAP - BEARING - LM
1	5	CAP - BEARING - AM TRANS
1	6	CAP - BEARING - SHUTT RSK
1	7	COLLAR - SHUTT RSK
1	8	DRUM/COIL - 0.250 WPM, 5HC BR
1	9	FLANGE - 1.50 WPT - O-RING, COI
2	10	GASKET - GEARCASE COVER, LHM
1	11	GEAR - IDLER, PSBH, 431, 120P
1	12	GEAR - PINION, PSBH, 281, 120P
1	13	GEARCASE - LHM
4	14	HKCS - 313-18 x 0.15, GR5
4	15	HKCS - 313-18 x 0.88, GR5
3	16	HKCS - 313-18 x 1.25, GR5
4	17	HKCS - 315-16 x 1.25, GR5
1	18	IMPELLER - MECHANICAL SEAL, S
1	19	IMPELLER - SH, MECH SEAL
1	20	MT - FLUSH, MECH SEAL
1	21	MECHANICAL SEAL - 835S LSH
1	22	NYLON - PIPE, 1.500, CLOSE, BL
3	23	NUT - CASTLE, 500-20, 303
1	24	NUT - CASTLE, 625-18, 303 SST
16	25	NUT - MET, 375-16, GR2
2	26	O-RING - 0.88 x 1.12 x 0.12
2	27	O-RING - 2.38 x 2.50 x 0.06
20	28	O-RING - 3.12 x 3.38 x 0.12
1	29	O-RING - 5.63 x 5.88 x 0.12
1	30	SOUL SEAL - 0.875 ID x 1.125 OD
1	31	SOUL SEAL - 0.984 ID x 1.499 OD
1	32	SPIN - COITER, 694 x 1.00, SST
16	33	SPIN - COITER, 1275 x 1.00, SST
2	34	SPIN - DOBEL, 250 x 1.25, GR8
3	35	PLUG - PIPE, 0.250, SST, 50C HD
3	36	PLUG - PIPE, 0.250, 71MC SOC HD
37	37	PLUG - PIPE, 0.375, 71C SOC HD
37	38	PLUG - PIPE, 0.750 SST 50 HD
1	39	PUMP CASTING - ERM/LUM/PSBH
1	40	RING - RETAINER, 5103-87
1	41	RING - RETAINER, 5100-137
1	42	SEAL RING - F, INTERSTAGE
1	43	SEAL RING - S/SH
1	44	SHUTT - IDLER GEAR, SH
1	45	SHUTT - PUMP, 3RD STAGE, S
6	46	SHCS - 250-20 x 0.88, SST
1	47	SHCS - 250-20 x 1.00, GR8
1	48	SHUTT BAR, PSBH
1	49	SLERVE - LSPH, INTERNAL
1	50	SPACER - 0.75 x 1.50 x 0.50
1	51	SPACER - 1.28 x 1.50 x 0.30
1	52	SPACER - 1.38 x 1.63 x 3.90
1	53	SPACER - 2ND STAGE PINION
1	54	SPACER - PSBH, 1.30 RATIO
1	55	SPRING - WAVE, SMALL
1	56	SPRING - WAVE, SHUTT
16	57	STUD - 0.315-1.6 x 1.500, GR5
50	58	TEE - PIPE, 1.500, BLK
1	59	TEE - PIPE, 3/4 x .25
1	60	TUBE FITTING - 3/16, STEEL
1	61	VENT - GEARCASE
62	62	WASHER - FLAT, 5/16, STEEL
63	63	WASHER - LOCK, 0.313 ID
4	64	WASHER - LOCK, 1.315 ID
1	65	WASHER - 0.52 x 0.84 x .12 303

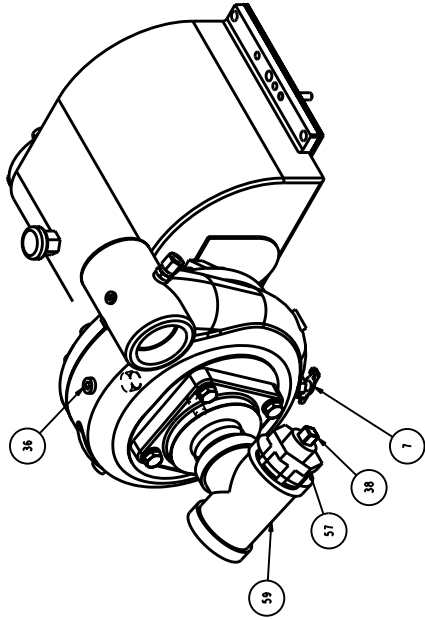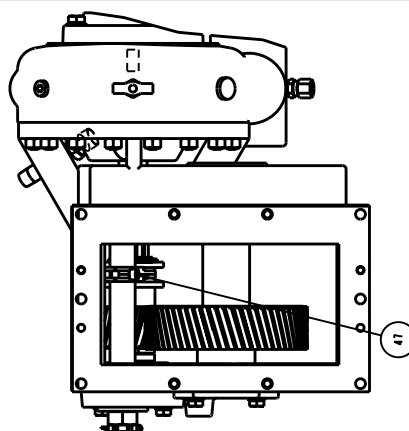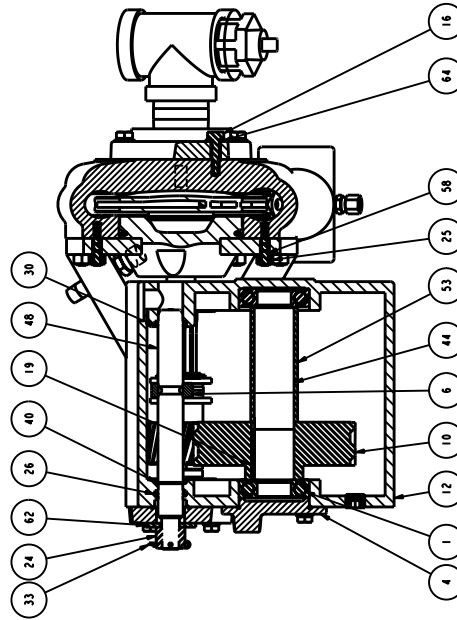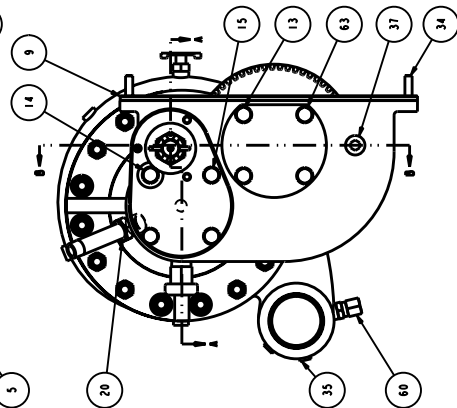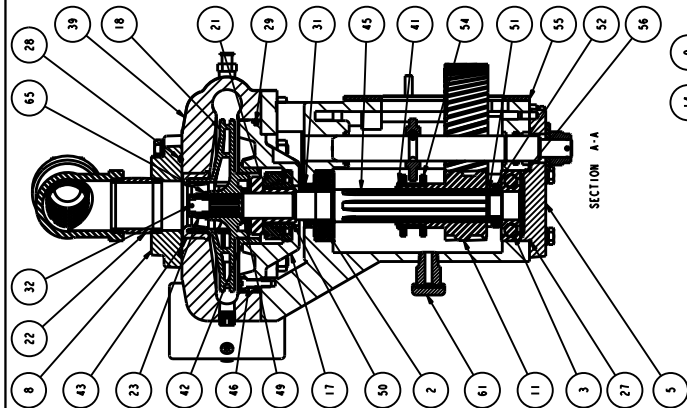


REMOVE SHARP TOOLS

INCH
(MILLIMETERS)

AS LISTED

IDENTIFY RECEPTION:

	OLD PART NO.	TOLERANCE	QUANTITY
	PATTERN NO.	MATERIAL NO.	DATE

W & S Drill & Co.
1140 E. - 1st Street, S.E.
- CLEVELAND, OHIO 44115

INSTR. FOR SHIP. AND DEL. ALMOST IMMEDIATE

DO NOT SCALE PRINT

ALL DIMENSIONS IN MILLIMETERS

THIS PRINT IS THE PROPERTY OF W & S DRILL & CO. IT IS TO BE RETURNED TO THE COMPANY WHEN REQUESTED.


FORM 300-32

NO. ORDER

172

DL0016

NO.	DESCRIPTION	PART NO. QTY.
1	BEARING-BALL, 784SFF	- 2
2	BEARING-BALL, 305SFF	-
3	BEARING-BALL, 1205W, HP UA	- 1
4	CAP - BEARING, KM	- 1
5	CAP - BEARING, AUX TRANS	- 1
6	COLLAR - SHFT, RSK	- 1
7	DRUMCOCK - 0.250 WPM, MC BR	- 1
8	GASNET - 1.5 WPT, O-RING, COT	- 1
9	GASNET - GEARCASE COVER, LHM	- 2
10	GEAR - IDLER, PSFH, 431, 120P	- 1
11	GEAR - PINION, PSFH, 261, 120P	- 1
12	GEARCASE - LHM	- 1
13	HUCKS - 313-18 x 0.75, GR5	- 4
14	HUCKS - 313-18 x 0.89, GR5	- 1
15	HUCKS - 313-18 x 1.25, GR5	- 3
16	HUCKS - 315-18 x 1.25, GR5	- 4
17	HOUSING - MECHANICAL SEAL, S	- 1
18	IMPELLER - SH, MECH SEAL	- 1
19	MIT - FLUSH, MECH SEAL	- 1
20	MIT - FLUSH, MECH SEAL	- 1
21	MICROPIPE - PIPE, 1.500, CLOSE, BL	- 1
22	MUT - CASTLE, 500-20, 305	- 1
23	MUT - CASTLE, 425-18, 303 SST	- 1
24	MUT - MET, 315-16, GR2	- 16
25	MUT - MET, 315-16, GR2	- 16
26	O-RING - 0.89 x 1.12 x 0.12	- 1
27	O-RING - 0.89 x 1.12 x 0.12	- 1
28	O-RING - 2.38 x 2.50 x 0.06	- 2
29	O-RING - 3.12 x 3.38 x 0.12	- 1
30	O-RING - 5.63 x 5.68 x 0.12	- 1
31	OIL SEAL - 0.875 ID X 1.125 OD	- 1
32	OIL SEAL - 0.875 ID X 1.125 OD	- 1
33	OUT SEAL - 0.984 ID X 1.499 OD	- 1
34	OUT SEAL - 0.984 ID X 1.499 OD	- 1
35	OUT SEAL - 0.984 ID X 1.499 OD	- 1
36	OUT SEAL - 0.984 ID X 1.499 OD	- 1
37	OUT SEAL - 0.984 ID X 1.499 OD	- 1
38	OUT SEAL - 0.984 ID X 1.499 OD	- 1
39	OUT SEAL - 0.984 ID X 1.499 OD	- 1
40	OUT SEAL - 0.984 ID X 1.499 OD	- 1
41	OUT SEAL - 0.984 ID X 1.499 OD	- 1
42	OUT SEAL - 0.984 ID X 1.499 OD	- 1
43	OUT SEAL - 0.984 ID X 1.499 OD	- 1
44	OUT SEAL - 0.984 ID X 1.499 OD	- 1
45	OUT SEAL - 0.984 ID X 1.499 OD	- 1
46	OUT SEAL - 0.984 ID X 1.499 OD	- 1
47	OUT SEAL - 0.984 ID X 1.499 OD	- 1
48	OUT SEAL - 0.984 ID X 1.499 OD	- 1
49	OUT SEAL - 0.984 ID X 1.499 OD	- 1
50	OUT SEAL - 0.984 ID X 1.499 OD	- 1
51	OUT SEAL - 0.984 ID X 1.499 OD	- 1
52	OUT SEAL - 0.984 ID X 1.499 OD	- 1
53	OUT SEAL - 0.984 ID X 1.499 OD	- 1
54	OUT SEAL - 0.984 ID X 1.499 OD	- 1
55	OUT SEAL - 0.984 ID X 1.499 OD	- 1
56	OUT SEAL - 0.984 ID X 1.499 OD	- 1
57	OUT SEAL - 0.984 ID X 1.499 OD	- 1
58	OUT SEAL - 0.984 ID X 1.499 OD	- 1
59	OUT SEAL - 0.984 ID X 1.499 OD	- 1
60	OUT SEAL - 0.984 ID X 1.499 OD	- 1
61	OUT SEAL - 0.984 ID X 1.499 OD	- 1
62	OUT SEAL - 0.984 ID X 1.499 OD	- 1
63	OUT SEAL - 0.984 ID X 1.499 OD	- 1
64	OUT SEAL - 0.984 ID X 1.499 OD	- 1
65	OUT SEAL - 0.984 ID X 1.499 OD	- 1

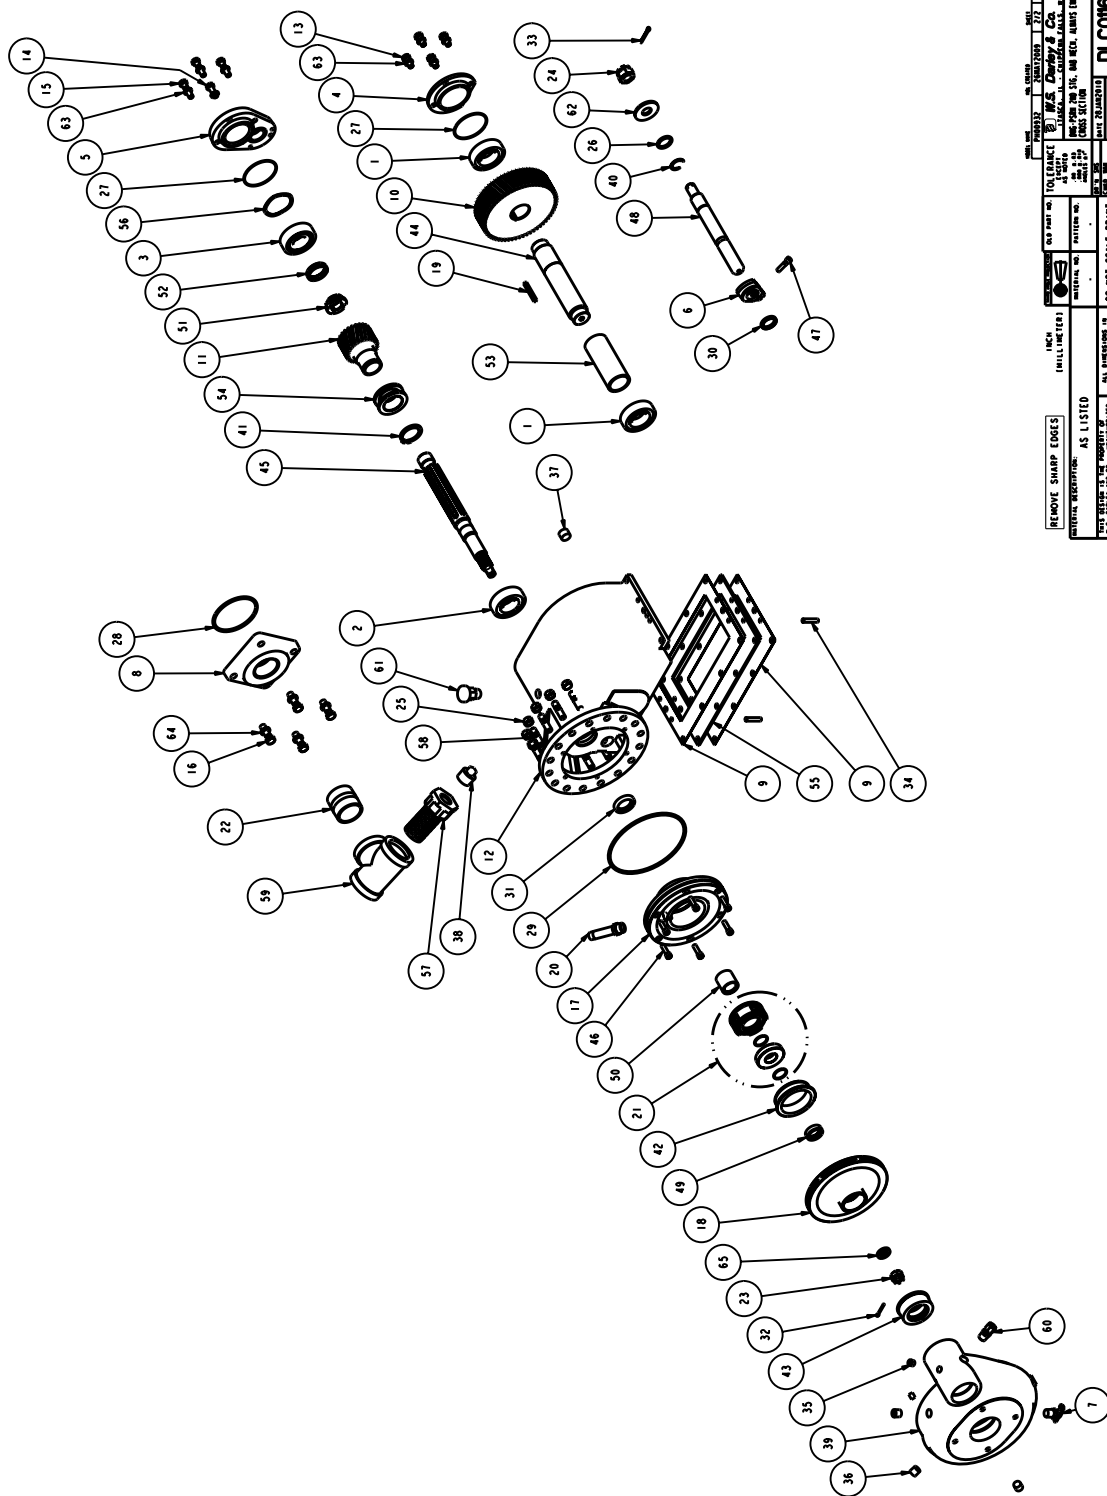[illegible]

QTY.	PAR.	DESCRIPTION	UNIT
1	1	BEARING - OILITE, 0.500 ID	
2	2	BEARING-BALL, 20X57	
3	4	BEARING-BALL, 20X57	
4	4	BEARING-BALL, 12X58 MP UN	
5	3	CAP - BEARING - 100 MP UN	
6	3	CAP - BEARING - 100 MP UN	
7	1	COLLAR - 1.500 ID, 1.750 OD	
8	1	COVER - SWITCH - 1.500 ID, 1.750 OD	
9	1	COVER - SWITCH - 1.500 ID, 1.750 OD	
10	1	CYLINDER - 1.500 ID, 1.750 OD	
11	11	CYLINDER END - 1.500 ID, 1.750 OD	
12	12	FLANGE - 1.500 ID, 1.750 OD	
13	13	GASKET - GEARCASE COVER	
14	14	GEAR - IDLER PSW, 63T, 12DP	
15	15	GEAR - PINION PSW, 26T, 12DP	
16	16	GEARCASE - 1.500 ID, 1.750 OD	
17	17	HEAD - CYLINDER, 1.500 ID, 1.750 OD	
18	18	HUCKS - 250-20 X 4.00, 18-8	
19	19	HUCKS - 313-18 X 0.75, GR5	
20	20	HUCKS - 313-18 X 0.88, GR5	
21	21	HUCKS - 313-18 X 1.25, GR5	
22	22	HUCKS - 313-16 X 1.25, GR5	
23	23	IMPOSTING - MECHANICAL SEAL, S	
24	24	IMPELLER - SH. MECH SEAL	
25	25	MECH SEAL - 1.500 ID, 1.750 OD	
26	26	MECHANICAL SEAL - 1.500 ID, 1.750 OD	
27	27	MECHANICAL SEAL - 1.500 ID, 1.750 OD	
28	28	PIPE - CASTLE, 500-20, 303	
29	29	PIPE - CASTLE, 500-20, 303	
30	30	PIPE - MECH. 313-18 X 0.75, GR2	
31	31	PIPE - MECH. 313-18 X 0.75, GR2	
32	32	PIPE - MECH. 313-18 X 0.75, GR2	
33	33	PIPE - MECH. 313-18 X 0.75, GR2	
34	34	PIPE - MECH. 313-18 X 0.75, GR2	
35	35	PIPE - MECH. 313-18 X 0.75, GR2	
36	36	PIPE - MECH. 313-18 X 0.75, GR2	
37	37	PIPE - MECH. 313-18 X 0.75, GR2	
38	38	PIPE - MECH. 313-18 X 0.75, GR2	
39	39	PIPE - MECH. 313-18 X 0.75, GR2	
40	40	PIPE - MECH. 313-18 X 0.75, GR2	
41	41	PIPE - MECH. 313-18 X 0.75, GR2	
42	42	PIPE - MECH. 313-18 X 0.75, GR2	
43	43	PIPE - MECH. 313-18 X 0.75, GR2	
44	44	PIPE - MECH. 313-18 X 0.75, GR2	
45	45	PIPE - MECH. 313-18 X 0.75, GR2	
46	46	PIPE - MECH. 313-18 X 0.75, GR2	
47	47	PIPE - MECH. 313-18 X 0.75, GR2	
48	48	PIPE - MECH. 313-18 X 0.75, GR2	
49	49	PIPE - MECH. 313-18 X 0.75, GR2	
50	50	PIPE - MECH. 313-18 X 0.75, GR2	
51	51	PIPE - MECH. 313-18 X 0.75, GR2	
52	52	PIPE - MECH. 313-18 X 0.75, GR2	
53	53	PIPE - MECH. 313-18 X 0.75, GR2	
54	54	PIPE - MECH. 313-18 X 0.75, GR2	
55	55	PIPE - MECH. 313-18 X 0.75, GR2	
56	56	PIPE - MECH. 313-18 X 0.75, GR2	
57	57	PIPE - MECH. 313-18 X 0.75, GR2	
58	58	PIPE - MECH. 313-18 X 0.75, GR2	
59	59	PIPE - MECH. 313-18 X 0.75, GR2	
60	60	PIPE - MECH. 313-18 X 0.75, GR2	
61	61	PIPE - MECH. 313-18 X 0.75, GR2	
62	62	PIPE - MECH. 313-18 X 0.75, GR2	
63	63	PIPE - MECH. 313-18 X 0.75, GR2	
64	64	PIPE - MECH. 313-18 X 0.75, GR2	
65	65	PIPE - MECH. 313-18 X 0.75, GR2	
66	66	PIPE - MECH. 313-18 X 0.75, GR2	
67	67	PIPE - MECH. 313-18 X 0.75, GR2	
68	68	PIPE - MECH. 313-18 X 0.75, GR2	
69	69	PIPE - MECH. 313-18 X 0.75, GR2	
70	70	PIPE - MECH. 313-18 X 0.75, GR2	
71	71	PIPE - MECH. 313-18 X 0.75, GR2	
72	72	PIPE - MECH. 313-18 X 0.75, GR2	
73	73	PIPE - MECH. 313-18 X 0.75, GR2	
74	74	PIPE - MECH. 313-18 X 0.75, GR2	
75	75	PIPE - MECH. 313-18 X 0.75, GR2	




REMOVE SHARP EDGES


SECTION 8-B

[illegible]

NO.	DESCRIPTION	PART NO.	QTY.
1	BEARING - BALL, 25X57	-	1
2	BEARING - BALL, 25X57	-	2
3	BEARING - BALL, 25X57	-	1
4	BEARING - BALL, 25X57	-	1
5	BEARING - BALL, 25X57	-	1
6	BEARING - BALL, 25X57	-	1
7	BEARING - BALL, 25X57	-	1
8	BEARING - BALL, 25X57	-	1
9	BEARING - BALL, 25X57	-	1
10	BEARING - BALL, 25X57	-	1
11	BEARING - BALL, 25X57	-	1
12	BEARING - BALL, 25X57	-	1
13	BEARING - BALL, 25X57	-	1
14	BEARING - BALL, 25X57	-	1
15	BEARING - BALL, 25X57	-	1
16	BEARING - BALL, 25X57	-	1
17	BEARING - BALL, 25X57	-	1
18	BEARING - BALL, 25X57	-	1
19	BEARING - BALL, 25X57	-	1
20	BEARING - BALL, 25X57	-	1
21	BEARING - BALL, 25X57	-	1
22	BEARING - BALL, 25X57	-	1
23	BEARING - BALL, 25X57	-	1
24	BEARING - BALL, 25X57	-	1
25	BEARING - BALL, 25X57	-	1
26	BEARING - BALL, 25X57	-	1
27	BEARING - BALL, 25X57	-	1
28	BEARING - BALL, 25X57	-	1
29	BEARING - BALL, 25X57	-	1
30	BEARING - BALL, 25X57	-	1
31	BEARING - BALL, 25X57	-	1
32	BEARING - BALL, 25X57	-	1
33	BEARING - BALL, 25X57	-	1
34	BEARING - BALL, 25X57	-	1
35	BEARING - BALL, 25X57	-	1
36	BEARING - BALL, 25X57	-	1
37	BEARING - BALL, 25X57	-	1
38	BEARING - BALL, 25X57	-	1
39	BEARING - BALL, 25X57	-	1
40	BEARING - BALL, 25X57	-	1
41	BEARING - BALL, 25X57	-	1
42	BEARING - BALL, 25X57	-	1
43	BEARING - BALL, 25X57	-	1
44	BEARING - BALL, 25X57	-	1
45	BEARING - BALL, 25X57	-	1
46	BEARING - BALL, 25X57	-	1
47	BEARING - BALL, 25X57	-	1
48	BEARING - BALL, 25X57	-	1
49	BEARING - BALL, 25X57	-	1
50	BEARING - BALL, 25X57	-	1
51	BEARING - BALL, 25X57	-	1
52	BEARING - BALL, 25X57	-	1
53	BEARING - BALL, 25X57	-	1
54	BEARING - BALL, 25X57	-	1
55	BEARING - BALL, 25X57	-	1
56	BEARING - BALL, 25X57	-	1
57	BEARING - BALL, 25X57	-	1
58	BEARING - BALL, 25X57	-	1
59	BEARING - BALL, 25X57	-	1
60	BEARING - BALL, 25X57	-	1
61	BEARING - BALL, 25X57	-	1
62	BEARING - BALL, 25X57	-	1
63	BEARING - BALL, 25X57	-	1
64	BEARING - BALL, 25X57	-	1
65	BEARING - BALL, 25X57	-	1
66	BEARING - BALL, 25X57	-	1
67	BEARING - BALL, 25X57	-	1
68	BEARING - BALL, 25X57	-	1
69	BEARING - BALL, 25X57	-	1
70	BEARING - BALL, 25X57	-	1
71	BEARING - BALL, 25X57	-	1
72	BEARING - BALL, 25X57	-	1
73	BEARING - BALL, 25X57	-	1
74	BEARING - BALL, 25X57	-	1
75	BEARING - BALL, 25X57	-	1

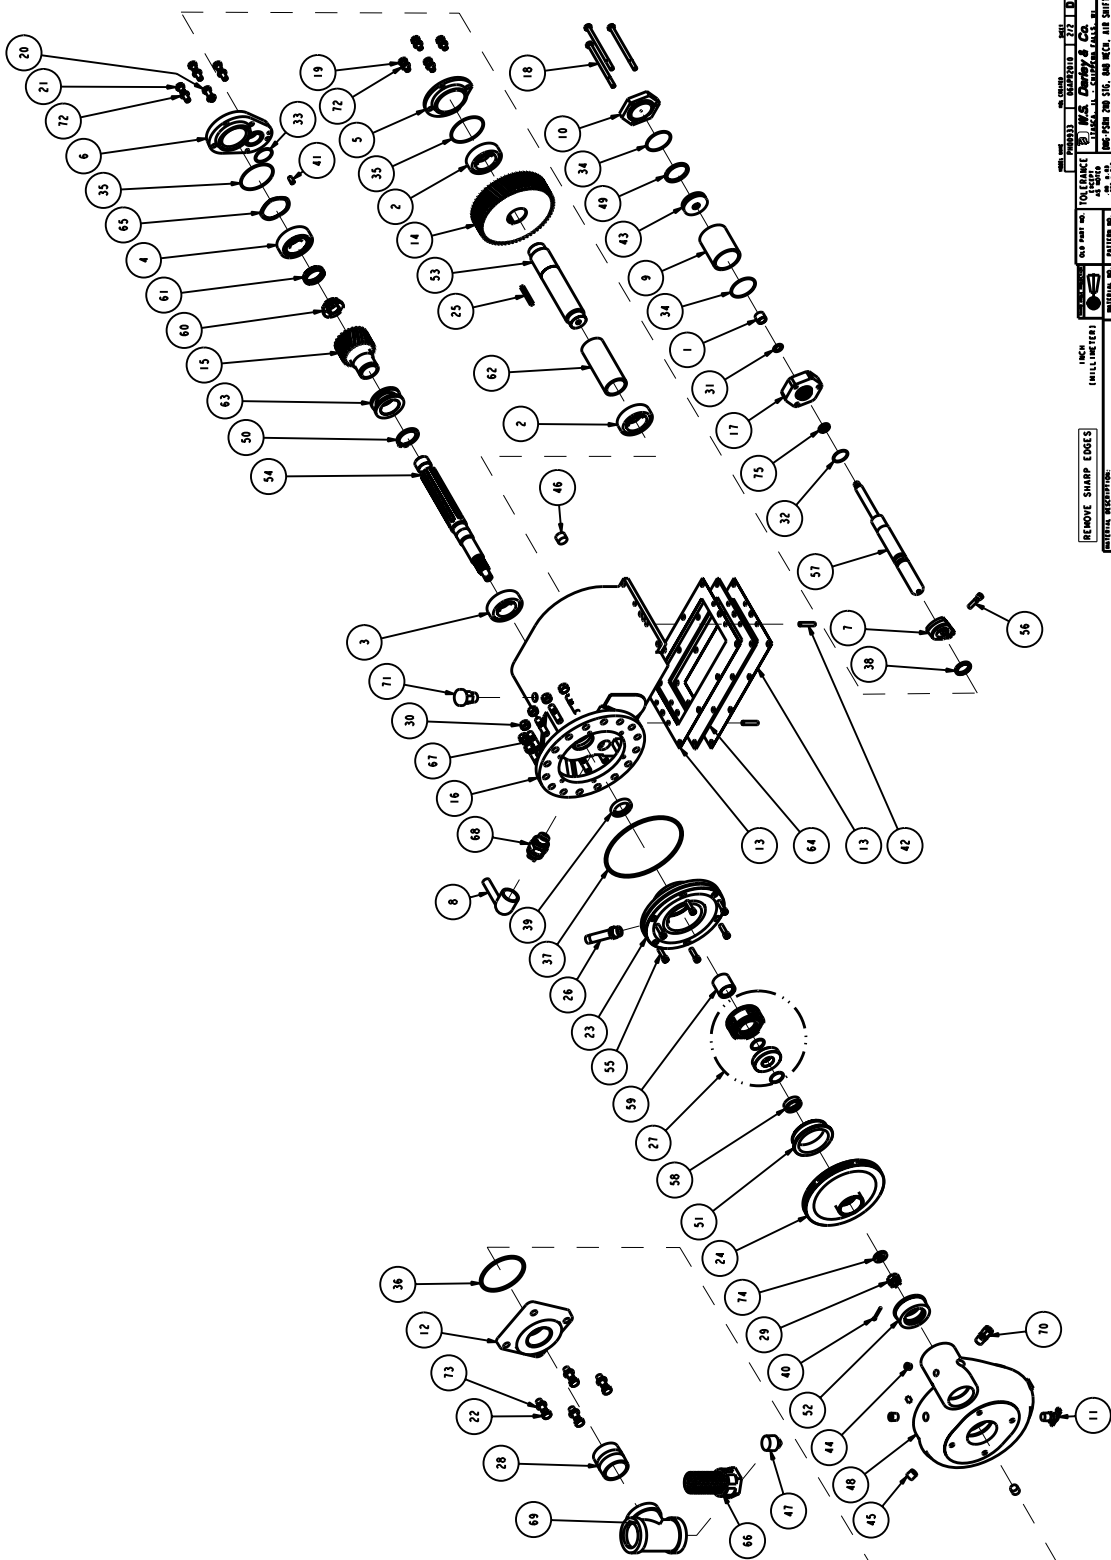[illegible]

NO.	DESCRIPTION	PART NO.	QTY.
1	BEARING-BALL	-	1
2	BEARING-BALL, 2015	-	1
3	BEARING-BALL, 2015F	-	1
4	BEARING-BALL, 3105F	-	1
5	BEARING-BALL,2085	-	1
6	BEARING-BALL,2085F	-	1
7	BRACKET - BEARING, PSBH	-	1
8	CAP - BEARING, CENTER INPUT	-	1
9	CAP - BEARING, CENTER INPUT	-	1
10	CAP - BEARING, PTO DRIVE	-	1
11	CAP BEARING, PS	-	1
12	COMP FLANGE - 1350/1410, 1.38"	-	1
13	GEAR - DRIVE, PSBH, 12DP, 14.9PA	-	1
14	GEAR - IDLER, PSBH, 12DP, 14.9PA	-	1
15	GEAR - PINION, PSBH, 12DP, 14.9PA	-	1
16	GEARCASE - MOUNT 3 GR PTO	-	1
17	IMCS - .375-16 x 0.75, GR5	-	8
18	IMCS - .375-16 x 1.00, GR5	-	12
19	IMCS - .500-13 x 2.00, GR5	-	3
20	KEY - 50, 0.25 X 3.00 GR2	-	1
21	KEY - 50, 0.38 X 1.19	-	1
22	KEY - 50, 0.38 X 3.00	-	1
23	MUT - CABLE DRIVE, RSM, 0.104	-	1
24	MUT - FLANGE, 370-14	-	1
25	O-RING - 3.50 X 3.69 X 0.69	-	2
26	O-RING - 5.00 X 5.25 X 0.12	-	3
27	OIL SEAL - 0.315 ID X 0.688 OD	-	1
28	OIL SEAL - 1.150 ID X 2.318 OD	-	1
29	PLUG - PIPE, 0.125, 2IN SDC HD	-	1
30	PLUG - PIPE, 0.315, MAG SDC HD	-	1
31	PLUG - PIPE, 0.315, 2IN SDC HD	-	1
32	PLUG - TACH, 80-TURNS	-	1
33	SHAFT - IDLER, PSBH	-	1
34	SHAFT - IMPELLER, PS	-	1
35	SHAFT-INPUT, PSBH	-	1
36	SPACER - 1.38 x 1.75 x .9055	-	1
37	SPACER - 1.57 X 2.00 X 0.69	-	1
38	SPACER - 1.58 X 2.00 X .8655	-	1
39	WASHER - LOCK, 0.500-10	-	3

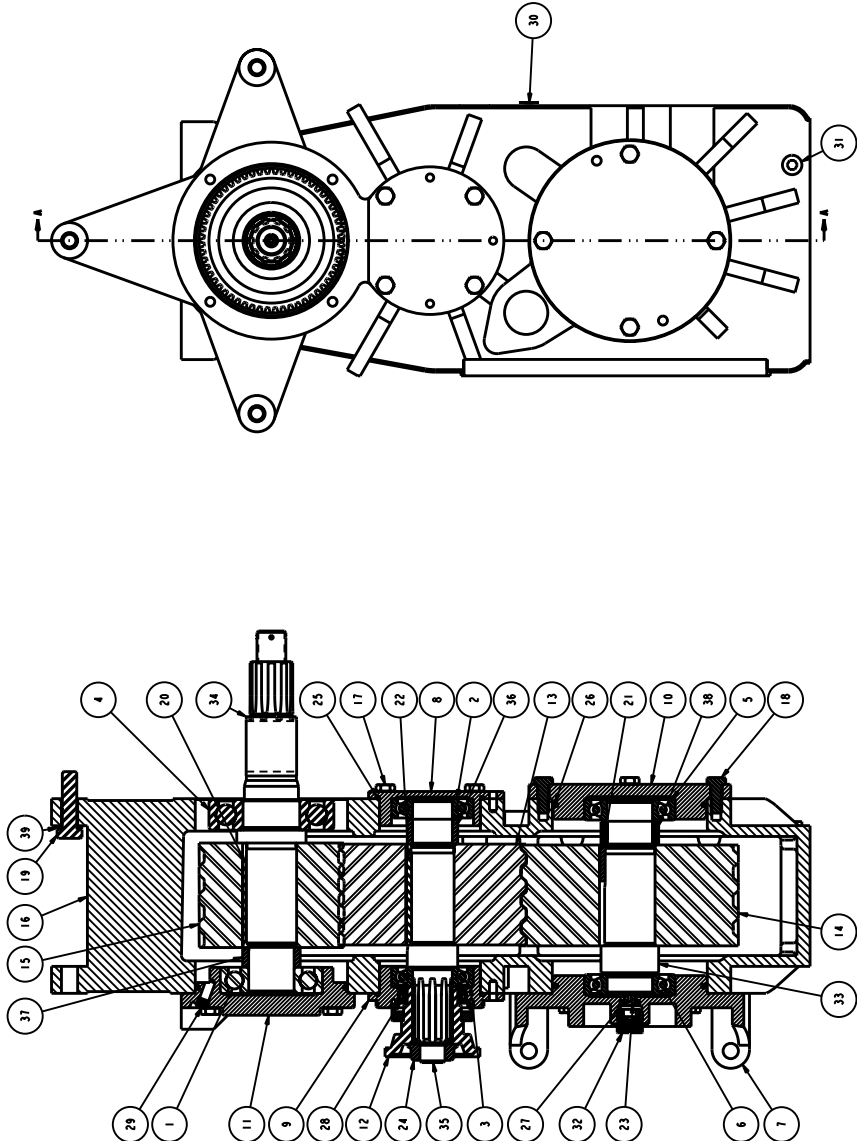


SECTION A-A

REV. NO.		
LIB	DESCRIPTION	DATE

REV. NO.	REV. NO.	REV. NO.	REV. NO.	REV. NO.	REV. NO.
1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	36
37	38	39	40	41	42
43	44	45	46	47	48
49	50	51	52	53	54
55	56	57	58	59	60
61	62	63	64	65	66
67	68	69	70	71	72
73	74	75	76	77	78
79	80	81	82	83	84
85	86	87	88	89	90
91	92	93	94	95	96
97	98	99	100	101	102
103	104	105	106	107	108
109	110	111	112	113	114
115	116	117	118	119	120
121	122	123	124	125	126
127	128	129	130	131	132
133	134	135	136	137	138
139	140	141	142	143	144
145	146	147	148	149	150
151	152	153	154	155	156
157	158	159	160	161	162
163	164	165	166	167	168
169	170	171	172	173	174
175	176	177	178	179	180
181	182	183	184	185	186
187	188	189	190	191	192
193	194	195	196	197	198
199	200	201	202	203	204
205	206	207	208	209	210
211	212	213	214	215	216
217	218	219	220	221	222
223	224	225	226	227	228
229	230	231	232	233	234
235	236	237	238	239	240
241	242	243	244	245	246
247	248	249	250	251	252
253	254	255	256	257	258
259	260	261	262	263	264
265	266	267	268	269	270
271	272	273	274	275	276
277	278	279	280	281	282
283	284	285	286	287	288
289	290	291	292	293	294
295	296	297	298	299	300
301	302	303	304	305	306
307	308	309	310	311	312
313	314	315	316	317	318
319	320	321	322	323	324
325	326	327	328	329	330
331	332	333	334	335	336
337	338	339	340	341	342
343	344	345	346	347	348
349	350	351	352	353	354
355	356	357	358	359	360
361	362	363	364	365	366
367	368	369	370	371	372
373	374	375	376	377	378
379	380	381	382	383	384
385	386	387	388	389	390
391	392	393	394	395	396
397	398	399	400	401	402
403	404	405	406	407	408
409	410	411	412	413	414
415	416	417	418	419	420
421	422	423	424	425	426
427	428	429	430	431	432
433	434	435	436	437	438
439	440	441	442	443	444
445	446	447	448	449	450
451	452	453	454	455	456
457	458	459	460	461	462
463	464	465	466	467	468
469	470	471	472	473	474
475	476	477	478	479	480
481	482	483	484	485	486
487	488	489	490	491	492
493	494	495	496	497	498
499	500	501	502	503	504
505	506	507	508	509	510
511	512	513	514	515	516
517	518	519	520	521	522
523	524	525	526	527	528
529	530	531	532	533	534
535	536	537	538	539	540
541	542	543	544	545	546
547	548	549	550	551	552
553	554	555	556	557	558
559	560	561	562	563	564
565	566	567	568	569	570
571	572	573	574	575	576
577	578	579	580	581	582
583	584	585	586	587	588
589	590	591	592	593	594
595	596	597	598	599	600
601	602	603	604	605	606
607	608	609	610	611	612
613	614	615	616	617	618
619	620	621	622	623	624
625	626	627	628	629	630
631	632	633	634	635	636
637	638	639	640	641	642
643	644	645	646	647	648
649	650	651	652	653	654
655	656	657	658	659	660
661	662	663	664	665	666
667	668	669	670	671	672
673	674	675	676	677	678
679	680	681	682	683	684
685	686	687	688	689	690
691	692	693	694	695	696
697	698	699	700	701	702
703	704	705	706	707	708
709	710	711	712	713	714
715	716	717	718	719	720
721	722	723	724	725	726
727	728	729	730	731	732
733	734	735	736	737	738
739	740	741	742	743	744
745	746	747	748	749	750
751	752	753	754	755	756
757	758	759	760	761	762
763	764	765	766	767	768
769	770	771	772	773	774
775	776	777	778	779	780
781	782	783	784	785	786
787	788	789	790	791	792
793	794	795	796	797	798
799	800	801	802	803	804
805	806	807	808	809	810
811	812	813	814	815	816
817	818	819	820	821	822
823	824	825	826	827	828
829	830	831	832	833	834
835	836	837	838	839	840
841	842	843	844	845	846
847	848	849	850	851	852
853	854	855	856	857	858
859	860	861	862	863	864
865	866	867	868	869	870
871	872	873	874	875	876
877	878	879	880	881	882
883	884	885	886	887	888
889	890	891	892	893	894
895	896	897	898	899	900
901	902	903	904	905	906
907	908	909	910	911	912
913	914	915	916	917	918
919	920	921	922	923	924
925	926	927	928	929	930
931	932	933	934	935	936
937	938	939	940	941	942
943	944	945	946	947	948
949	950	951	952	953	954
955	956	957	958	959	960
961	962	963	964	965	966
967	968	969	970	971	972
973	974	975	976	977	978
979	980	981	982	983	984
985	986	987	988	989	990
991	992	993	994	995	996
997	998	999	1000	1001	1002
1003	1004	1005	1006	1007	1008
1009	1010	1011	1012	1013	1014
1015	1016	1017	1018	1019	1020
1021	1022	1023	1024	1025	1026
1027	1028	1029	1030	1031	1032
1033	1034	1035	1036	1037	1038
1039	1040	1041	1042	1043	1044
1045	1046	1047	1048	1049	1050
1051	1052	1053	1054	1055	1056
1057	1058	1059	1060	1061	1062
1063	1064	1065	1066	1067	1068
1069	1070	1071	1072	1073	1074
1075	1076	1077	1078	1079	1080
1081	1082	1083	1084	1085	1086
1087	1088	1089	1090	1091	1092
1093	1094	1095	1096	1097	1098
1099	1100	1101	1102	1103	1104
1105	1106	1107	1108	1109	1110
1111	1112	1113	1114	1115	1116
1117	1118	1119	1120	1121	1122
1123	1124	1125	1126	1127	1128
1129	1130	1131	1132	1133	1134
1135	1136	1137	1138	1139	1140
1141	1142	1143	1144	1145	1146
1147	1148	1149	1150	1151	1152
1153	1154	1155	1156	1157	1158
1159	1160	1161	1162	1163	1164
1165	1166	1167	1168	1169	1170
1171	1172	1173	1174	1175	1176
1177	1178	1179	1180	1181	1182
1183					


NO.	DESCRIPTION	PART NO.	QTY.
1	BEARING-BALL	-	1
2	BEARING-BALL, 2015	-	1
3	BEARING-BALL, 2015F	-	1
4	BEARING-BALL, 3105F	-	1
5	BEARING-BALL,2085	-	1
6	BEARING-BALL,2085F	-	1
7	BRACKET - BEARING, PSBH	-	1
8	CAP - BEARING, CENTER INPUT	-	1
9	CAP - BEARING, CENTER INPUT	-	1
10	CAP - BEARING, PTO DRIVE	-	1
11	CAP-BEARING, PS	-	1
12	COMP FLANGE - 1350/1410, 1.38"	-	1
13	GEAR - DRIVE, PSBH, 12DP, 14, 5PA	-	1
14	GEAR - IDLER, PSBH, 12DP, 14, 5PA	-	1
15	GEAR - PINION, PSBH, 12DP, 14, 5PA	-	1
16	GEARCASE - MOUNT 3 GP PTO	-	1
17	IMCS - .375-16 x 0.75, GR5	-	8
18	IMCS - .375-16 x 1.00, GR5	-	12
19	IMCS - .500-13 x 2.00, GR5	-	3
20	KEY - 50, 0.25 X 3.00 GR2	-	1
21	KEY - 50, 0.38 X 1.19	-	1
22	KEY - 50, 0.38 X 3.00	-	1
23	NUT - CABLE DRIVE, RHM, 0.104	-	1
24	NUT - FLANGE, 1/8"-14	-	1
25	O-RING - 3.50 X 3.69 X 0.69	-	2
26	O-RING - 5.00 X 5.25 X 0.12	-	3
27	OIL SEAL - 0.315 ID X 0.688 OD	-	1
28	OIL SEAL - 1.150 ID X 2.318 OD	-	1
29	PLUG - PIPE, 0.125, 2IN SDC HD	-	1
30	PLUG - PIPE, 0.315, 2IN SDC HD	-	1
31	PLUG - PIPE, 0.315, 2IN SDC HD	-	1
32	PLUG - TACH, 88-100MS	-	1
33	SHAFT - IDLER, PSBH	-	1
34	SHAFT - IMPELLER, PS	-	1
35	SHAFT-INPUT, PSBH	-	1
36	SPACER - 1.38 X 1.75 X .9055	-	1
37	SPACER - 1.57 X 2.00 X 0.69	-	1
38	SPACER - 1.58 X 2.00 X .8655	-	1
39	WASHER - LOCK, 0.500 ID	-	3

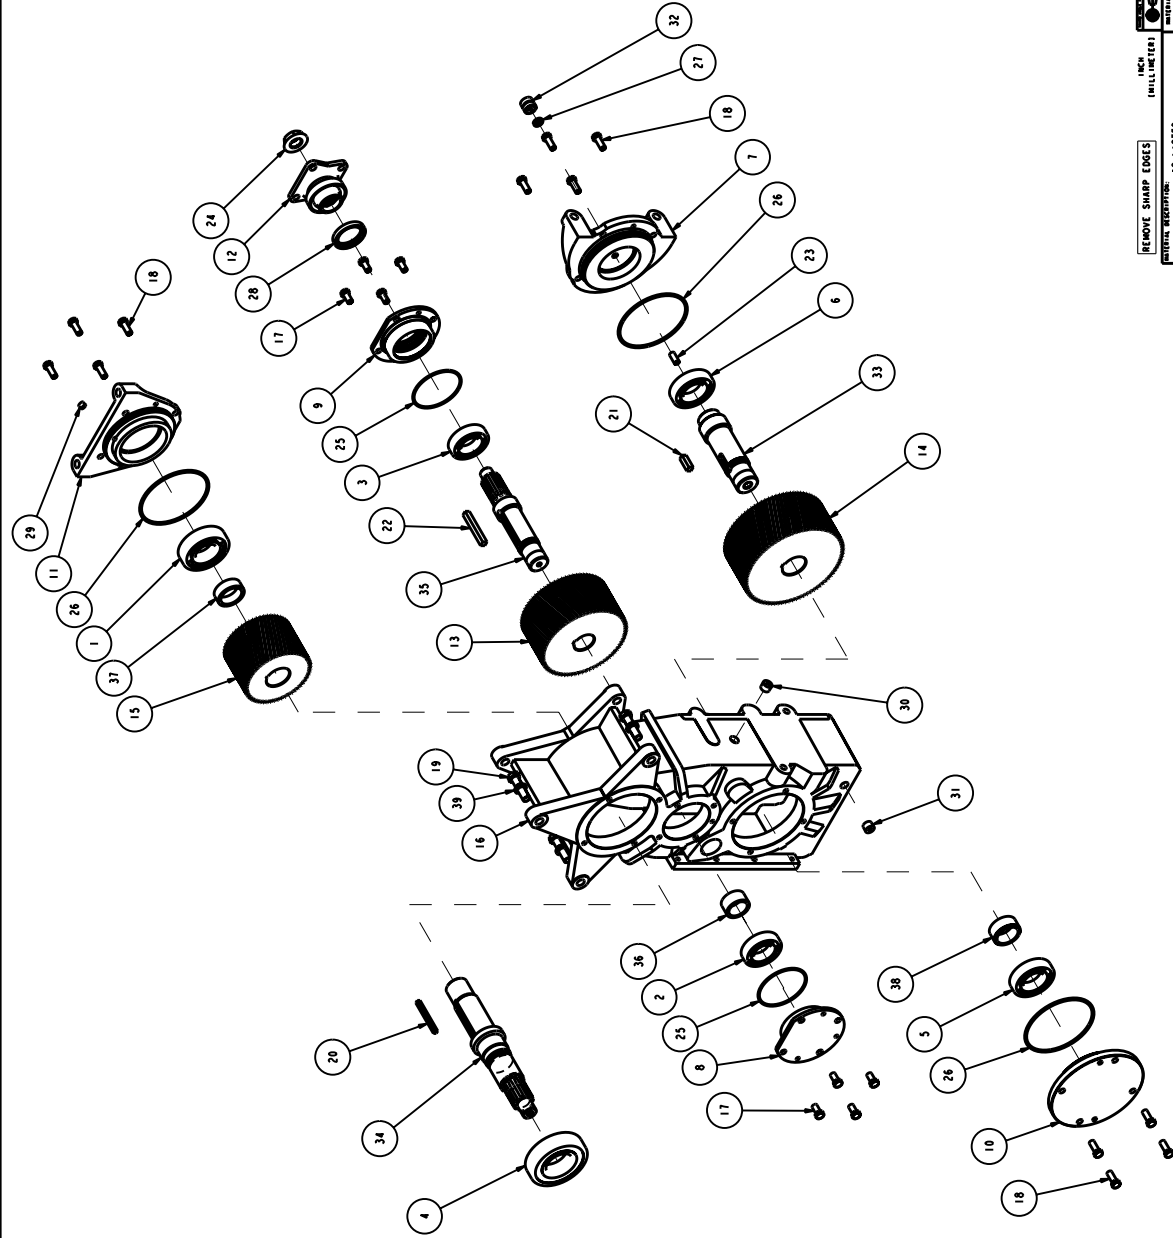


REV. LISTINGS		
LIB	DESCRIPTION	DATE

REV. NO.	REV. DATE	REV. BY	REV. DESCRIPTION
1	04/06/09	MWJ	INITIAL RELEASE
2	06/09/09	MWJ	REVISION 1
3	06/09/09	MWJ	REVISION 2
4	06/09/09	MWJ	REVISION 3
5	06/09/09	MWJ	REVISION 4
6	06/09/09	MWJ	REVISION 5
7	06/09/09	MWJ	REVISION 6
8	06/09/09	MWJ	REVISION 7
9	06/09/09	MWJ	REVISION 8
10	06/09/09	MWJ	REVISION 9
11	06/09/09	MWJ	REVISION 10
12	06/09/09	MWJ	REVISION 11
13	06/09/09	MWJ	REVISION 12
14	06/09/09	MWJ	REVISION 13
15	06/09/09	MWJ	REVISION 14
16	06/09/09	MWJ	REVISION 15
17	06/09/09	MWJ	REVISION 16
18	06/09/09	MWJ	REVISION 17
19	06/09/09	MWJ	REVISION 18
20	06/09/09	MWJ	REVISION 19
21	06/09/09	MWJ	REVISION 20
22	06/09/09	MWJ	REVISION 21
23	06/09/09	MWJ	REVISION 22
24	06/09/09	MWJ	REVISION 23
25	06/09/09	MWJ	REVISION 24
26	06/09/09	MWJ	REVISION 25
27	06/09/09	MWJ	REVISION 26
28	06/09/09	MWJ	REVISION 27
29	06/09/09	MWJ	REVISION 28
30	06/09/09	MWJ	REVISION 29
31	06/09/09	MWJ	REVISION 30
32	06/09/09	MWJ	REVISION 31
33	06/09/09	MWJ	REVISION 32
34	06/09/09	MWJ	REVISION 33
35	06/09/09	MWJ	REVISION 34
36	06/09/09	MWJ	REVISION 35
37	06/09/09	MWJ	REVISION 36
38	06/09/09	MWJ	REVISION 37
39	06/09/09	MWJ	REVISION 38
40	06/09/09	MWJ	REVISION 39
41	06/09/09	MWJ	REVISION 40
42	06/09/09	MWJ	REVISION 41
43	06/09/09	MWJ	REVISION 42
44	06/09/09	MWJ	REVISION 43
45	06/09/09	MWJ	REVISION 44
46	06/09/09	MWJ	REVISION 45
47	06/09/09	MWJ	REVISION 46
48	06/09/09	MWJ	REVISION 47
49	06/09/09	MWJ	REVISION 48
50	06/09/09	MWJ	REVISION 49
51	06/09/09	MWJ	REVISION 50
52	06/09/09	MWJ	REVISION 51
53	06/09/09	MWJ	REVISION 52
54	06/09/09	MWJ	REVISION 53
55	06/09/09	MWJ	REVISION 54
56	06/09/09	MWJ	REVISION 55
57	06/09/09	MWJ	REVISION 56
58	06/09/09	MWJ	REVISION 57
59	06/09/09	MWJ	REVISION 58
60	06/09/09	MWJ	REVISION 59
61	06/09/09	MWJ	REVISION 60
62	06/09/09	MWJ	REVISION 61
63	06/09/09	MWJ	REVISION 62
64	06/09/09	MWJ	REVISION 63
65	06/09/09	MWJ	REVISION 64
66	06/09/09	MWJ	REVISION 65
67	06/09/09	MWJ	REVISION 66
68	06/09/09	MWJ	REVISION 67
69	06/09/09	MWJ	REVISION 68
70	06/09/09	MWJ	REVISION 69
71	06/09/09	MWJ	REVISION 70
72	06/09/09	MWJ	REVISION 71
73	06/09/09	MWJ	REVISION 72
74	06/09/09	MWJ	REVISION 73
75	06/09/09	MWJ	REVISION 74
76	06/09/09	MWJ	REVISION 75
77	06/09/09	MWJ	REVISION 76
78	06/09/09	MWJ	REVISION 77
79	06/09/09	MWJ	REVISION 78
80	06/09/09	MWJ	REVISION 79
81	06/09/09	MWJ	REVISION 80
82	06/09/09	MWJ	REVISION 81
83	06/09/09	MWJ	REVISION 82
84	06/09/09	MWJ	REVISION 83
85	06/09/09	MWJ	REVISION 84
86	06/09/09	MWJ	REVISION 85
87	06/09/09	MWJ	REVISION 86
88	06/09/09	MWJ	REVISION 87
89	06/09/09	MWJ	REVISION 88
90	06/09/09	MWJ	REVISION 89
91	06/09/09	MWJ	REVISION 90
92	06/09/09	MWJ	REVISION 91
93	06/09/09	MWJ	REVISION 92
94	06/09/09	MWJ	REVISION 93
95	06/09/09	MWJ	REVISION 94
96	06/09/09	MWJ	REVISION 95
97	06/09/09	MWJ	REVISION 96
98	06/09/09	MWJ	REVISION 97
99	06/09/09	MWJ	REVISION 98
100	06/09/09	MWJ	REVISION 99
101	06/09/09	MWJ	REVISION 100
102	06/09/09	MWJ	REVISION 101
103	06/09/09	MWJ	REVISION 102
104	06/09/09	MWJ	REVISION 103
105	06/09/09	MWJ	REVISION 104
106	06/09/09	MWJ	REVISION 105
107	06/09/09	MWJ	REVISION 106
108	06/09/09	MWJ	REVISION 107
109	06/09/09	MWJ	REVISION 108
110	06/09/09	MWJ	REVISION 109
111	06/09/09	MWJ	REVISION 110
112	06/09/09	MWJ	REVISION 111
113	06/09/09	MWJ	REVISION 112
114	06/09/09	MWJ	REVISION 113
115	06/09/09	MWJ	REVISION 114
116	06/09/09	MWJ	REVISION 115
117	06/09/09	MWJ	REVISION 116
118	06/09/09	MWJ	REVISION 117
119	06/09/09	MWJ	REVISION 118
120	06/09/09	MWJ	REVISION 119
121	06/09/09	MWJ	REVISION 120
122	06/09/09	MWJ	REVISION 121
123	06/09/09	MWJ	REVISION 122
124	06/09/09	MWJ	REVISION 123
125	06/09/09	MWJ	REVISION 124
126	06/09/09	MWJ	REVISION 125
127	06/09/09	MWJ	REVISION 126
128	06/09/09	MWJ	REVISION 127
129	06/09/09	MWJ	REVISION 128
130	06/09/09	MWJ	REVISION 129
131	06/09/09	MWJ	REVISION 130
132	06/09/09	MWJ	REVISION 131
133	06/09/09	MWJ	REVISION 132
134	06/09/09	MWJ	REVISION 133
135	06/09/09	MWJ	REVISION 134
136	06/09/09	MWJ	REVISION 135
137	06/09/09	MWJ	REVISION 136
138	06/09/09	MWJ	REVISION 137
139	06/09/09	MWJ	REVISION 138
140	06/09/09	MWJ	REVISION 139
141	06/09/09	MWJ	REVISION 140
142	06/09/09	MWJ	REVISION 141
143	06/09/09	MWJ	REVISION 142
144	06/09/09	MWJ	REVISION 143
145	06/09/09	MWJ	REVISION 144
146	06/09/09	MWJ	REVISION 145
147	06/09/09	MWJ	REVISION 146
148	06/09/09	MWJ	REVISION 147
149	06/09/09	MWJ	REVISION 148
150	06/09/09	MWJ	REVISION 149
151	06/09/09	MWJ	REVISION 150
152	06/09/09	MWJ	REVISION 151
153	06/09/09	MWJ	REVISION 152
154	06/09/09	MWJ	REVISION 153
155	06/09/09	MWJ	REVISION 154
156	06/09/09	MWJ	REVISION 155
157	06/09/09	MWJ	REVISION 156
158	06/09/09	MWJ	REVISION 157
159	06/09/09	MWJ	REVISION 158
160	06/09/09	MWJ	REVISION 159
161	06/09/09	MWJ	REVISION 160
162	06/09/09	MWJ	REVISION 161
163	06/09/09	MWJ	REVISION 162
164	06/09/09	MWJ	REVISION 163
165	06/09/09	MWJ	REVISION 164
166	06/09/09	MWJ	REVISION 165
167	06/09/09	MWJ	REVISION 166
168	06/09/09	MWJ	REVISION 167
169	06/09/09	MWJ	REVISION 168
170	06/09/09	MWJ	REVISION 169
171	06/09/09	MWJ	REVISION 170
172	06/09/09	MWJ	REVISION 171
173	06/09/09	MWJ	REVISION 172
174	06/09/09	MWJ	REVISION 173
175	06/09/09	MWJ	REVISION 174
176	06/09/09	MWJ	REVISION 175
177	06/09/09	MWJ	REVISION 176
178	06/09/09	MWJ	REVISION 177
179	06/09/09	MWJ	REVISION 178
180	06/09/09	MWJ	REVISION 179
181	06/09/09	MWJ	REVISION 180
182	06/09/09	MWJ	REVISION 181
183	06/09/09	MWJ	REVISION 182
184	06/09/09	MWJ	REVISION 183
185	06/09/09	MWJ	REVISION 184
186	06/09/09	MWJ	REVISION 185
187	06/09/09	MWJ	REVISION 186
188	06/09/09	MWJ	REVISION 187
189	06/09/09	MWJ	REVISION 188
190	06/09/09	MWJ	REVISION 189
191	06/09/09	MWJ	REVISION 190
192	06/09/09	MWJ	REVISION 191
193	06/09/09	MWJ	REVISION 192
194	06/09/09	MWJ	REVISION 193
195	06/09/09	MWJ	REVISION 194
196	06/09/09	MWJ	REVISION 195
197	06/09/09	MWJ	REVISION 196
198	06/09/09	MWJ	REVISION 197
199	06/09/09	MWJ	REVISION 198
200	06/09/09	MWJ	REVISION 199
201	06/09/09	MWJ	REVISION 200
202	06/09/09	MWJ	REVISION 201
203	06/09/09	MWJ	REVISION 202
204	06/09/09	MWJ	REVISION 203
205	06/09/09	MWJ	REVISION 204
206	06/09/09	MWJ	REVISION 205
207	06/09/09	MWJ	REVISION 206
208	06/09/09	MWJ	REVISION 207
209	06/09/09	MWJ	REVISION 208
210	06/09/09	MWJ	REVISION 209
211	06/09/09	MWJ	REVISION 210
212	06/09/09	MWJ	REVISION 211
213	06/09/09	MWJ	REVISION 212
214	06/09/09	MWJ	REVISION 213
215	06/09/09	MWJ	REVISION 214
216	06/09/09	MWJ	REVISION 215
217	06/09/09	MWJ	REVISION 216
218	06/09/09	MWJ	REVISION 217
219	06/09/09	MWJ	REVISION 218
220	06/09/09	MWJ	REVISION 219
221	06/09/09	MWJ	REVISION 220
222	06/09/09	MWJ	REVISION 221
223	06/09/09	MWJ	REVISION 222
224	06/09/09	MWJ	REVISION 223
225	06/09/09	MWJ	REVISION 224
226	06/09/09	MWJ	REVISION 225
227	06/09/09	MWJ	REVISION 226
228	06/09/09	MWJ	REVISION 227
229	06/09/09	MWJ	REVISION 228
230	06/09/09	MWJ	REVISION 229
231	06/09/09	MWJ	REVISION 230
232	06/09/09	MWJ	REVISION 231
233	06/09/09	MWJ	REVISION 232
234	06/09/09	MWJ	REVISION 233
235	06/09/09	MWJ	REVISION 234
236	06/09/09	MWJ	REVISION 235
237	06/09/09	MWJ	REVISION 236
238	06/09/09	MWJ	REVISION 237
239	06/09/09	MWJ	REVISION 238
240	06/09/09	MWJ	REVISION 239
241	06/09/09	MWJ	REVISION 240
242	06/09/09	MWJ	REVISION 241
243	06/09/09	MWJ	REVISION 242





REVISIONS				
LTR	DESCRIPTION	DATE	CHG NO.	APPR'D

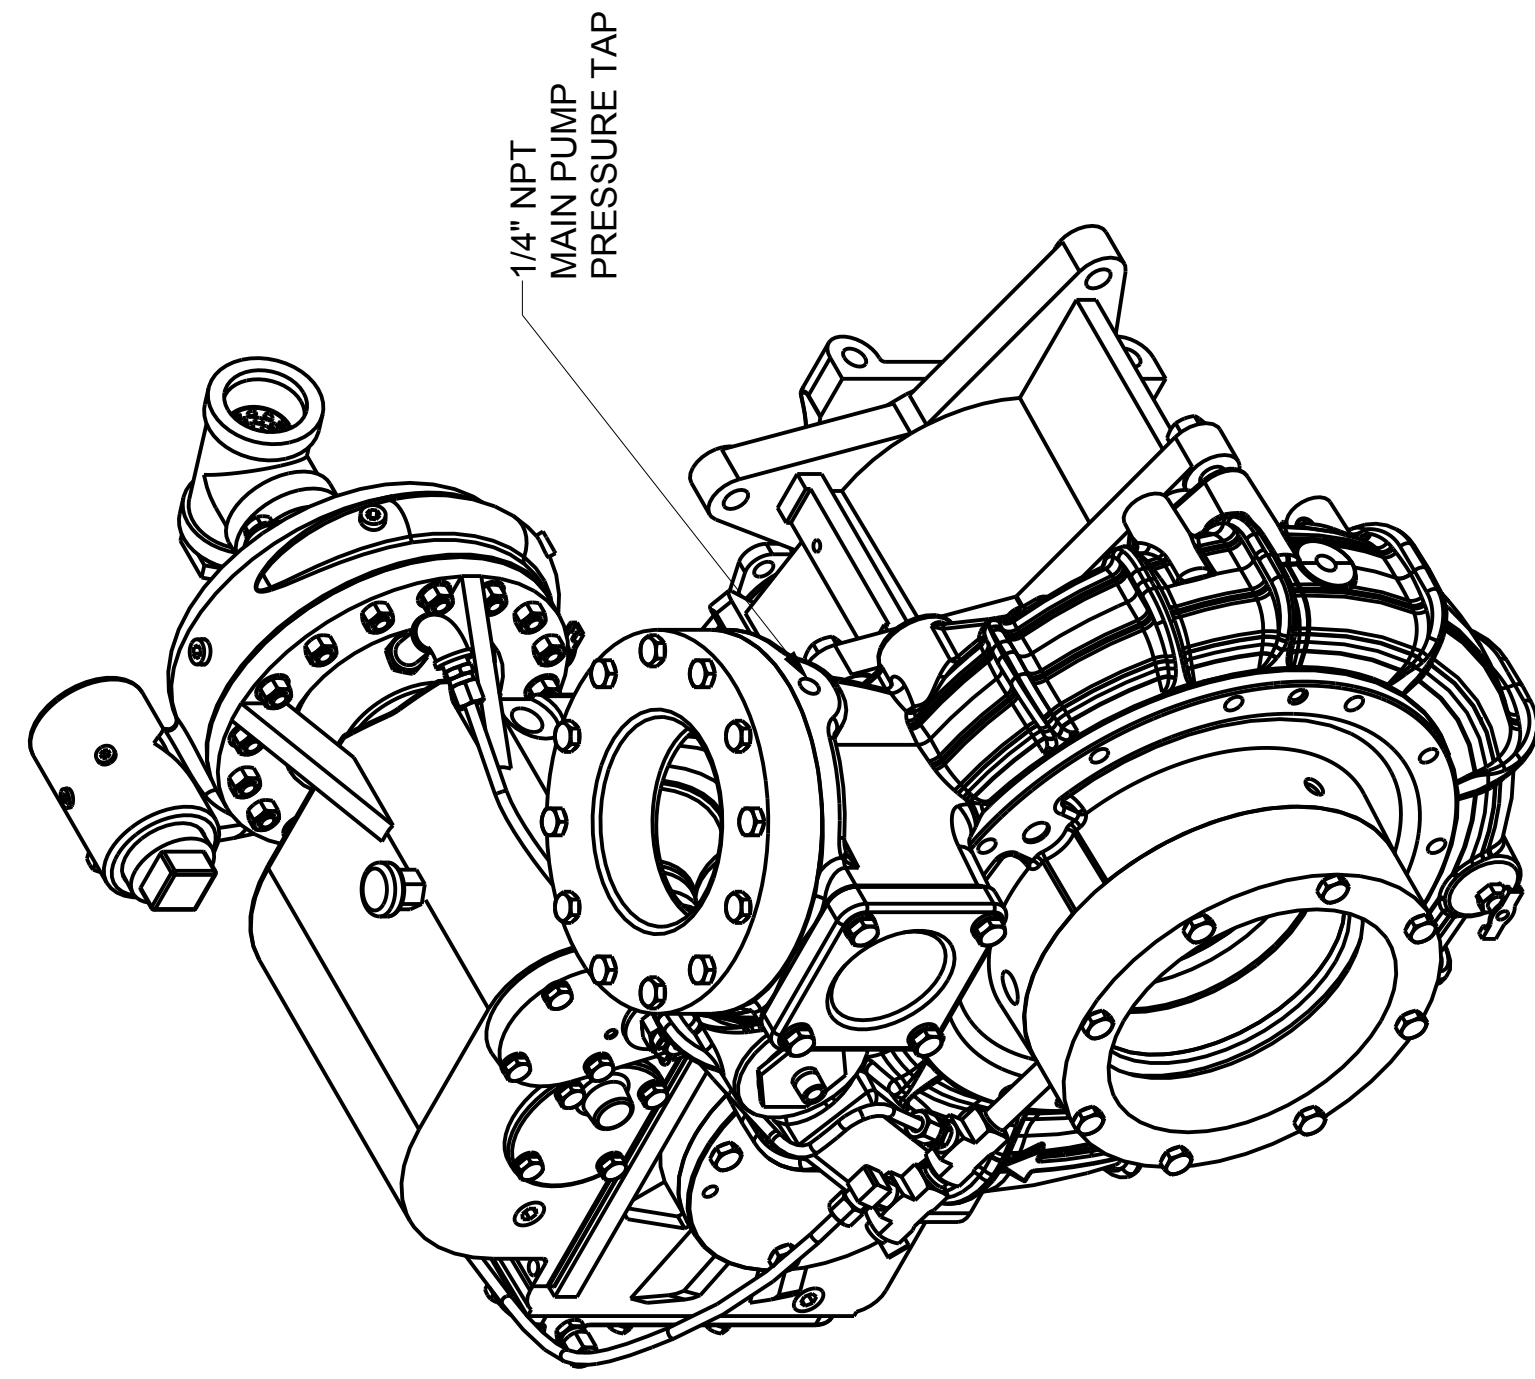

SCALE 1/4

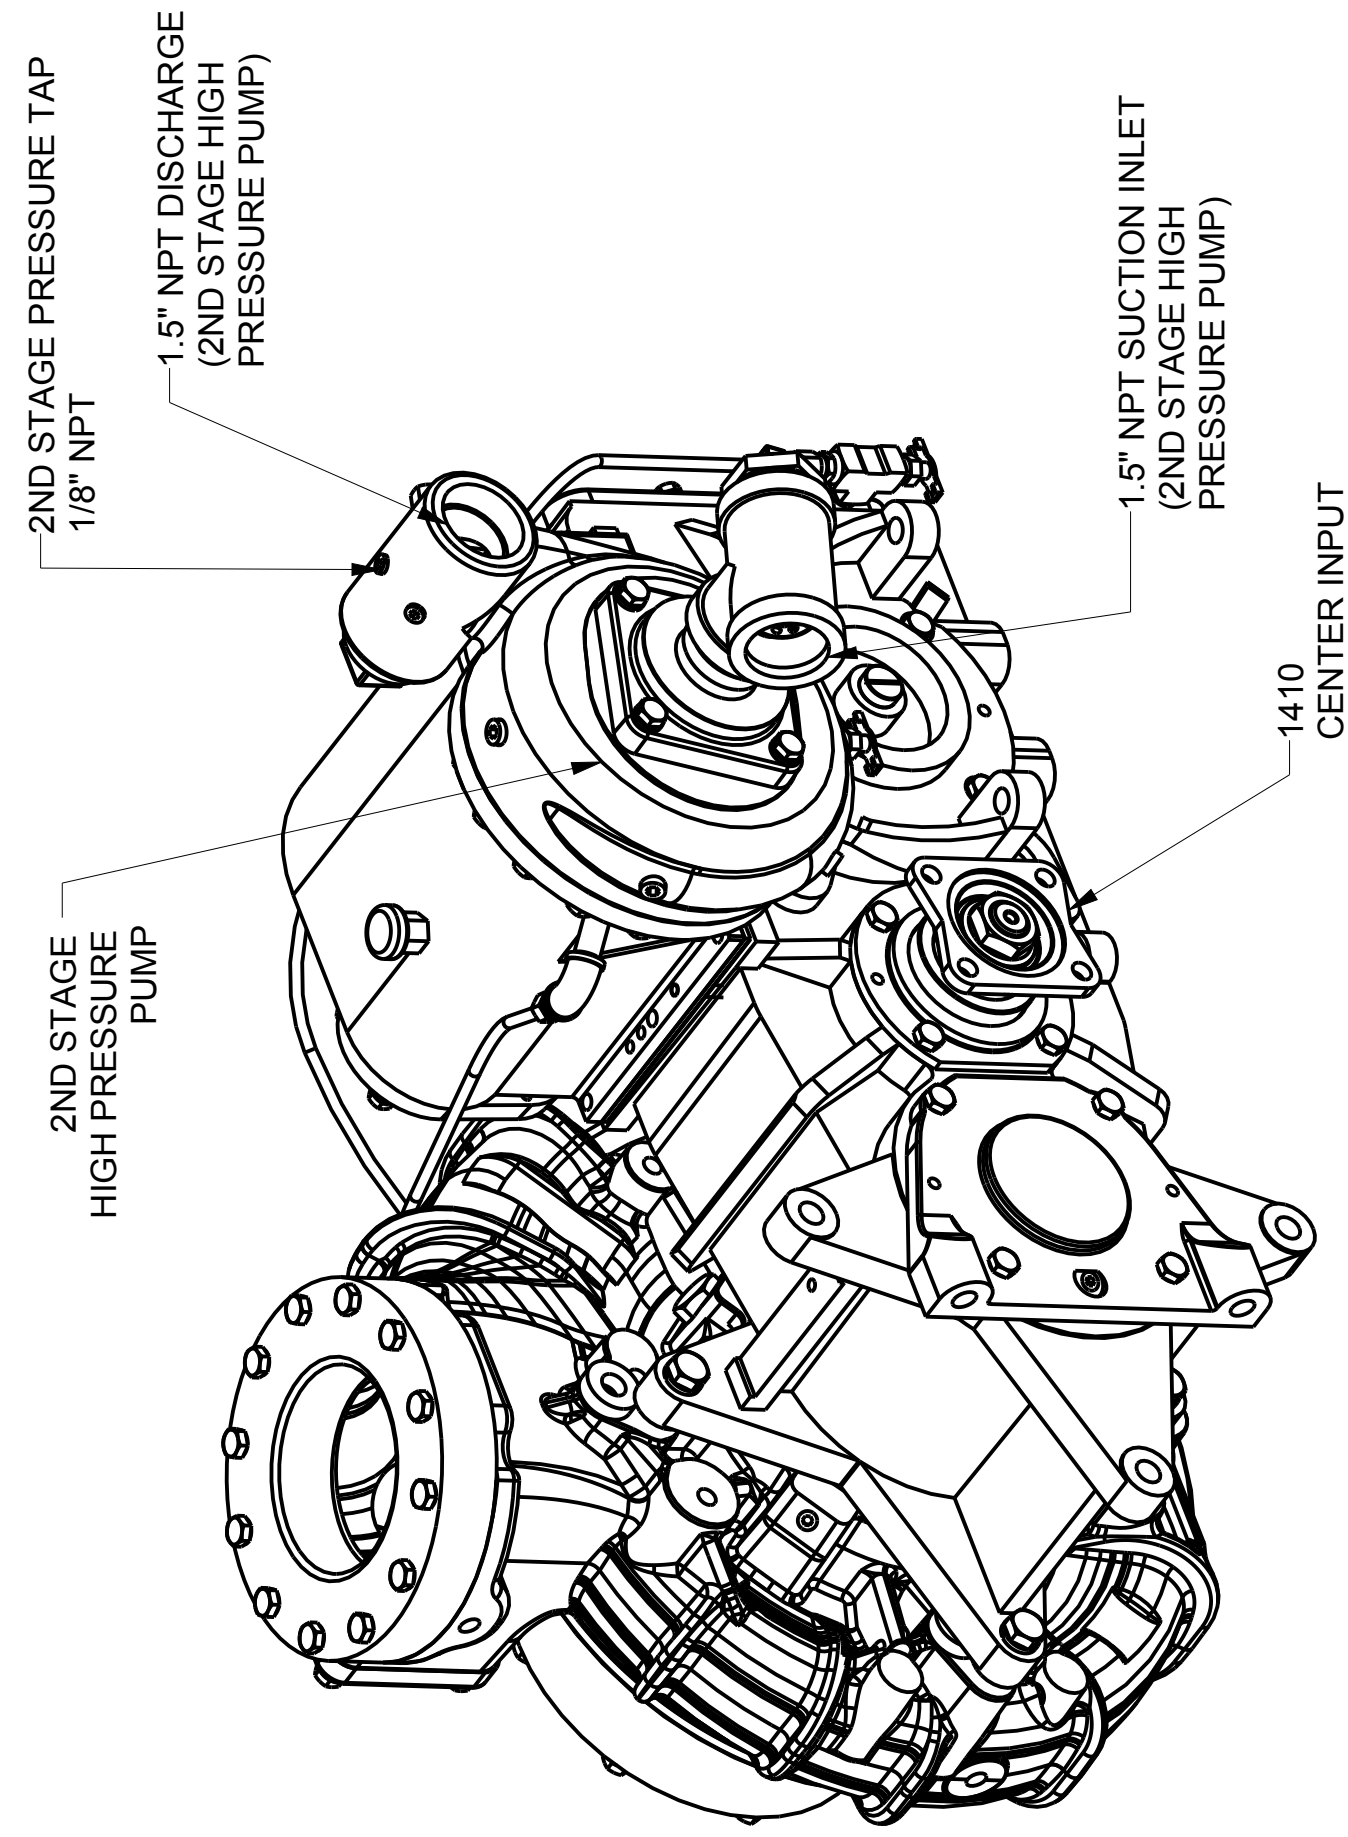

SCALE 1/4

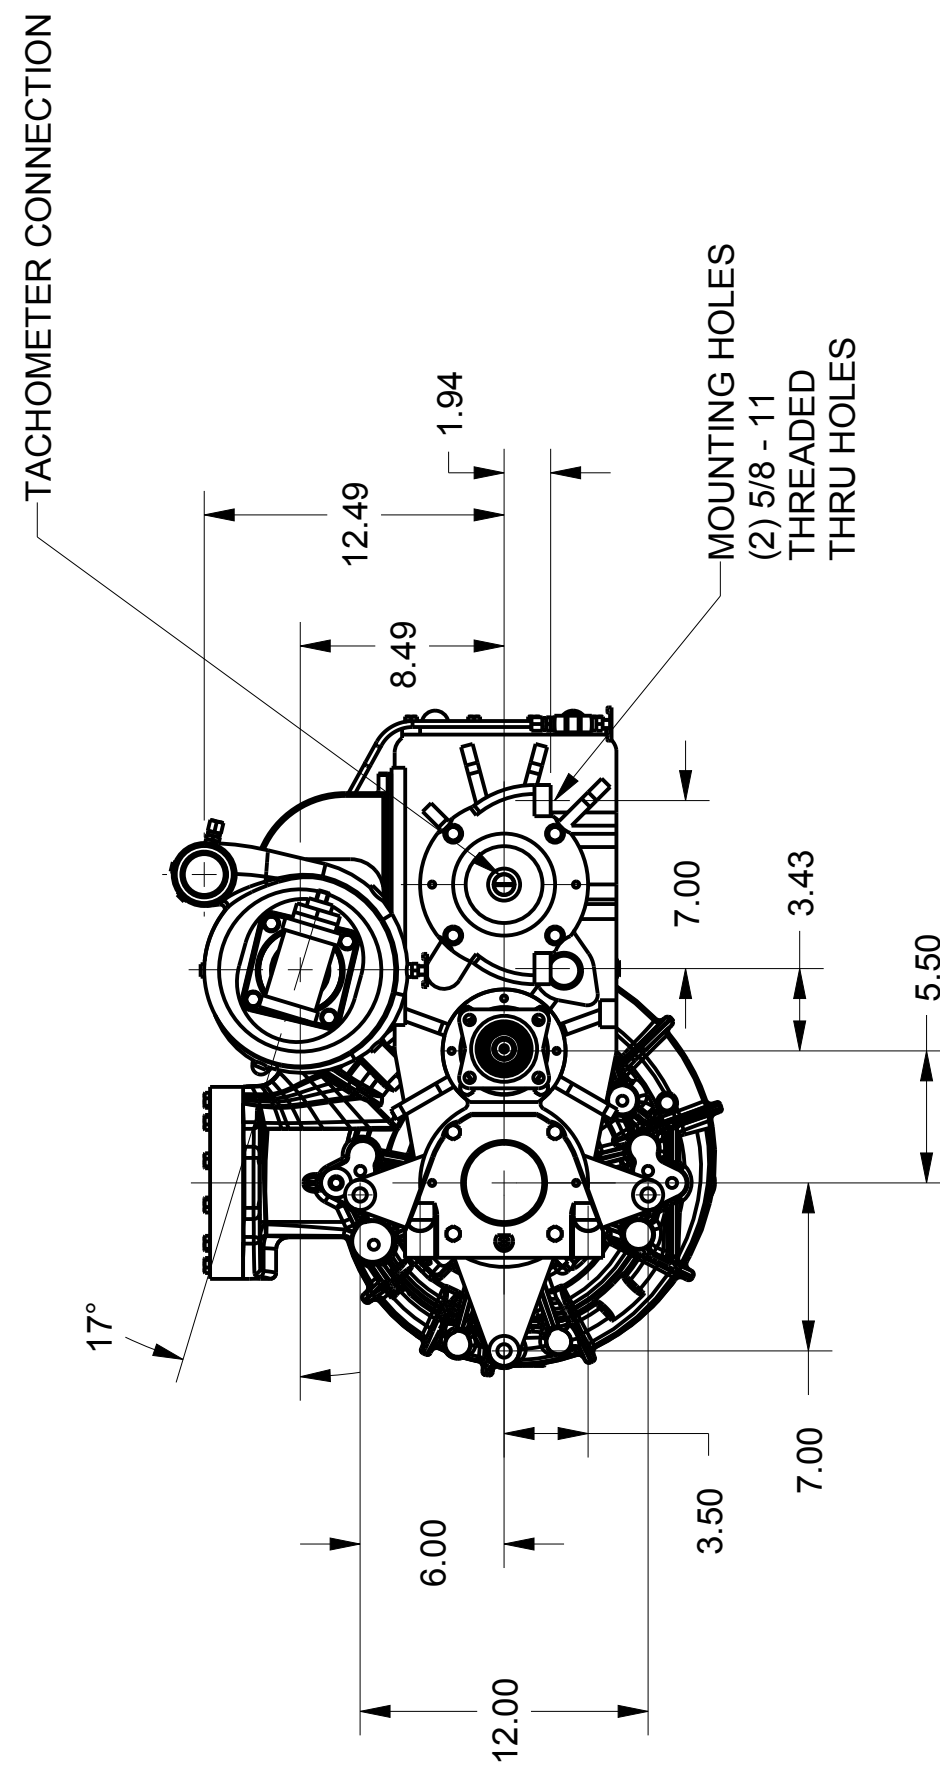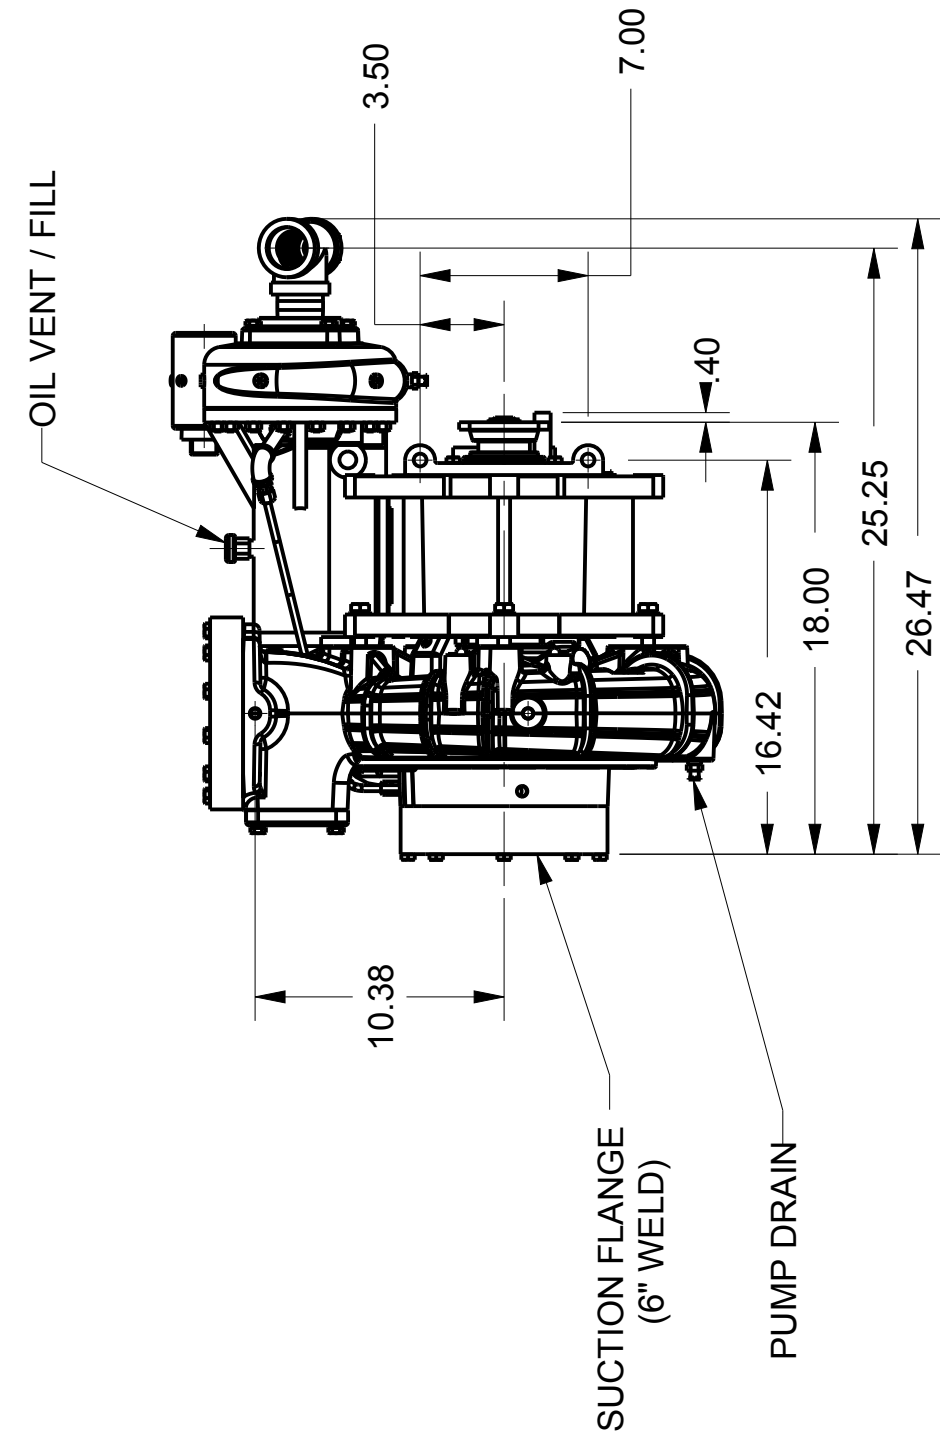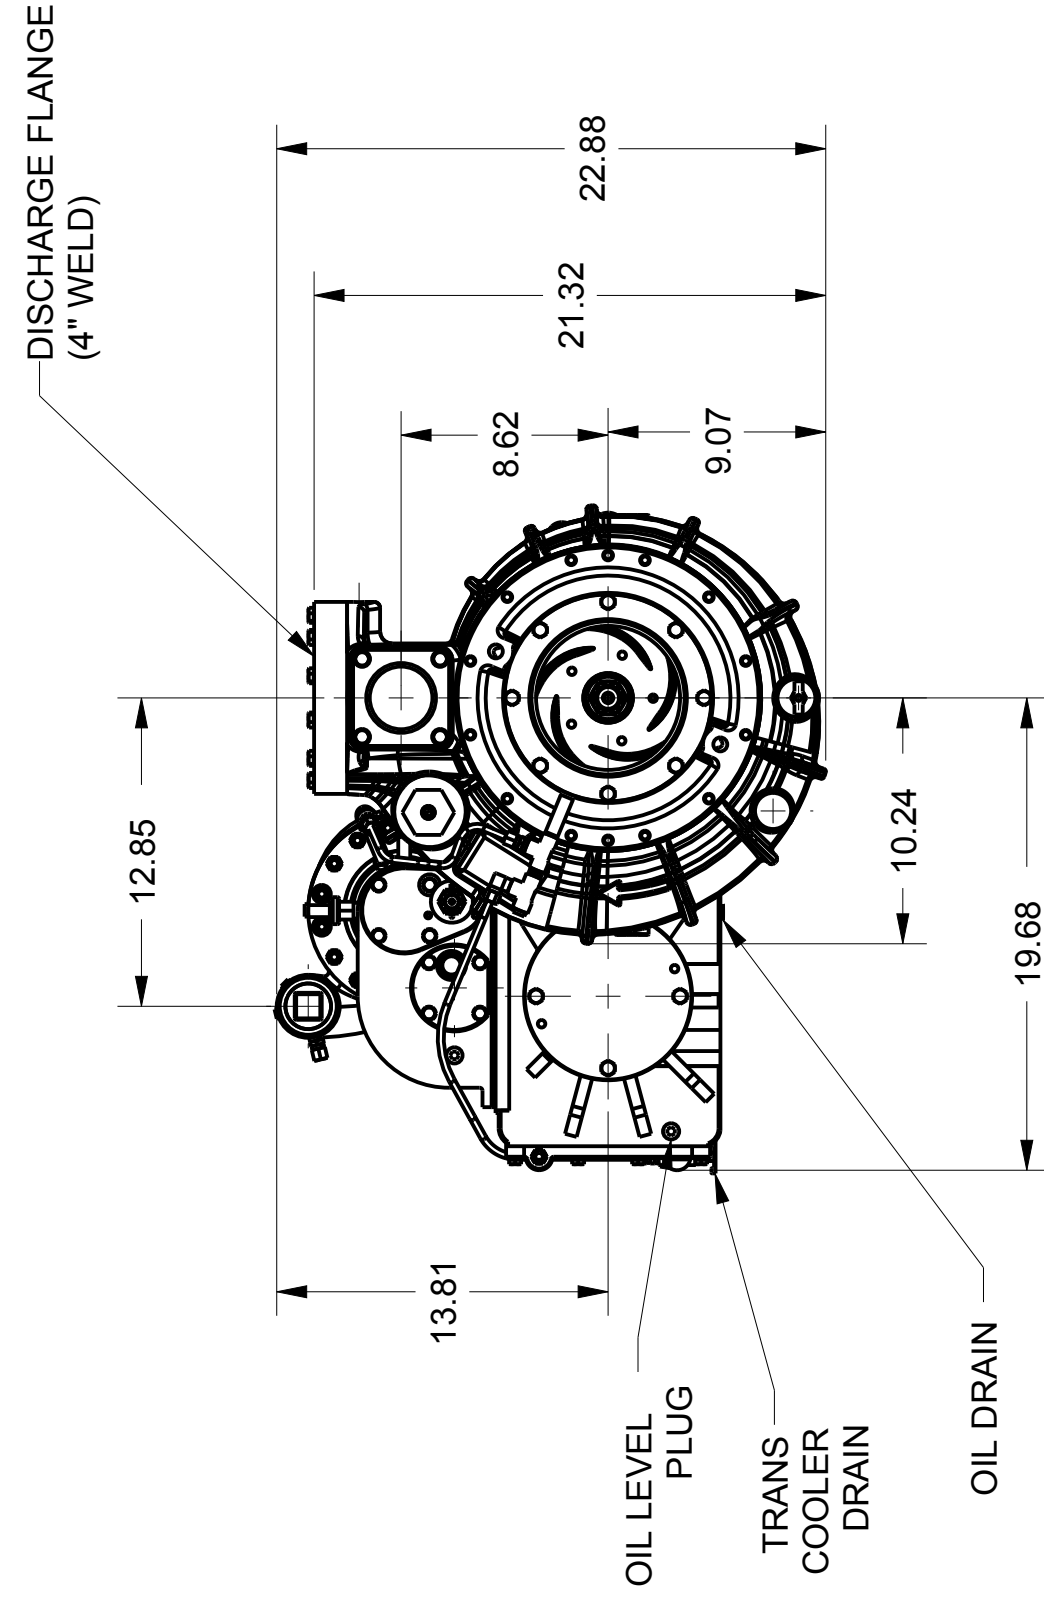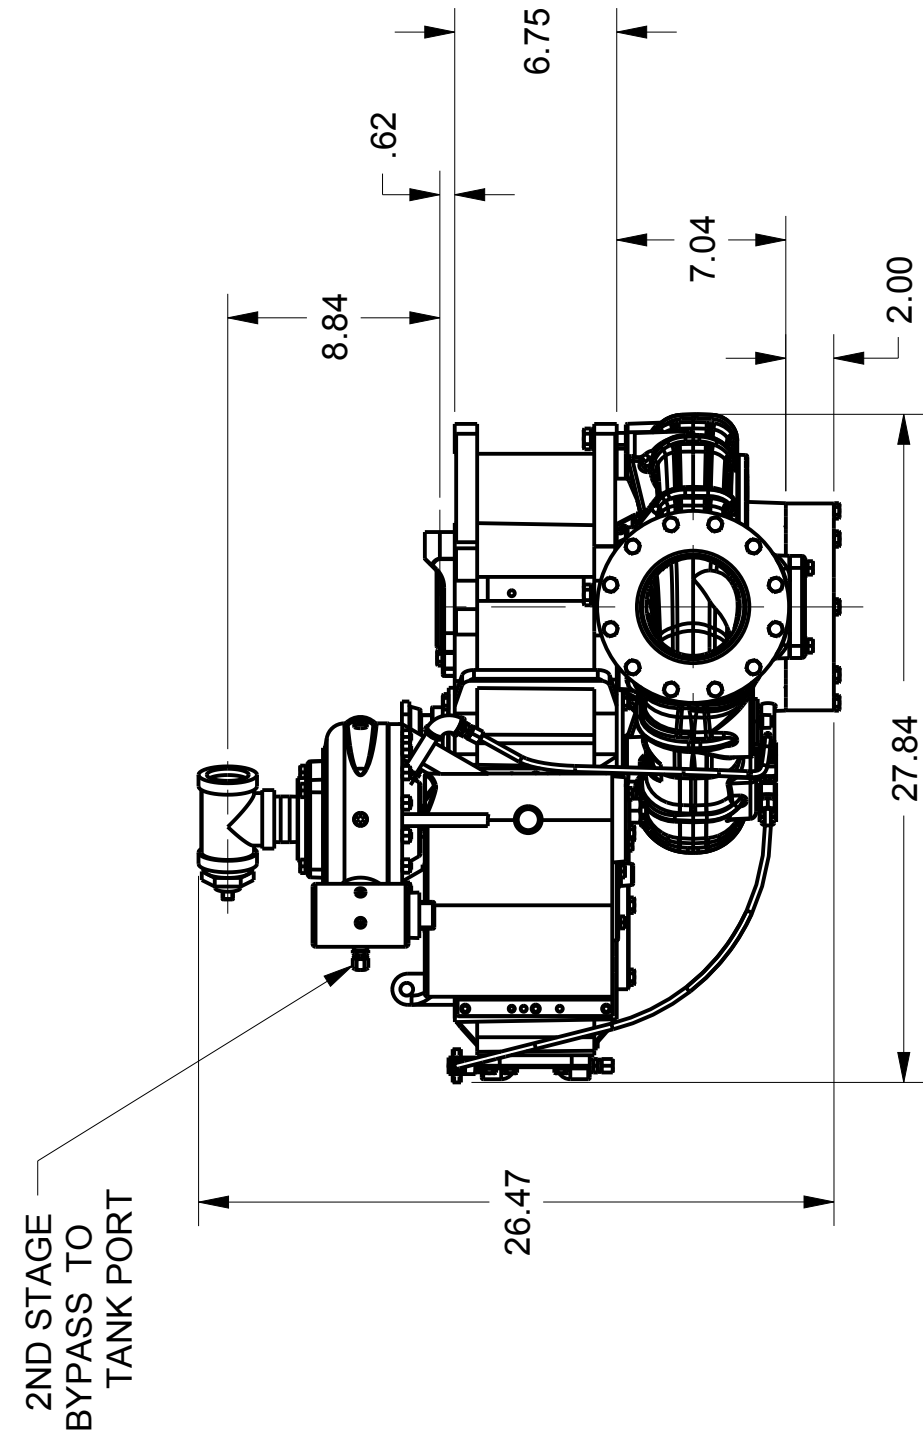

NOTE:

- 1.) 2ND STAGE HIGH PRESSURE PUMP MUST BE CONNECTED TO THE DISCHARGE OF THE FIRST STAGE PUMP BY A HYDRAULIC HOSE FOR PUMP TO OBTAIN MAXIMUM OPERATING CONDITIONS.
- 2.) THE APPROXIMATE WEIGHT IS 700 Lbs.

<div>REMOVE SHARP EDGES</div> <div>INCH</div> <div>[MILLIMETER]</div>	<div>MATERIAL DESCRIPTION</div> <div>AS LISTED</div>	<div> </div> <div>OLD PART NO.</div>		<div> </div> <div>PATTERN NO.</div>		<div> </div> <div>TOLERANCE</div>		<div> </div> <div>MODEL NAME</div>		<div> </div> <div>SHEET</div>	
		<div> </div> <div>ALL UNFINISHED IN</div>		<div> </div> <div>DATE</div>		<div> </div> <div>SCALE</div>		<div> </div> <div>DATE</div>		<div> </div> <div>SHEET</div>	
<div>THIS DESIGN IS THE PROPERTY OF</div> <div>W.S. DARLEY AND CO., UNAUTHORIZED</div>		<div>DO NOT SCALE PRINT</div>		<div> </div> <div>INCHES UNLESS NOTED</div>		<div> </div> <div>DATE</div>		<div> </div> <div>SCALE</div>		<div> </div> <div>DATE</div>	
<div>THIS DESIGN IS THE PROPERTY OF</div> <div>W.S. DARLEY & CO., UNAUTHORIZED</div>		<div>DO NOT SCALE PRINT</div>		<div> </div> <div>INCHES UNLESS NOTED</div>		<div> </div> <div>DATE</div>		<div> </div> <div>SCALE</div>		<div> </div> <div>DATE</div>	

DPD0804

Mechanical Shaft Seal

This pump assembly incorporates high quality mechanical shaft seal(s) separating the pump housing components from atmosphere. Depending on the pump design, there may be one or two seals on each impeller shaft.

The seal size, design type, component materials, and housing configuration have been specifically designed for this pump application and rated operating parameters.


Mechanical Seal Basics

A mechanical seal is a device that houses two highly polished components (known as faces). One face rotates, the other is stationary. A secondary elastomer bellows seals the primary ring to the shaft. An o-ring or cup seal seals the mating ring in the housing. The polished seal faces of the primary and mating rings are pressed together by a spring mechanism to provide adequate force to affect a seal. The force acting between the seal faces increases in direct proportion to product pressure.

The elastomer bellows seal utilized in this pump has the following design features:

- Mechanical drive of the primary seal ring. The drive band's notch design eliminates overstressing the elastomer sealing bellows.
- Bellows design provides automatic compensation for shaft endplay, run out, and primary ring wear.
- Seal face contact pressure is controlled by a single, non-clogging coil spring. This coil spring has been custom welded per Darley specifications to eliminate high-speed spring distortion.

The seal housing is designed and ported to provide optimal water flow and pressure assuring proper cooling and flushing of the seal components.

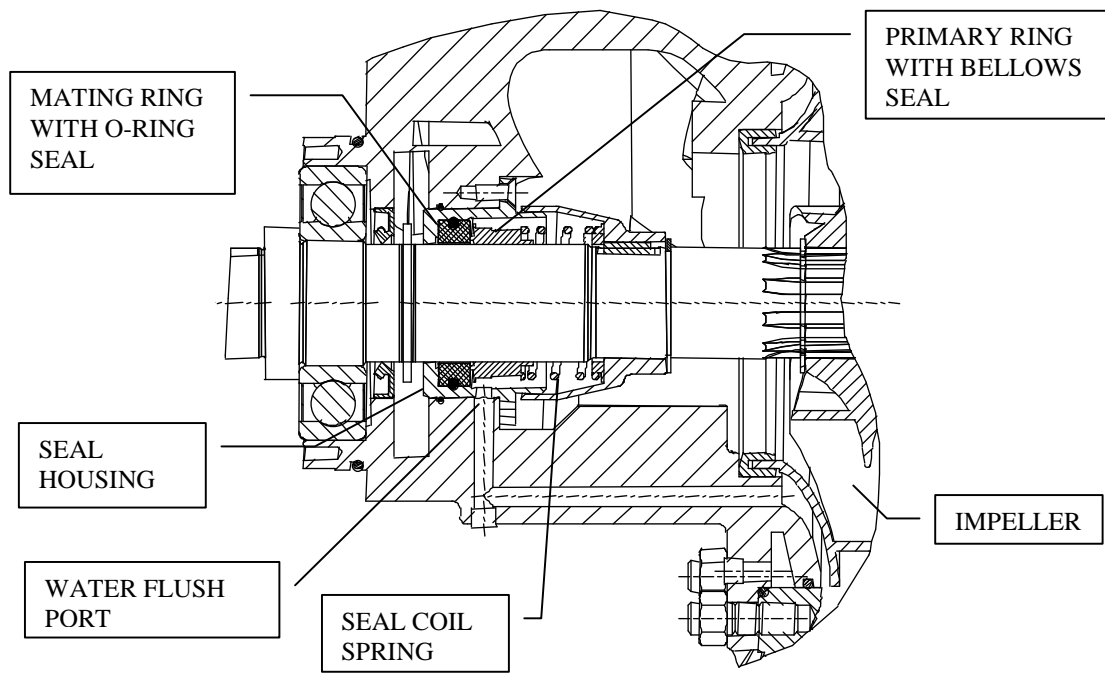

Operation and Maintenance

When operated within rated operating conditions of this pump, these seals will provide trouble free service for extended periods.

Properly selected and applied mechanical shaft seals are leak free and require no adjustment. Should the seal area develop a leak, investigate the cause as soon as possible. Seal failure, leakage, may be the result of; worn seal faces, leaking bellows, or damaged o-rings. These failures may be attributed to bearing failure, impeller blockage, impeller imbalance, seal housing contamination, operating beyond pump design rating, or dry running,

Mechanical shaft seal design relies on the sealed media, in this case, water, to cool and lubricate the sealing surfaces. Therefore, extended dry operation may cause overheating and scoring or damage to the sealing surfaces, resulting in excessive leakage or a much shortened seal life.

To maximize seal life, minimize operation at pump pressures higher than pump rating. While operating at pressures beyond rating will not immediately damage the seal, it will increase sealing surface wear rate.



CAUTION: DO NOT RUN THE PUMP DRY EXCEPT MOMENTARILY AND AT LOW SPEEDS



CAUTION: DO NOT USE THIS PUMP FOR HOSE TESTING



CAUTION: THE MECHANICAL SEAL SHOULD NOT BE RUN DRY, WHILE THE PUMP IS NOT ENTRAINED WITH WATER, FOR A PERIOD LONGER THAN 2 MINUTES. FAILURE TO FOLLOW THIS RECOMMENDATION WILL LEAD TO PREMATURE WEAR AND FAILURE OF YOUR MECHANICAL SHAFT SEAL.



DARLEY

INSTALLATION OF MECHANICAL FACE SEAL WITH O'RING


SPECIAL HANDLING

Study the engineering layout before installing the seal. This shaft seal is a precision product and should be handled and treated with care. Take special care to prevent scratches on the lapped faces of the primary and mating ring. Provide a very clean work area where the assembly will take place. Clean hands prior to assembly.


INSTRUCTION STEPS:

Instructions for Installing a Mechanical Shaft Seal

1. Inspect mating ring pocket in seal housing ensuring it is clean, free of chips, and nick free, to provide a proper sealing surface. Isopropyl alcohol may be used to clean the surfaces if required.

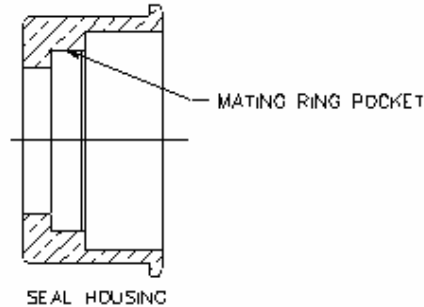




2. Inspect the pump shaft surface under the bellows, ensuring it is clean and nick free to provide a proper sealing surface. Isopropyl alcohol may be used to clean surface if required.

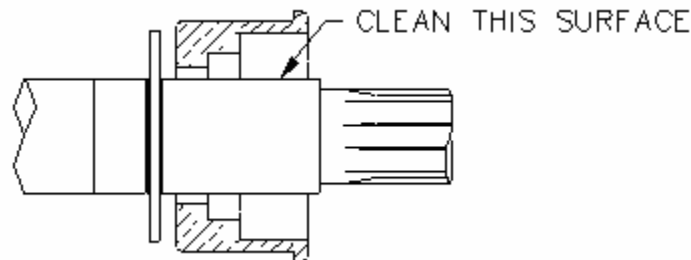

3. Lightly lubricate the o-ring on the mating ring with a single drop of P-80 water soluble rubber lubricant (do not over lubricate) and push it into the cavity using the recommended installation tool or other suitable plastic tube free of contaminants, firmly seating the mating ring square.

Note: The polished face of the mating ring must face out – away from the pump's gear case. Try to not touch the polished sealing face with your fingers; the oils from your fingerprint can cause the seal to leak. Remove any P-80 from the sealing face after installation.

 The approximate size of a drop should be between the sizes of these two circles.

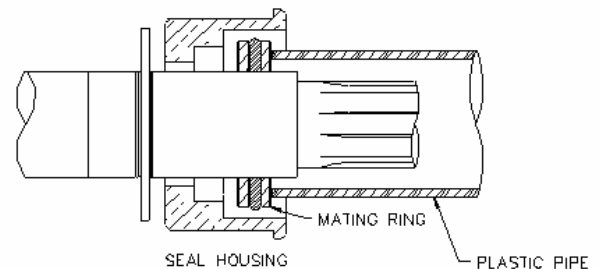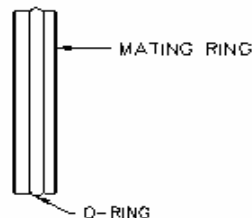



4. Clean the mating ring surface with isopropyl alcohol to remove any fingerprints and any other contaminants left on mating ring.


Note: Steps 5 – 9 need to all be completed with in 15 minutes or less.

5. Apply a small drop of P-80 rubber lubricant or water-soluble lubricant (not soapy water) to the inside diameter of the bellows assembly allowing it to be pushed easily into position.
6. Clean the polished sealing face of the primary ring with a clean lint free rag with isopropyl alcohol to remove all fingerprints and other contaminants.
7. Slide a seal save, similar to X6550, over the shaft splines to ensure that the seal is not damaged during installation. Place the primary ring and lubricated bellows assembly (without the spring) on the shaft, using a proper pusher - push the assembly into position so that the seal surfaces are in contact. Remove the seal save from the shaft.

 The approximate size of a drop should be between the sizes of these two circles.

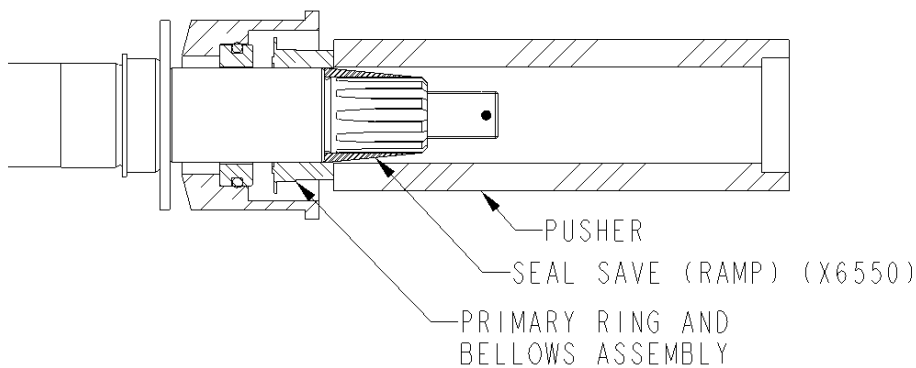

8. Put the spring in place, seated tight against the spring retainer on the primary ring.
Note: Some springs may be slightly tapered, so one end fits the seal better than the other. The end of the spring that best fits the seal should go towards the seal to ensure even spring pressure all the way around.
9. Slide impeller onto impeller shaft, engage the spring into the groove of the impeller hub and install impeller washer, impeller nut, and stainless steel cotter key.

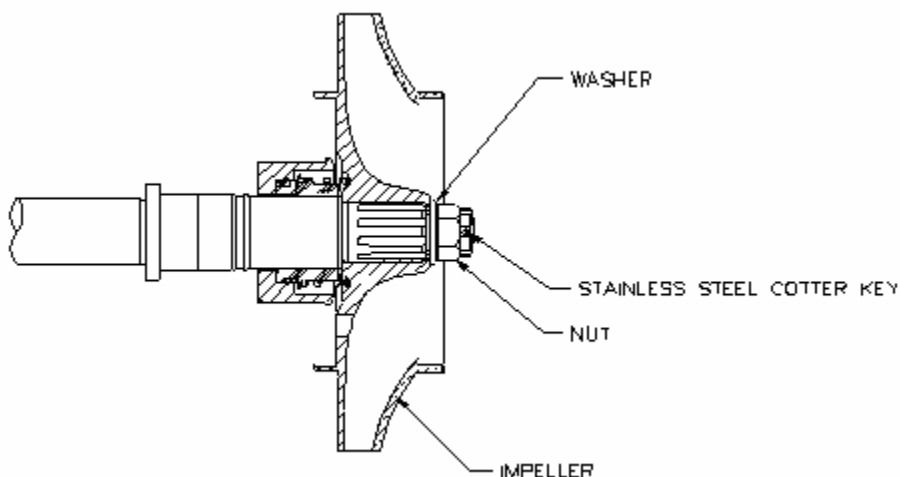

*** Reference pump configuration for individual mechanical seal instructions.*

*** Reference pump assembly drawings and pump assembly tips for further assembly.*

Note: If the seal leaks slightly after assembly, it may be necessary to run the pump for approximately 30 minutes at 50-60 psi to rinse out excess lubricant and other contaminants.

Once a mechanical seal has been installed, it is recommended that it not be reused.

If further information is needed, call **DARLEY** in Chippewa Falls, WI. at 800-634-7812 or 715-726-2650



W. S. DARLEY & CO.

DARLEY INJECTION TYPE STUFFING BOX ADJUSTMENT

⚠ Prop 65 Warning: This product contains lead, a chemical known to the State of California to cause cancer, birth defects, and other reproductive harm. Wash hands after handling.

⚠ Attention: Prop 65 Warning does not apply to white packing, which does not contain lead.

⚠ Caution: Do not attempt to use anything but Darley injection packing. Using the wrong packing material in your pump may cause catastrophic failure of the pump shaft sealing components.

Only use W.S. Darley & Co.'s plastallic injection packing material. It is made of a special composition of shredded fibers, and a special bonding and lubricating compound.

It is important that the stuffing box is completely filled solid with packing and compressed firm during adjustment to prevent formation of voids and excessive leakage.

To pack the stuffing box when empty and assembled in the pump, remove the packing screw and nut assembly, and insert pellet form packing into the packing plunger guide. Replace the packing screw assembly and use a hand speed wrench to force the pellets into the gland. **DO NOT USE A POWER TOOL!** Repeat pellet additions while turning the impeller shaft by hand until resistance to turning is felt when the stuffing box is almost full. Continue turning packing screw by hand using a standard 6" long 9/16" end wrench until 4 lb. of force is felt at the end of the wrench. This is equivalent to 2 ft-lb or 24 in-lb torque. Continue turning until a few flakes of packing are extruded out the opening between the impeller shaft and the stuffing box hole. The gland is now ready for pressure testing or pumping.

After priming the pump with water, start the pump and raise the discharge pressure to 50 psi. Tighten the packing screw using a 6" long 9/16" end wrench until 4 lb. force is felt at the end of the wrench (24 in-lb torque). Continue operating the pump at 50 psi for 5 minutes to dissipate packing pressure against the shaft and permit cooling water to flow between the shaft and stuffing box hole. Make sure that water actually does come through before operating pump at any higher pressure. The normal drip rate may vary between 5 and 60 drops per minute.



Operate the pump for 10 minutes at the highest normal operating pressure flowing sufficient water to prevent overheating. Do not run the pump blocked tight. Lower discharge pressure to 50 psi and repeat the packing screw tightening procedure outlined above.

The pump may now be operated for any time period required within its rated capacity. However, the drip rate should be monitored more frequently during the first few hours, and adjusted if necessary to achieve a stable flow rate. Several more adjustments may be required.



For a list of approximate quantity of packing pellets required by model (completely repacked), see below:

Model	Approximate # Packing Pellets
A	6
2BE	6
EM	15
H	8
JM	8
KD	10
KS	8
LD	15
LS	9
P	10
U2	5
U4	10

If further information is needed, call **W.S. DARLEY & CO.**
at Chippewa Falls, WI. at 800-634-7812 or 715-726-2650

SUMMARY OF THINGS TO REMEMBER

1. Always shift pump clutches with engine clutch disengaged.
2. Do not clash clutch gears when shifting.
3. Close booster valves, drain valves, cooling line and third stage discharge valve before attempting to prime the pump.
4. Always keep primer shut-off valve closed, except while priming.
5. Re-open and close primer valve to re-prime or eliminate trapped air from suction line.
6. Always drive a midship mounted split-shaft pump with truck transmission in the gear recommended by the chassis manufacturer.
7. Never run the pump without water in it except momentarily while priming.
8. Accelerate and retard speed of engine gradually.
9. Watch the engine temperature, and start the cooling water at the first signs of overheating.
10. Keep good gaskets in suction hoses, and handle carefully to avoid damage to coupling threads.
11. Air leakage into suction lines is the most frequent source of trouble when pumping from a suction lift (draft).
12. Always use a suction strainer when pumping from draft, and a hydrant strainer when pumping from a hydrant.
13. Foreign matter in impellers is a result of failure to use adequate strainers and is a common source of trouble.
14. Drain pump immediately after each run. This is especially critical in freezing conditions.
15. Do not run the pump long with discharge completely shut off.
16. Do not close a "Shutoff" nozzle when pumping with motor throttle wide open, unless relief valve or pressure regulator is set for the correct pressure.
17. Keep the pump gear case filled with oil to the level of the oil level plug/dipstick.
18. Check oil level in the pump transmission after every 25 hours of operation or 3 months, and changed it after every 50 hours of operation or 6 months.
19. In such equipped transmissions, once the oil is drained, remove the strainer screen oil sump fitting and thoroughly cleanse in a parts washer or with isopropyl alcohol, ensuring any debris is washed away.
20. If pump is equipped with a Darley plastallic (injection) packing shaft seal, check the drip rate frequently, and adjust according to the packing adjustment instruction, as required. The drip rate may vary between 5 and 60 drops per minute.
21. Work all suction and discharge valves often to ensure free and easy operation.

OPERATION OF OPTIONAL HIGH PRESSURE STAGE

The sliding gear clutch which drives the optional high pressure stage is operated by a shift lever marked "FOG" for pumping position, and "OUT" for disengaged position. The shift lever must be locked in one or the other of these positions before the pump can be started.

The high pressure stage clutch must not be shifted while the main pump is running.

When the main pump is in operation, it must always be stopped (engine clutch disengaged) for shifting of the high pressure stage clutch either in or out.


The high pressure stage is always primed by pressure from the main pump.

The high pressure stage has a small by-pass line with a valve to the booster tank. Open the by-pass valve when running with the high pressure stage discharge lines completely shut off.

HIGH PRESSURE BOOSTER PUMP DRAWING DLC0104

Rep. No.	Name of Part	Qty	Rep. No.	Name of Part	Qty
1	Inlet Pipe	1	26	Pipe Plug	1
2	Cotter Pin	1	27	Stainer Fitting	1
3	Impeller Pin	1	28	Inlet Tee	1
4	Flange O-ring	1	29	Close Nipple	1
5	Impeller Washer	1	30	Inlet Flange	1
6	Impeller Spacer	1	31	Seal Ring	1
7	Stuffing Box Head	1	32	Pump Casing	1
8	Pump Packing	10	33	Impeller	1
9	Water Slinger	1	34	Pump Casing Gasket	1
10	Impeller Shaft Oil Seal	1	35	Stuffing Box Gasket	1
11	Packing Cylinder	1	36	Idler Shaft Bearing	2
12	Gland Stud Piston	1	37	Shift Bar Oil Seal	1
13	Gland Nut	1	38	Gearcase Gasket	2
14	Packing Screw	1	39	Idler Shaft Spacer	1
15	Impeller Shaft Bearing	1	40	Idler Shaft	1
16	Impeller Shaft	1	41	Alignment Pin	2
17	Shift Collar	1	42	Idler Gear	1
18	Pump Drive Pinion	1	43	Gearcase Spacer	1
19	Gear Case	1	44	Idler Gear Key	1
20	Pinion Spacer	1	45	Oil Level & Fill plug	1
21	Impeller Shaft Bearing	1	46	Bearing Cap	1
22	Bearing Cap Gasket	2	47	Shift Bar O-ring	1
23	Bearing Cap	1	48	Shift Bar	1
24	Retaining Ring	2	49	Retaining Ring	2
25	Strainer Sleeve	1			

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

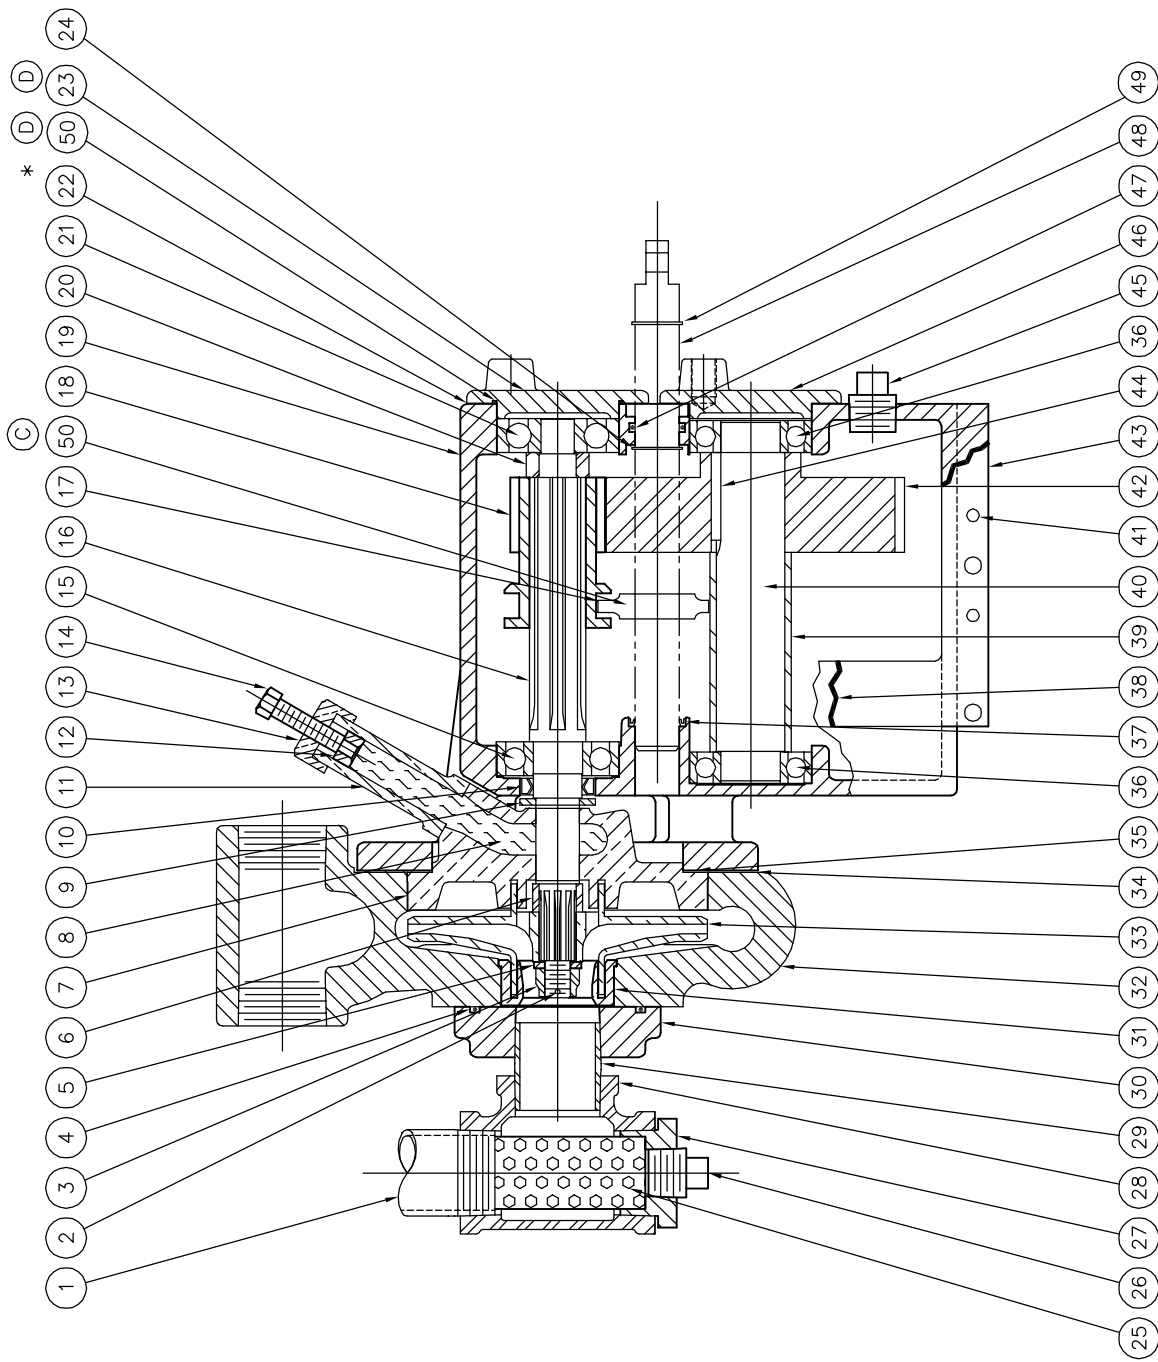

(D) REPL 2302600 W/ 2302604 AND 3601007 23SEP05 2005-285 CKE
 (C) 2002-134 SHCS ADDED 09SEP02 JSS
 * GASKET REMOVED 5/94
 (49) ADDED 3-23-90

TOLERANCE EXCEPT AS NOTED		W.S. DARLEY & CO. MELROSE PARK, IL - CHIPPEWA FALLS, WI	
FINISH	AS NOTED	DWG	- LDM SECOND STAGE
0.001 ±0.01	0.001 ±0.01	CROSS	SECTION PUMP ASSY
0.002 ±0.005	0.002 ±0.005	DATE	AUG28,89
ANGLES ±1°	ANGLES ±1°	DRN	S. LEE
CHKD	TRCD	SCALE	1/2



OLD PART NO.
 L88
 DO NOT SCALE PRINT

ALL DIMENSIONS IN
 INCHES UNLESS NOTED
 THIS DESIGN IS THE PROPERTY OF
 W.S. DARLEY AND CO. - UNAUTHORIZED
 REPRODUCTION IS PROHIBITED

DLC0104

PTO Safety Information

These instructions are for your safety and the safety of the end user. Read them carefully until you understand them.

General Safety Information

To prevent injury to yourself and/or damage to the equipment:

- Read carefully all owner's manuals, service manuals, and/or other instructions.
- Always follow proper procedures, and use proper tools and safety equipment.
- Be sure to receive proper training.
- Never work alone while under a vehicle or while repairing or maintaining equipment.
- Always use proper components in applications for which they are approved.
- Be sure to assemble components properly.
- Never use worn-out or damaged components.
- Always block any raised or moving device that may injure a person working on or under a vehicle.
- Never operate the controls of the Power Take-Off or other driven equipment from any position that could result in getting caught in the moving machinery.

Proper Matching of P.T.O.



WARNING: A Power Take-Off must be properly matched to the vehicle transmission and to the auxiliary equipment being powered. An improperly matched Power Take-Off could cause severe damage to the vehicle transmission, the auxiliary driveshaft, and/or to the auxiliary equipment being powered. **Damaged components or equipment could malfunction causing serious personal injury to the vehicle operator or to others nearby.**

To avoid personal injury and/or equipment damage:

- Always refer to Chelsea catalogs, literature, and owner's manuals. Follow Chelsea recommendations when selecting, installing, repairing, or operating a Power Take-Off.
- Never attempt to use a Power Take-Off not specifically recommended by Chelsea for the vehicle transmission.
- Always match the Power Take-Off's specified output capabilities to the requirements of the equipment to be powered.
- Never use a Power Take-Off whose range of speed could exceed the maximum.

Cold Weather Operation of Powershift P.T.O.



WARNING: During extreme cold weather operation [32° F (0°C) and lower], a disengaged Powershift Power Take-Off can momentarily transmit high torque that will cause unexpected output shaft rotation. This is caused by the high viscosity of the transmission oil when it is extremely cold. As slippage occurs between the Power Take-Off clutch plates, the oil will rapidly heat up and the viscous drag will quickly decrease.

The Power Take-Off output shaft rotation could cause unexpected movement of the driven equipment resulting in serious personal injury, death, or equipment damage.

To avoid personal injury or equipment damage:

- Driven equipment must have separate controls.
- The driven equipment must be left in the disengaged position when not in operation.
- Do not operate the driven equipment until the vehicle is allowed to warm up.



This symbol warns of possible personal injury.

Reprinted with permission from: Parker Hannifin Corporation, Chelsea Products Division
Bulletin HY25-1380-M1/US, April 2002

Rotating Auxiliary Driveshafts



WARNING:



- Rotating auxiliary driveshafts are dangerous. You can snag clothes, skin, hair, hands, etc. This can cause serious injury or death.
- Do not go under the vehicle when the engine is running.
- Do not work on or near an exposed shaft when the engine is running.
- Shut off the engine before working on the Power Take-Off or driven equipment.
- Exposed rotating driveshafts must be guarded.

Guarding Auxiliary Driveshafts



WARNING: We strongly recommend that a Power Take-Off and a directly mounted pump be used to eliminate the auxiliary driveshaft whenever possible. If an auxiliary driveshaft is used and remains exposed after installation, it is the responsibility of the vehicle designer and P.T.O. installer to install a guard.

Using Set Screws



WARNING: Auxiliary driveshafts may be installed with either recessed or protruding set screws. If you choose a square head set screw, you should be aware that it will protrude above the hub of the yoke and may be a point where clothes, skin, hair, hands, etc. could be snagged. A socket head set screw, which may not protrude above the hub of the yoke, does not permit the same amount of torquing as does a square head set screw. Also, a square head set screw, if used with a lock wire, will prevent loosening of the screw caused by vibration. Regardless of the choice made with respect to a set screw, an exposed rotating auxiliary driveshaft must be guarded.

Important: Safety Information and Owner's Manual

Chelsea Power Take-Offs are packaged with safety information decals, instructions, and owner's manual. These items are located in the envelope with the P.T.O. mounting gaskets. Also, safety information and installation instructions are packaged with some individual parts and kits. **Be sure to read the owner's manual before installing or operating the P.T.O.** Always install the safety information decals according to the instructions provided. Place the owner's manual in the vehicle glove compartment.



WARNING: Operating the P.T.O. with the Vehicle in Motion

Some Power Take-Offs may be operated when the vehicle is in motion. To do so, the P.T.O. must have been properly selected to operate at highway speeds and correctly matched to the vehicle transmission and the requirements of the driven equipment.

If in doubt about the P.T.O. specifications and capabilities, avoid operating the P.T.O. when the vehicle is in motion. Improper applications and/or operation can cause serious personal injury or premature failure of the vehicle, the driven equipment, and/or the P.T.O.

Always remember to disengage the P.T.O. when the driven equipment is not in operation.



This symbol warns of possible personal injury.

Reprinted with permission from: Parker Hannifin Corporation, Chelsea Products Division
Bulletin HY25-1380-M1/US, April 2002

PTO PUMP SHIFTING PROCEDURE

This pump is driven by a transmission mounted (SAE) PTO, a front-of-engine crank shaft PTO, or engine flywheel PTO. Depending on the PTO and transmission configuration, the PTO may be either a sliding gear type or “hot shift” clutch type. This power take-off is normally shifted from within the driver’s compartment. In most cases, if the PTO is driven via a manual transmission, the truck clutch must be disengaged while shifting the PTO. The PTO should only be engaged at a low engine rpm, idle up to 1000 rpm maximum. Review and understand the PTO manufacturer’s safety and operating instructions before attempting operation.

If the apparatus manufacturer has configured the apparatus per NFPA 1901, Standard for Automotive Fire Apparatus, 2009 Edition, the following sections apply:

16.10.4 Stationary Pump Driven Through Transmission-Mounted PTO, Front-of-Engine Crankshaft PTO, or Engine Flywheel PTO – Automatic Chassis Transmission.

Where the apparatus is equipped with an automatic chassis transmission, the water pump is driven by a transmission-mounted (SAE) PTO, front-of-engine crankshaft PTO, or engine flywheel PTO, and the apparatus is to be used for stationary pumping only with the chassis transmission in neutral, an interlock system shall be provided to ensure that the pump drive system components are engaged in the pumping mode of operation so that the pump system can be operated from the pump operator’s position.

16.10.4.1 A “Pump Engaged” indicator shall be provided both in the driving compartment and on the pump operator’s panel to indicate that the pump shift has been successfully completed

16.10.4.2 An “OK to Pump” indicator shall be provided in the driving compartment to indicate that the pump is engaged, the chassis transmission is in neutral, and the parking brake is engaged.

16.10.5 Stationary Pump Driven Through Transmission-Mounted PTO, Front-of-Engine Crankshaft PTO, or Engine Flywheel PTO – Manual Chassis Transmission.

Where the apparatus is equipped with a manual chassis transmission, the water pump is driven by a transmission-mounted (SAE) PTO, front-of-engine crankshaft PTO, or engine flywheel PTO, and the apparatus is to be used for stationary pumping only with the chassis transmission in neutral, an interlock system shall be provided to ensure that the pump drive system components are engaged in the pumping mode of operation so that the pump system can be operated from the pump operator’s position.

16.10.5.1 A “Pump Engaged” indicator shall be provided both in the driving compartment and on the pump operator’s panel to indicate that the pump shift has been successfully completed

16.10.5.2 An “OK to Pump” indicator shall be provided in the driving compartment to indicate that the pump is engaged, the chassis transmission is in neutral, and the parking brake is engaged.

16.10.6 Stationary Pump and “Pump-and-Roll” – Automatic Chassis Transmission.

Where the water pump is driven by a transmission-mounted (SAE) PTO, front-of-engine crankshaft PTO, or engine flywheel PTO, and the apparatus is designed to be used in both the stationary pumping mode and the “pump-and-roll” pumping mode with the automatic chassis transmission in neutral for stationary pumping and in a road gear for pump-and-roll pumping, an interlock system shall be provided to ensure that the pump

PTO PUMP SHIFTING PROCEDURE

drive system components are engaged in the pumping mode of operation so that the apparatus can be operated in either stationary or pump-and-roll pumping modes.

16.10.6.1 A "Pump Engaged" indicator shall be provided both in the driving compartment and on the pump operator's panel to indicate that the pump shift has been successfully completed

16.10.6.2 An "OK to Pump" indicator shall be provided in the driving compartment to indicate that the pump is engaged, the chassis transmission is in neutral, and the parking brake is engaged.

16.10.6.3 An "OK to Pump and Roll" indicator shall be provided in the driving compartment and shall be energized when the pump is engaged, the chassis transmission is in road gear, and the parking brake is released.

16.10.6.4 When the "OK to Pump and Roll" indicator is energized, the "OK to Pump" indicator shall not be energized.

16.10.7 Stationary Pump and "Pump-and-Roll" – Manual Chassis

Transmission. Where the water pump is driven by a transmission-mounted (SAE) PTO, front-of-engine crankshaft PTO, or engine flywheel PTO, and the apparatus is designed to be used in both the stationary pumping mode and the pump-and-roll pumping mode with the chassis transmission in neutral for stationary pumping or in a road gear for pump-and-roll pumping, an interlock system shall be provided to ensure that the pump drive system components are properly engaged in the pumping mode of operation so that the apparatus can be operated in either stationary or pump-and-roll pumping modes.

16.10.7.1 A "Pump Engaged" indicator shall be provided both in the driving compartment and on the pump operator's panel to indicate that the pump shift has been successfully completed

16.10.7.2 An "OK to Pump" indicator shall be provided in the driving compartment to indicate that the pump is engaged and the parking brake is engaged.

16.10.7.3 An "OK to Pump and Roll" indicator shall be provided in the driving compartment and shall be energized when the pump is engaged and the parking brake is released.

16.10.7.4 When the "OK to Pump and Roll" indicator is energized, the "OK to Pump" indicator shall not be energized.

16.10.10 Pump Operator's Panel Engine Speed Advancement – Automatic Transmission.

16.10.10.1 An engine speed control shall be provided at the pump operator's panel.

16.10.10.2 A "Throttle Ready" indicator that lights when the pump is in the "OK to Pump" mode shall be provided on the pump operator's panel.

16.10.10.3* The "Throttle Ready" indicator at the pump operator's panel shall be permitted to light when the chassis transmission is in neutral and the parking brake is engaged.

A. 16.10.10.3 Engine speed advancement control at the operator's panel might be required for apparatus with the need to control the engine speed for operation of a generator, aerial device, alternator, or other chassis engine-driven device. The indicating device for this "Throttle Ready" condition is the same indicating device as in 16.10.10.2.

Other apparatus may not have equipment for which there is a need to control engine speed from the pump operator's panel. Engine speed control at the pump operator's panel for these apparatus may not be desirable since, on many chassis engines, activating remote throttle operation will automatically disable the in-cab accelerator pedal. For such apparatus, engine speed advancement control at the pump operator's panel is not

PTO PUMP SHIFTING PROCEDURE

required when the chassis transmission is in neutral and the parking brake is engaged, and "Throttle Ready" indication for this condition is not required.

16.10.10.4 An interlock system shall be provided to prevent advancement of the engine speed at the pump operator's panel unless the apparatus has "Throttle Ready" indication.

16.10.10.5 Loss of power to the interlock system in 16.10.10.4 shall return the engine speed to idle and prevent advancement from the pump operator's panel.

16.10.11 Pump Operator's Panel Engine Speed Advancement – Manual Transmission.

16.10.11.1 An engine speed control shall be provided at the pump operator's panel.

16.10.11.2 A "Throttle Ready" indicator that lights when the pump is in the "OK to Pump" mode shall be provided on the pump operator's panel.

16.10.11.3* The "Throttle Ready" indicator at the pump operator's panel shall be permitted to light when the parking brake is engaged.

A. 16.10.11.3 Engine speed advancement control at the operator's panel might be required for apparatus with the need to control the engine speed for operation of a generator, aerial device, alternator, or other chassis engine-driven device. The indicating device for this "Throttle Ready" condition is the same indicating device as in 16.10.11.2.

Other apparatus may not have equipment for which there is a need to control engine speed from the pump operator's panel. Engine speed control at the pump operator's panel for these apparatus may not be desirable since, on many chassis engines, activating remote throttle operation will automatically disable the in-cab accelerator pedal. For such apparatus, engine speed advancement control at the pump operator's panel is not required when the chassis transmission is in neutral and the parking brake is engaged, and "Throttle Ready" indication for this condition is not required.

16.10.11.4 Loss of power to the interlock system in 16.10.11.3 shall return the engine speed to idle and prevent advancement from the pump operator's panel.

16.10.12 If a pump shift manual override device is provided the "Pump Engaged", "OK to Pump", and "Throttle Ready" indicators and the pump operator's panel engine speed advancement interlock system shall be operationally functional when the manual override device is used to shift the pump.

16.10.13 Pump Operator's Panel Engine Speed Advancement – Automatic Transmission.

16.10.13.1 With parallel/series centrifugal pumps, the control positions for parallel operation (volume) and series operation (pressure) shall be indicated.

16.10.13.2 The control for changing the pump from series to parallel, and vice versa, shall be operable at the pump operator's position.

PTO PUMP SHIFTING PROCEDURE

For **STATIONARY** pumping, proceed as follows for pump engagement:

1. Set parking brake.
2. Shift chassis transmission to neutral.
3. Reduce engine speed to idle or below 1000 rpm.
4. Following the PTO manufacturer's shifting instructions, engage chassis PTO. *The "Pump Engaged" indicator both in the driving compartment and on the pump operator's panel will indicate if the pump shift has been successfully completed. The "OK to Pump" indicator in the driving compartment will indicate that the pump is engaged, the chassis transmission is in neutral, and the parking brake is engaged. The "Throttle Ready" indicator at the pump operator's panel is now illuminated.*
5. Prime the pump (see priming instructions). Primer motor should be engaged within 2 minutes of PTO engagement. Pump should then prime within 1 minute of primer operation. If the pump can not be primed within 3 minutes of PTO engagement, disengage PTO and troubleshoot priming difficulty. Do not run the pump dry for extended periods of time.
6. Confirm that the "Throttle Ready" indicator at the pump operator's panel is now illuminated.
7. Observe discharge pressure gage on panel while advancing vernier throttle, to ensure that it is indicating pressure. If Pump is not engaged, no pressure will show.
8. Remember, the vernier throttle has a quick release emergency center button. If the truck moves, immediately push the center emergency button all the way in to close throttle.
9. To ensure maximum operational life for the PTO, driveline, and pump components, increase engine speed to 1000 rpm minimum when the PTO is engaged and the pump is flowing water. This slight increase in rpm induces a small load on the drive system. This load will eliminate the system rattle produced by the clearances in the PTO and pump gears being excited by the combustion engine power strokes.

To disengage the pump, reduce engine rpm to idle and shift PTO out of gear.

IMPORTANT: Failure to follow proper shifting or operating sequences will result in premature PTO failure with possible damage to other components

PTO PUMP SHIFTING PROCEDURE

For **PUMP and ROLL** pumping, proceed as follows for pump engagement:

1. Set parking brake.
2. Shift chassis transmission to neutral.
3. Reduce engine speed to idle or below 1000 rpm.
4. Following the PTO manufacturer's shifting instructions, engage chassis PTO. *The "Pump Engaged" indicator both in the driving compartment and on the pump operator's panel will indicate if the pump shift has been successfully completed. The "OK to Pump" indicator in the driving compartment will indicate that the pump is engaged, the chassis transmission is in neutral, and the parking brake is engaged. The "Throttle Ready" indicator at the pump operator's panel that is now illuminated.*
5. Prime the pump (see priming instructions). Primer motor should be engaged within 2 minutes of PTO engagement. Pump should then prime within 1 minute of primer operation. If the pump can not be primed within 3 minutes of PTO engagement, disengage PTO and troubleshoot priming difficulty. Do not run the pump dry for extended periods of time.
6. Return to the driving compartment driver's position.
7. Release parking brake.
8. Shift chassis transmission into road gear. *The "Pump Engaged" indicator both in the driving compartment and on the pump operator's panel will indicate if the pump shift has been successfully completed. The "OK to Pump" indicator will not be illuminated. The "OK to Pump and Roll" indicator in the driving compartment will indicate that the pump is engaged, the chassis transmission is in drive, and the parking brake is released.*
9. While advancing foot throttle, observe discharge pressure gage in the cab. If the pump is properly engaged and primed, discharge pressure will increase as engine rpm increases. Use care when in the pump and roll mode to maintain a steady engine rpm (constant pressure) and do not exceed rated pump pressure rating.
10. To ensure maximum operational life for the PTO, driveline, and pump components, increase engine speed to 1000 rpm minimum when the PTO is engaged and the pump is flowing water. This slight increase in rpm induces a small load on the drive system. This load will eliminate the system rattle produced by the clearances in the PTO and pump gears being excited by the combustion engine power strokes.

To disengage the pump, reduce engine rpm to idle and shift PTO out of gear.

IMPORTANT: Failure to follow proper shifting or operating sequences will result in premature PTO failure with possible damage to other components.

WARNING: DO NOT USE THIS PUMP FOR HOSE TESTING

OPERATING THE ENGINE

After the pump has been primed, the engine speed should be increased gradually -- never jerk throttle wide open. Likewise, the engine speed should be decreased gradually when shutting down.

Watch the pump pressure gage and open throttle only enough to give the desired pressure. The pressure may rise high enough to burst the discharge hose, when using small nozzles, if the engine is given full throttle (except pumps equipped with pressure regulators set for desired pressure).

Never run engine at high speeds except when pump is primed and ready to discharge water.

COOLING THE ENGINE

NFPA 1901 requires that a supplementary heat exchanger cooling system be provided. On most models, this heat exchanger is an integral part of the pump, and the installation of two hoses from the engine cooling system to the pump is all that is required.

On some models an external heat exchanger must be used. In that case two hoses from the engine cooling system and two lines from the pump will run to the heat exchanger.

The cooling line should not be opened until pressure develops in the pump, and pump should never be operated under heavy loads prolonged without an adequate supply of cooling water flowing.

Coolant temperatures should never be allowed to exceed 200° F while pumping and 180° F is usually taken as a safe operating temperature.

Always shut off cooling line when through pumping.

SUCTION STRAINERS

A large suction strainer, which will prevent the passage of a body larger than the pump impeller ports, must always be used on the free end of the suction line when pumping from draft.

The small hydrant strainer must always be inserted in the suction manifold of pump, when pumping from hydrants and at all other times except when maximum capacity is required from draft.

Failure to use a strainer at all times when pumping will cause serious trouble by clogging the pump because, even in water mains, foreign matter is invariably present, and will be drawn into pump by the high velocity of the water entering.

SUCTION LINE

The suction line of a fire pump can be the source of more operating difficulties than all the rest of the pump when working with a suction lift. Faults in the suction line which cause trouble in operation are as follows:

AIR LEAKS:

A small amount of air, expanding in the vacuum of the suction line, displaces a considerable volume of water which subtracts from the capacity that the pump is able to deliver, making the priming difficult or causing the pump to lose its prime. Therefore, it is absolutely essential to keep the suction line and the suction side of pump casing air tight at all time when drafting water.

Air leakage into pump while operating is usually indicated by a rattling sound in pump casing, miniature explosions in stream issuing from the nozzle, or by losing of prime when operating at very low capacities.

The usual cause of leaky suction lines is carelessness in handling of suction hose. Bruising of hose threads by bumping against hard surfaces or sand in the coupling often prevents tightening of the joints up against the gaskets. The hose gaskets are often defective and are sometimes lost without being noticed by the operator.

INSUFFICIENT SUBMERGENCE:

The free end of suction hose must be submerged to a sufficient depth to prevent the entrance of air that may be sucked down from the surface of the water to a considerable depth when operating at large capacities.

Entrance of air into suction lines in this manner is indicated by a small whirlpool, or vortex, on the surface of the water over the end of the hose.

A minimum submergence of 4 times the hose diameter to the upper holes in suction strainer is recommended where full capacity of pump is required. Where sufficient submergence is not possible, a board or sheet of metal laid over end of suction line will keep air from entering.

SUCTION LINE ENTRANCE TOO CLOSE TO BOTTOM:

If the end of suction line is laid on the bottom of the source of supply, a part of the suction opening will be shut off; and if the bottom is soft, the hose will suck itself down into the earth closing more of the opening and loosening sand and mud to be carried into the pump.

The suction entrance should be suspended a foot or more above the bottom, or if this is not possible, it should be laid on a board or piece of sheet metal. A rope tied to the suction strainer is a convenient means of holding it off the bottom.

OBSTRUCTION OF SUCTION STRAINER BY FOREIGN MATTER:

The high velocity of water entering the suction line will carry loose foreign bodies in against the strainer from a considerable distance. Therefore, all weeds and refuse should be removed from close proximity of the suction entrance.

SUCTION LINE TOO SMALL OR TOO LONG:

The flow of water into the pump is opposed by the frictional resistance in the suction line. This friction loss must be added to the height of the pump above the water (static lift) to determine the "total lift" of the pump. When all of the vacuum in the pump (atmospheric pressure) is consumed in raising water through this total lift, then the limit of capacity has been reached. This capacity can be increased only by decreasing total lift. If the static lift cannot be reduced, then the friction loss must be reduced by using a shorter or larger suction hose.

The rated capacity of the pump is guaranteed for a static lift of 10 feet for ratings up to 1500 gpm, with 20 feet of recommended suction hose at 2000 feet. To increase the capacity without reducing the static lift, or to increase lift without sacrificing capacity, requires larger suction hose.

An excessively long suction line is a handicap to any pump, for besides reducing capacity through the added friction loss, it retards priming and it produces a detrimental effect known as "cavitation". This means a separation of the water column in the pump suction, or void spaces, produced by the inertia of the heavy mass of water in the line resisting sudden change in the velocity when the pump starts to deliver or when discharge valves are opened or closed. This phenomenon reduces

capacity further, and usually sets up a vibratory motion and “water hammer” as the water surges in and out of the void spaces.

When operating with a long suction line, the driving engine should be accelerated gradually, the discharge gates opened gradually, and the capacities of the pump should be held down to within the range of smooth performance.

AIR TRAP IN SUCTION LINE:

If the suction line is laid so that part of it is higher than any other part that is nearer to the pump, as when hose is laid over a high bridge rail, an air trap is formed at the highest part of the hose from which the air cannot be sucked out by the primer. This trapped air is expanded and carried into the pump with the first rush of water causing the pump to immediately lose its prime.

If suction line cannot be laid so that it slopes all the way from pump to water, it can still be primed easily by simply allowing the primer to continue to function until all the trapped air in the hose has been carried into the pump and picked up by the primer.

TESTING FOR AIR LEAKS

Tests for leakage should be made with the suction hose attached and capped, discharge gate open, and all other openings closed tightly.

Run electric priming pump with primer shut-off valve open, until 22" of Hg is shown on the gage. The vacuum should hold for no more than 10" of drop in 5 minutes before satisfactory performance of pump can be expected.

If excessive leakage of air occurs, the source of leaks can be located by shutting off primer motor, with vacuum at its highest point, and listening for the hiss of air.

In the absence of a vacuum gage, the vacuum in pump may be judged by closing suction opening with the flat of hand or a rubber pad.

Water or air pressure may be applied to pump casing to test for air leakage if more convenient. DO NOT pressurize with air beyond 10 PSI

SOURCE OF WATER SUPPLY

Water may be drafted from a pond, lake, stream, cistern, stock tank, or well; but whatever the source, the static lift must not exceed 20 feet from the center of the pump to the surface of the water and a lift not exceeding 10 feet is recommended. The source of supply should be reasonably clear and free from foreign matter. It is recommended that all water holes, which may be needed for fire protection, be deepened if necessary and kept free from weeds and refuse. In many fire protection areas, cisterns or reservoirs are built and allowed to fill up with rain water to be used in emergencies.

PUMPING IN COLD WEATHER

The first insurance against cold weather trouble is to keep fire apparatus stored in heated quarters. All water must be eliminated from pump casing and primer line between periods of operations.

When setting up for pumping, unnecessary delays should be avoided by having thoroughly trained pump operators. Be sure that primer and booster lines are kept closed until ready for use. Having discharge lines ready so that pump may be started as soon as it have become primed. Do not stop flow of water through the pump until ready to drain and return to the station.

Engine Coolant from the engine circulated through the heater jacket in pump casing prevents all ordinary freezing troubles.

WHEN FINISHED PUMPING

Drain water out of pump casing immediately. (Drain valve is located at lowest point in pump casing, and usually accessible from underneath operators panel.)

Don't forget to close all drain cocks after all water has been drained out. Trouble in priming will follow on the next run if this is forgotten.

Shut off cooling line to make pump ready for priming again.

If pump transmission is equipped with a transmission cooler it must be drained also. If the master drain is located below the cooler outlets it can be connected to the master drain, if not, two separate drains must be connected to the transmission cooler. **Failure to drain transmission cooler may result in water in the gearcase if water in the cooling coil freezes.**

If pump is equipped with a heat exchanger, drain heat exchanger using gravity and vacuum drain on all trucks as follows: Close all open lines and drain cocks. Open cooler valve and open air vent at top or drain cock at bottom of heat exchanger depending on model. With the pump air-tight, open primer with engine running for about a minute and then close primer. Drain pump of water which was deposited when heat exchanger and lines were being drained.

Pump not often used for fire service should be inspected and run periodically to ensure that they will be in readiness for an emergency.

PUMPING SALT WATER

The pump should be flushed out with fresh water immediately after pumping salt water to prevent excessive rusting. (Except pumps which are built of special materials, such as bronze, to resist the corrosive action of the brine.)

When measuring sea water with a Pitot Gage, capacities shown in Table No. 2 should be discounted approximately 1 1/2% to determine the correct capacity.

A centrifugal pump will show 3% higher pressure and require 3% more power when handling sea water than when handling fresh water if operated at the same speed and capacity.

TESTING OF EQUIPMENT FOR PRACTICE

It frequently happens that operators of fire apparatus, who are not thoroughly familiar with its operations, become confused under the stress of emergency and neglect some little detail that may cause trouble or delay in getting the equipment into operation. Therefore, we urge that practice tests be conducted repeatedly until operators are thoroughly trained. More than one person in the department should be a competent operator.

Practice should include pumping from low lifts, high lifts with short and long suction lines, with suction line elevated to form an air trap, and from hydrants, at large and small capacities.

It is important to note the effects of air leaks in hose, insufficient submergence and restriction of suction line. (Suction line can be restricted by placing a can or other strong closure around the suction strainer).

NEVER BREAK OR RESTRICT SUCTION OR ALLOW AIR TO ENTER SUCTION LINE WHILE ENGINE IS OPERATING WITH THROTTLE OPEN. This will release the load and allow engine to run away.

Do not allow personnel to hold a large nozzle while working at high pressures for serious accidents may result if hose breaks loose.

MEASURING PUMP PERFORMANCE

Pump performance is measured by the quantity of water it can deliver per minute against a certain pressure called "Total Head" or "Net Pump Pressure", as it is usually termed in fire pump testing.

The net pump pressure is the sum of the pump discharge pressure, as shown on the pressure gage with which the pump is regularly equipped, and the total suction lift converted to equivalent pounds per square inch. If pump is operating from a hydrant, the net pump pressure is the discharge pressure less the incoming pressure from hydrant measured at the suction entrance of pump.

Capacity of fire pump is measured in gallons per minute. The usual method of measurement is to determine the pressure of the jet of water leaving a given size of nozzle by means of a "Pitot Gage" from which the capacity is computed mathematically.

A Pitot Gage consists of a small tube adapted to a point directly into the hose nozzle from the center of the issuing stream, the other end of the tube being connected to an accurate pressure gage.

The nozzle jet drives straight into the Pitot tube and converts the velocity of the jet to pressure which is an accurate measure of velocity of the water as it leaves the nozzle. The tip of the Pitot tube should be one-half the diameter of the nozzle away from nozzle tip while taking reading. Table No. 2 gives nozzle capacities for various Pitot Gage readings.

If a Pilot gage is not available approximate pump capacities can be determined by reference to Table No.3

ACCEPTANCE TESTS

Acceptance tests require continuous tests of three hours duration: 2 hours at 100% rated capacity and 150 PSI net pump pressure; one-half hour at 70% capacity and 200 PSI; one-half hour at 50% capacity and 250 PSI; and a spurt test at 100% capacity and 165 PSI.

Table No. 1 shows recommended set-ups and gage readings for rating tests.

To adjust nozzle pressure for the correct capacity, while maintaining the correct pump pressure, it is necessary to make simultaneous adjustments of engine throttle and the discharge gate valve, partially closing the latter until just the right discharge resistance is built up.

ENGINES

A fire pump imposes heavy loads on the engine that drives it, sometimes absorbing all of the power the engine is capable of delivering at full throttle. Continuous pumping gives the engine no time to rest. Therefore, a new engine and pump unit must be thoroughly broken-in before it is required to deliver prolonged maximum pump performance.

We recommend a minimum break in period of 20 hours at light pumping loads, with occasional spurt tests and interruptions. Temperature and lubrication should be checked during this period.

Engine manufacturers' power ratings usually show maximum performance of a selected, factory adjusted engine, operating without fan, generator, muffler or other accessories, and corrected for "ideal" conditions, i.e. sea level barometer (29.92" of mercury) 60°F and high humidity. Therefore, the actual power delivered by an average truck mounted engine is considerably lower than the manufacturers' rating, and allowances must be made in predicting pump performance.

EFFECTS OF ATMOSPHERIC CONDITIONS ON ENGINE AND PUMP PERFORMANCE

Each one inch of drop in Barometric pressure or each 1000 feet of elevation of the pumping site reduces engine power approximately 3 1/2% for engines not equipped with a turbo charger.

Each 12° rise in temperature above 60° F of carburetor intake air reduces engine power approximately 1%.

Lowering of humidity reduces power slightly.

Each one inch drop in Barometric pressure or each 1000 feet of elevation reduces the maximum possible static lift of a pump approximately one foot.

Temperature of the water supply affects the attainable suction lift of a pump. The effect is slight at low water temperatures but becomes increasingly detrimental as the temperature rises.

A 10° rise from 70°F will subtract about 1/2 foot from the maximum attainable suction lift, while an equal rise from 100°F will reduce the lift at least 1 1/2 feet.

Temperature is an important consideration when pumping from a test pit where the water is heated by recirculation.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

DEFINITIONS

HEAD OF WATER -- vertical depth of water measured in feet or in pressure per unit or area. In hydraulics, head always represents pressure and it is expressed interchangeably in feet of water or pounds per square inch and sometimes in inches of depth of mercury.

STATIC HEAD -- the pressure that is exerted by a stationary column of water of a given height or depth.

TOTAL HEAD OR TOTAL DYNAMIC HEAD -- the maximum height above the source of supply to which the pump would elevate the water plus all the resistance to flow in the pipe or hose line.

DISCHARGE HEAD -- the pressure measured at the discharge outlet of a pump.

SUCTION HEAD -- the positive pressure measured at the suction entrance of a pump (when pumping from an elevated tank or hydrant).

VELOCITY HEAD -- the equivalent pressure represented by fluid in motion as measured by means of a Pitot Gage.

STATIC LIFT -- the vertical height of the center of the pump above the source of supply (when pump from draft).

TOTAL SUCTION LIFT -- the static lift plus the friction in suction line plus entrance losses.

NET PUMP PRESSURE -- the total dynamic head of the pump.

EFFECTIVE NOZZLE PRESSURE -- the pump discharge pressure minus hose friction plus or minus the difference in elevation above or below pump.

WATER HORSEPOWER - the theoretical power required to deliver a given quantity of water per minute against a given head.

BRAKE HORSEPOWER -- Actual power as delivered by a motor or engine to a driven machine.

PUMP EFFICIENCY -- The quotient of the water horsepower divided by brake horsepower required to produce it.

WATER HAMMER -- a series of shock waves produced in a pipeline or pump by a sudden change in water velocity. A sudden change in flow velocity can result from rapid closure of valves. A pressure wave is set up which travels back and forth in the water column at extremely high speed producing rapid vibrations that may be violent and destructive if the water column is long.

THE MAXIMUM THEORETICAL LIFT of a pump is 34 feet, which is the pressure of the atmosphere at sea level. The maximum practical total lift at sea level is 20 to 25 feet (depending on the type and condition of the pump) and this decreases with drops in barometric pressure.

OPERATING CHARACTERISTICS OF PUMPS

CENTRIFUGAL PUMPS: A centrifugal pump develops pressure by centrifugal force of the liquid rotating in the impeller wheel. The pressure developed depends upon the peripheral speed of the impeller (increasing as the square of the speed) and it remains fairly constant over a wide range of capacities up to the maximum output of the pump, if speed remains constant.

If the discharge outlet of a centrifugal pump is entirely shut off, with speed kept constant, there is a small rise in pressure, the water churns in the pump casing and the power drops to a low value. If the discharge is opened wide, with little resistance to flow the pressure drops while the capacity and power both increase to their maximum.

A centrifugal pump is an extremely simple mechanism mechanically, but rather complex hydraulically; in that many factors enter into the design of the impeller and water ways which will affect the pump's efficiency.

DISPLACEMENT PUMPS: Rotary and piston pumps are termed "Positive Displacement" pumps because each revolution displaces or discharge (theoretically) an exact amount of liquid, regardless of the resistance. The capacity is, therefore, proportional to the number of revolutions of the pump per minute and independent of the discharge pressure except as it is reduced by "slip" (leakage past the pistons or rotors). For a given speed the power is directly proportional to the head. If the discharge is completely shut off, the pressure, power, and torque climb indefinitely until the drive power is stalled or breakage occurs.

Slip is the greatest factor affecting efficiency of a displacement pump, and this factor is greatly influenced by the condition of and wears on the working parts.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

CONVERSION FACTORS

One pound per square inch	=	2.31 feet of water
	=	2.04 inches of mercury
	=	27.7 inches of water
One foot of water	=	0.43 pounds per square inch
One inch of mercury	=	1.13 feet of water
	=	0.49 pounds per square inch
One cubic foot of water	=	62.4 pounds
	=	7.5 gallons
One gallon of water	=	231 cubic inches
	=	0.13 cubic feet
	=	8.34 pounds
	=	3.8 liters
One Imperial Gallon	=	1.2 U.S. gallons
Atmospheric Pressure (Sea Level)	=	14.8 pounds per square inch
	=	29.9 inches of mercury
	=	34 feet of water

TABLE NO. 1
NFPA 1901 TEST

Class A							
TEST No.	GPM	Recom- mended Nozzles	Min. Nozzle Press. PSI	Min. Disch. Press. PSI	Min. Net Pump Press. PSI	Disch. Lines	Suction Hose
250 GPM Fire Pump							
1	250	(1), 1”	72	143	150	(1), 50'	20’ of 3”
2	175	(1), 7/8”	62	194	200		
3	125	(1), 3/4”	56	244	250		
4	250	(1), 1”	72	158	165		
350 GPM Fire Pump							
1	350	(1), 1-1/4”	58	144	150	(1), 50'	20’ of 4”
2	245	(1), 1”	69	195	200		
3	175	(1), 7/8”	62	245	250		
4	350	(1), 1-1/4”	58	159	165		
500 GPM Fire Pump							
1	500	(1), 1-1/2"	57	143	150	(1), 50'	20' of 4"
2	350	(1), 1-1/4"	58	194	200		
3	250	(1), 1"	72	245	250		
4	500	(1), 1-1/2"	57	158	165		
750 GPM Fire Pump							
1	750	(1), 1-3/4" or (2), 1-1/4"	68 66	142	150	(2), 50'	20' of 4-1/2"
2	525	(1), 1-1/2"	62	193	200	or	
3	375	(1), 1-1/4"	66	244	250	(2), 100'	
4	750	(1), 1-3/4" or (2), 1-1/4"	68 66	157	165	Siamesed	
1000 GPM Fire Pump							
1	1000	(1), 2" or (2), 1-1/2"	71 57	142	150	(2), 50'	20' of 5"
2	700	(1), 1-3/4" or (2), 1-1/4"	60 58	193	200	or	
3	500	(1), 1-1/2"	57	244	250	(3), 100'	
4	1000	(1), 2" or (2), 1-1/2"	71 57	157	165	Siamesed	

Min. discharge pressures listed above are for pumps operating with full 10' static suction lift. These pressures must be increased by 1 PSI for each 2.3 ft. less than 10' of lift.

TABLE NO. 1
NFPA 1901 TEST

Class A							
TEST No.	GPM	Recom- mended Nozzles	Min. Nozzle Press. PSI	Min. Disch. Press. PSI	Min. Net Pump Press. PSI	Disch. Lines	Suction Hose
1250 GPM Fire Pump							
1	1250	(1), 2-1/4" or (2), 1-1/2"	69 88	143	150	(3), 50'	20' of 6"
2	875	(1), 2" or (2), 1-3/8"	55 61	194	200	or	
3	625	(1), 1-1/2" 2-1/4"	88 69	245	250	(3), 100'	
4	1250	or (2), 1-1/2"	88	158	165	and (1), 50'	
						Siamesed	
1500 GPM Fire Pump							
1	1500	(2), 1-3/4" or (3), 1-1/2"	68 57	142	150	(3), 50'	20' of
2	1050	(1), 2" or (2), 1-1/2"	78 62	194	200	or	6" Min
3	750	(1), 1-3/4" or (2), 1-1/4"	68 66	245	250	(3), 100' and (1), 50'	or (2) 20' of
4	1500	(2), 1-3/4" or (3), 1-1/2"	68 57	157	165	Siamesed	6" Max

Min. discharge pressures listed above are for pumps operating with full 10' static suction lift. These pressures must be increased by 1 PSI for each 2.3 ft. less than 10' of lift.

TABLE NO. 1
NFPA 1901 TEST

Class A							
TEST No.	GPM	Recom- mended Nozzles	Min. Nozzle Press. PSI	Min. Disch. Press. PSI	Min. Net Pump Press. PSI	Disch. Lines	Suction Hose
1750 GPM Fire Pump							
1	1750	(2), 2" or (3), 1-1/2" (2), 1-5/8" or	55 76 61	143	150	(4), 50'	(2) 20' of 6"
2	1225	(2), 1-1/2" or (3), 1-1/4"	84 79	194	200	or	
3	875	(1), 2" or (2), 1-3/8"	55 61	245	250	(4), 100'	
4	1750	(2), 2" or (3), 1-1/2"	55 76	158	165		
2000 GPM Fire Pump							
1	2000	(2), 2" or (4), 1-1/2" (2), 1-3/4"	71 57 60	147	150	(4), 50'	(2) 20' of 6"
2	1400	or (3), 1-1/2" (1), 2"	49 71	199	200	or	
3	1000	or (2), 1-1/2" (2), 2"	57 71	249	250	(4), 100'	
4	2000	or (4), 1-1/2"	57	163	165		
2250 GPM Fire Pump							
1	2250	(2), 2-1/4"	56	144	150	(2 Groups) (3), 100'	20' of 8"
2	1575	(2), 1-3/4"	76	196	200	Siamesed	
3	1125	(2), 1-1/2"	72	246	250		
4	2250	(2), 2-1/4"	56	153	165		

Min. discharge pressures listed above are for pumps operating with full 10' static suction lift. These pressures must be increased by 1 PSI for each 2.3 ft. less than 10' of lift.

TABLE NO. 1
NFPA 1901 TEST

Class A							
TEST No.	GPM	Recom- mended Nozzles	Min. Nozzle Press. PSI	Min. Disch. Press. PSI	Min. Net Pump Press. PSI	Disch. Lines	Suction Hose
2500 GPM Fire Pump							
1	2500	(2), 2-1/4"	69	144	150	(2 Groups) (3), 100'	20' of 8"
2	1750	(2), 2"	55	195	200	Siamesed	
3	1250	(2), 1-1/2"	88	246	250		
4	2500	(2), 2-1/4"	69	159	165		
3000 GPM Fire Pump							
1	3000	(2), 2-1/2"	65	146	150	(2 Groups) (3), 100'	(2) 20' of 8"
2	2100	(2), 2"	78	196	200	Siamesed	
3	1500	(2), 1-3/4"	68	247	250		
4	3000	(2), 2-1/2"	65	161	165		
3000 GPM Industrial Fire Pump							
1	3000	(2), 2-1/2"	65	96	100	(2 Groups) (3), 100'	(2) 20' of 8"
2	2100	(2), 2"	78	146	150	Siamesed	
3	1500	(2), 1-3/4"	68	197	200		
3500 GPM Industrial Fire Pump							
1	3500	(2), 2-1/2" and (1), 2-1/4"	45 44	95	100	(2 Groups) (3), 100' Siamesed	(2) 20' of 8"
2	2450	(2), 2-1/4"	67	146	150	&	
3	1750	(2), 2"	55	197	200	(2)-50' Siamesed	

Min. discharge pressures listed above are for pumps operating with full 10' static suction lift. These pressures must be increased by 1 PSI for each 2.3 ft. less than 10' of lift.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

TABLE NO. 2
DISCHARGE FROM SMOOTH BORE NOZZLE
Pressures measured by Pitot gage.

Nozzle Pressure PSI	1/4	3/8	1/2	5/8	3/4	7/8	1	1 1/8	1 1/4	1 3/8	1 1/2	1 5/8	1 3/4	2	2 1/4	2 1/2
GALLONS PER MINUTE DELIVERED																
5	4	9	16	26	37	50	66	84	103	125	149	175	203	266	337	415
6	4	10	18	28	41	55	72	92	113	137	163	192	223	292	369	455
7	4	11	19	30	44	59	78	99	122	148	176	207	241	315	399	491
8	5	11	21	32	47	64	84	106	131	158	188	222	257	336	427	525
9	5	12	22	34	50	67	89	112	139	168	200	235	273	357	452	557
10	6	13	23	36	53	71	93	118	146	177	211	248	288	376	477	587
12	6	15	25	40	58	78	102	130	160	194	231	271	315	412	522	643
14	7	15	27	43	63	84	110	140	173	210	249	293	340	445	564	695
16	7	16	29	46	67	90	118	150	185	224	267	313	364	475	603	743
18	7	17	31	49	71	95	125	159	196	237	283	332	386	504	640	788
20	8	18	33	51	75	101	132	167	206	250	298	350	407	532	674	830
22	8	19	34	54	79	105	139	175	216	263	313	367	427	557	707	871
24	8	20	36	56	82	110	145	183	226	275	327	384	446	582	739	909
26	9	21	37	59	85	115	151	191	235	286	340	400	464	606	769	947
28	9	21	39	61	89	119	157	198	244	297	353	415	481	629	799	982
30	10	22	40	63	92	123	162	205	253	307	365	429	498	651	826	1017
32	10	23	41	65	95	127	167	212	261	317	377	443	514	673	854	1050
34	11	23	43	67	98	131	172	218	269	327	389	457	530	693	880	1082
36	11	24	44	69	100	135	177	224	277	336	400	470	546	713	905	1114
38	11	25	45	71	103	138	182	231	285	345	411	483	561	733	930	1144
40	11	26	46	73	106	142	187	237	292	354	422	496	575	752	954	1174
42	11	26	47	74	109	146	192	243	299	363	432	508	589	770	978	1203
44	12	27	49	76	111	149	196	248	306	372	442	520	603	788	1000	1231
46	12	28	50	78	114	152	200	254	313	380	452	531	617	806	1021	1259
48	12	28	51	80	116	156	205	259	320	388	462	543	630	824	1043	1286
50	13	29	52	81	118	159	209	265	326	396	472	554	643	841	1065	1313
52	13	29	53	83	121	162	213	270	333	404	481	565	656	857	1087	1339
54	13	30	54	84	123	165	217	275	339	412	490	576	668	873	1108	1364
56	13	30	56	86	125	168	221	280	345	419	499	586	680	889	1129	1389
58	13	31	56	87	128	171	225	285	351	426	508	596	692	905	1149	1414
60	14	31	57	89	130	174	229	290	357	434	517	607	704	920	1168	1437
62	14	32	58	90	132	177	233	295	363	441	525	617	716	936	1187	1462
64	14	32	59	92	134	180	237	299	369	448	533	627	727	951	1206	1485
66	14	33	60	93	136	182	240	304	375	455	542	636	738	965	1224	1508
68	14	33	60	95	138	185	244	308	381	462	550	646	750	980	1242	1531
70	15	34	61	96	140	188	247	313	386	469	558	655	761	994	1260	1553
72	15	34	62	97	142	191	251	318	391	475	566	665	771	1008	1278	1575
74	15	35	63	99	144	193	254	322	397	482	574	674	782	1023	1296	1597
76	15	35	64	100	146	196	258	326	402	488	582	683	792	1036	1313	1618
78	15	36	65	101	148	198	261	330	407	494	589	692	803	1050	1330	1639

TABLE NO. 2
DISCHARGE FROM SMOOTH BORE NOZZLE
Pressures measured by Pitot gage.

Nozzle Pressure PSI	GALLONS PER MINUTE DELIVERED															
	1/4	3/8	1/2	5/8	3/4	7/8	1	1 1/8	1 1/4	1 3/8	1 1/2	1 5/8	1 3/4	2	2 1/4	2 1/2
80	16	36	66	103	150	201	264	335	413	500	596	700	813	1063	1347	1660
82	16	37	66	104	152	204	268	339	418	507	604	709	823	1076	1364	1681
84	16	37	67	105	154	206	271	343	423	513	611	718	833	1089	1380	1701
86	16	37	68	107	155	208	274	347	428	519	618	726	843	1102	1396	1721
88	16	38	69	108	157	211	277	351	433	525	626	735	853	1115	1412	1741
90	17	39	70	109	159	213	280	355	438	531	633	743	862	1128	1429	1761
92	17	39	70	110	161	215	283	359	443	537	640	751	872	1140	1445	1780
94	17	39	71	111	162	218	286	363	447	543	647	759	881	1152	1460	1800
96	17	40	72	113	164	220	289	367	452	549	654	767	890	1164	1476	1819
98	17	40	73	114	166	223	292	370	456	554	660	775	900	1176	1491	1838
100	18	41	73	115	168	225	295	374	461	560	667	783	909	1189	1506	1856
105	18	42	75	118	172	230	303	383	473	574	683	803	932	1218	1542	1902
110	19	43	77	121	176	236	310	392	484	588	699	822	954	1247	1579	1947
115	19	43	79	123	180	241	317	401	495	600	715	840	975	1275	1615	1991
120	19	44	80	126	183	246	324	410	505	613	730	858	996	1303	1649	2033
125	20	45	82	129	187	251	331	418	516	626	745	876	1016	1329	1683	2075
130	20	46	84	131	191	256	337	427	526	638	760	893	1036	1356	1717	2116
135	21	47	85	134	195	262	343	435	536	650	775	910	1056	1382	1750	2157
140	21	48	87	136	198	266	350	443	546	662	789	927	1076	1407	1780	2196
145	21	49	88	139	202	271	356	450	556	674	803	944	1095	1432	1812	2235
150	22	50	90	141	205	275	362	458	565	686	817	960	1114	1456	1843	2273

TABLE NO. 3
Approximate Discharge Flow From Different Nozzles
At the end of Fifty Feet of Average, 2 1/2"
Rubber Lined Fire Hose, for Various
Pump Pressures with Discharge
Valve Wide Open

PUMP PRESSURE LBS	SIZE OF		NOZZLE &		GALLONS PER		MINUTE
	3/4	7/8	1	1 1/8	1 1/4	1 3/8	1 1/2
30	90	119	153	187	217	250	282
40	103	137	177	216	253	290	327
50	115	153	198	242	284	325	367
60	126	168	216	265	311	357	402
70	136	182	234	287	337	385	435
80	145	194	250	308	361	414	465
90	154	206	265	325	383	437	492
100	162	217	280	343	405	462	520
110	171	228	295	360	425	485	549
120	179	239	307	377	444	510	572
130	186	249	318	392	462	530	596
140	193	258	330	407	480	549	618
150	200	267	341	421	497	567	
175	215	288	374	455	538		
200	230	309	395	486			
225	243	328	420				
250	257	345					

This table is offered as an aide in testing pump performance where facilities for accurate measurement of capacity are not available. The capacities given above are conservative, and will not vary more than 5% from actual capacities with any of the standard hose that might be used.

TABLE NO. 4

**Pump or Hydrant Pressure required to give
Effective Nozzle Pressure through various
Lengths of Rubber Lined Hose.**

Size of Hose		1	1 1/2			2		2 1/2					3	
Size of Nozzle		1/4	3/8	1/2	5/8	5/8	3/4	3/4	7/8	1	1 1/4	1 1/2	1 1/4	1 1/2
Nozzle Press PSI	Length of Hose Feet	PUMP OR HYDRANT PRESSURE - PSI												
40	100	45	43	48	60	42	50	44	46	51	64	88	51	62
	200	49	46	56	79	43	60	47	52	60	86	130	59	78
	400	58	51	73	118	46	79	53	62	79	129	212	75	110
	600	67	57	89	158	50	99	59	74	97	172		92	143
	800	76	62	106	196	53	119	65	85	116	215		108	176
	1000	85	68	122	235	56	138	72	96	134	258		124	208
	1500	108	72	142		64	187	87	118	181			165	
	2000	130	96	204		72	226	103	151	227			205	
60	100	67	64	72	89	63	73	65	69	75	95	132	76	92
	200	74	68	84	117	65	86	70	78	89	126	196	88	115
	400	87	76	107	173	69	112	79	94	116	188		111	161
	600	101	85	131	231	74	138	88	111	143	250		135	208
	800	114	93	153		79	164	98	127	170			158	
	1000	127	101	178		83	190	107	143	197			182	
	1500	161	122	237		95	155	130	184	264				
	2000	195	142			106		153	225					
80	100	88	85	96	117	83	99	87	92	99	126	175	101	103
	200	97	91	112	154	86	117	93	103	115	167		116	154
	400	115	102	143	228	92	154	105	125	148	249		147	
	600	132	112	174		98	191	117	147	181			178	
	800	150	123	206		104	228	129	167	214			209	
	1000	167	134	238		110		141	191	247				
	1500	211	161			125		171	245					
	2000	254	188			140		201						
100	100	111	107	120	146	104	123	108	115	125	157		126	152
	200	122	113	139	192	108	145	116	128	150	209		146	190
	400	143	127	177	284	115	190	130	154	200			184	
	600	165	140	217		123	235	145	180	250			223	
	800	186	154	256		131		159	206					
	1000	208	167			138		174	232					
	1500	262	200			157		211						
	2000		234			175		253						

**TABLE NO. 5
REACH OF FIRE STREAMS**

Size of Nozzle	1/4"	3/8"	1/2"	5/8"	3/4"	7/8"	1"	1-1/4"	1-1/2"
---------------------------	-------------	-------------	-------------	-------------	-------------	-------------	-----------	---------------	---------------

NOZZLE

PRESSURE EFFECTIVE VERTICAL REACH - Feet

40	30	35	40	50	59	62	64	65	69
60	35	40	45	60	74	77	79	84	87
80	38	42	48	65	81	85	89	94	96
100	40	44	50	68	84	89	94	100	102

NOZZLE

PRESSURE MAXIMUM VERTICAL REACH - Feet

40	60	65	70	75	78	79	80	80	80
60	70	75	85	95	105	106	108	110	110
80	78	83	95	105	117	125	132	140	140
100	80	88	100	110	122	135	145	155	155

NOZZLE

PRESSURE EFFECTIVE HORIZONTAL REACH - Feet

40	20	25	30	40	44	50	55	62	66
60	25	32	37	50	54	61	67	75	80
80	28	35	40	57	62	70	76	84	88
100	30	37	42	60	66	76	84	93	95

NOZZLE

PRESSURE MAXIMUM HORIZONTAL REACH - Feet

40	65	80	90	100	108	120	125	138	140
60	80	95	95	120	127	142	156	176	183
80	90	105	105	135	143	160	175	201	210
100	95	110	110	140	153	180	205	215	223

TABLE NO. 6
Friction Loss in Fire Hose
Loss in PSI per 100 Feet of Hose

SIZE HOSE	LINEN HOSE			BEST RUBER LINED HOSE							
G.P.M.	1 1/2	2	2 1/2	3/4	1	1 1/2	2	2 1/2	3	3 1/2	(2)-2 1/2
10	1.0			13.5	3.5	0.5	.1				
15	2.2			29.0	7.2	1.0	0.3				
20	3.6			50.0	12.3	1.7	0.4				
25	5.5			75.0	18.5	2.6	0.6				
30	8.0	1.9		105.0	26.0	3.6	0.9				
40	13.0	3.2		180.0	44.0	6.1	1.5				
50	20.0	4.9	1.6		67.0	9.3	2.3				
60	28.0	7.0	2.2		96.0	13.5	3.3				
70	37.0	9.0	3.1		131.0	17.0	4.3				
80	47.0	11.5	3.8		171.0	23.0	5.6				
90	59.0	14.5	5.0		217.0	29.0	7.0				
100	72.0	17.5	5.9		268.0	33.0	8.4				
120		25.0	8.3		386.0	47.0	11.7				
140		34.0	11.0			62.0	16.0	5.2	2.0	0.9	1.4
160		43.0	14.0			78.0	20.0	6.6	2.6	1.2	1.9
180		53.0	17.7			97.0	25.0	8.3	3.2	1.5	2.3
200		63.0	21.5			121.0	30.6	10.1	3.9	1.8	2.8
220						146.0		12.0	4.6	2.1	3.3
240						173.0		14.1	5.4	2.5	3.9
260						204.0		16.4	6.3	2.9	4.5
280						237.0		18.7	7.2	3.3	5.2
300						272.0		21.2	8.2	3.7	5.9
320								23.8	9.3	4.2	6.6
340								26.9	10.5	4.7	7.4
360								30.0	11.5	5.2	8.3
380								33.0	12.8	5.8	9.2
400								36.2	14.1	6.3	10.1
425								40.8	15.7	7.0	11.3
450								45.2	17.5	7.9	12.5
475								50.0	19.3	8.7	13.8
500								55.0	21.2	9.5	15.2
525									23.2	10.5	16.6
550									25.2	11.4	18.1
575									27.5	12.4	19.6
600									29.9	13.4	21.2
650									34.5	15.5	24.8
700									39.5	17.7	28.3
750									45.0	20.1	32.2
800									50.5	22.7	36.2
850									56.5	25.4	40.7
900									63.0	28.2	45.2
1000									76.5	34.3	55.0

Losses in rough walled, rubber hose may be 50% higher than values given above.

TABLE NO. 7
Friction Loss in 15-year-old Steel Pipe
 Loss in PSI per 100 Feet of Pipe

PIPE SIZE G.P.M.	1/8	1/4	3/8	1/2	3/4	1	1 1/4	1 1/2	2	2 1/2	3	4	6	8
1	52.0	12.0	2.8	0.9										
2		45.0	10.0	3.2	4.0									
5			55.0	18.0	4.5	1.4	0.4							
10				64.0	16.0	5.0	1.3	0.6						
15				135.0	34.0	11.0	2.7	1.3	0.5					
20					59.0	18.0	4.7	2.2	0.8					
25					89.0	27.0	7.1	3.4	1.2					
30					125.0	39.0	10.0	4.7	1.7	0.6				
35						51.0	13.0	6.3	2.2	0.7				
40						66.0	17.0	8.0	2.9	0.9				
45						82.0	21.0	10.0	3.6	1.2				
50						99.0	26.0	12.0	4.3	1.4	0.6			
60						140.0	38.0	17.0	6.1	2.0	0.8			
70							49.0	23.0	8.0	2.7	1.1			
80							63.0	29.0	10.0	3.4	1.5			
90							78.0	36.0	13.0	4.3	1.8			
100							96.0	44.0	15.0	5.1	2.2	0.5		
125							144.0	66.0	24.0	7.8	3.3	0.8		
150								93.0	33.0	11.0	4.6	1.1		
175								125.0	44.0	15.0	6.1	1.5		
200									56.0	19.0	7.8	1.9		
250									84.0	28.0	12.0	2.9		
300									114.0	40.0	16.0	4.0	0.6	
350										53.0	22.0	5.4	0.8	
400										68.0	28.0	6.9	1.0	
450										84.0	35.0	8.6	1.2	
500										102.0	42.0	10.0	1.4	0.4
600											60.0	15.0	2.1	0.6
800												25.0	3.5	1
1000												37.0	5.2	1.3
1500													11.0	2.7
2000													19.0	4.7
2500													29.0	7.1
3000														10

TABLE NO. 8
Resistance of Fittings
Equivalent Lengths of Straight Pipe - Feet

PIPE SIZE	1/2	3/4	1	1 1/4	1 1/2	2	2 1/2	3	4	5	6	8
Gate Valve	0.4	0.6	0.8	1.1	1.4	1.8	2.2	2.8	4.1	5.3	6.7	9.4
Global Valve	3.0	4.5	6.0	8.5	10.5	14.0	17.0	22.0	32.0	42.0	53.0	75.0
Angle Valve	1.4	2.0	2.7	3.8	4.8	6.3	7.9	10.5	14.5	18.5	23.0	33.0
Std. Elbow	1.1	1.5	2.0	2.8	3.5	4.7	5.8	7.5	11.0	14.0	18.0	24.0
45 Elbow	0.6	0.8	1.0	1.4	1.6	2.1	2.5	3.1	4.2	5.2	6.3	8.5
Long Sweep EI Str Run Tee	0.5	0.8	1.0	1.4	1.7	2.3	2.8	3.7	5.3	7.0	9.0	12.5
Std. Tee Thru Side Outlet	2.1	2.9	3.9	5.5	6.9	9.1	11.6	14.8	21.0	27.0	34.0	49.0
Sudden Enlargement or contraction	1.8	2.5	3.2	4.2	5.0	6.5	7.5	9.5	13.0	16.0	19.0	25.0
Entrance to Pipe	1.0	1.3	1.6	2.2	2.6	3.3	3.9	4.9	6.5	8.2	10.0	13.0

TABLE NO. 9
To Convert Pounds per Square Inch to
Feet Elevation of Water

2.308ft head = 1.0 psi
1ft head = .433psi

Feet	5	10	15	20	25	30	35	40	45	50	60	70	80	90
Pounds	2.2	4.3	6.5	8.7	11	13	15	17	20	22	26	30	35	39
Feet	100	120	130	140	150	160	170	180	190	200	220	240	260	280
Pounds	43	52	56	61	65	69	74	78	82	87	95	104	113	121
Feet	300	320	340	360	380	400	425	450	475	500	525	550	600	700
Pounds	130	139	147	156	165	173	184	195	206	217	227	238	260	303

Table NO. 10
American National Fire Hose Connection Screw Thread - NH

Size of Hose	4-Mar	1	1 1/2	2 1/2	3	3 1/2	4	4 1/2	5	6	8
Thr's per inch	8	8	9	7.5	6	6	4	4	4	4	4
Thread Designation	0.75-8 NH	1-8 NH	1.5-9 NH	2.5-7.5 NH	3-6 NH	3.5-6 NH	4-4 NH	4.5-4 NH	5-4 NH	6-4 NH	8-4 NH
Max. O.D. Male	1.375	1.375	1.99	3.0686	3.6239	4.2439	5.0109	5.7609	6.26	7.025	9.05

Ref. NFPA 1963

Underwriters Nozzle Tip Thread: 2.1875 O.D. - 12 threads per inch.

IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650

W.S. DARLEY & CO.

OPERATING INSTRUCTIONS - ELECTRIC PRIMING PUMP

The Darley electric primer will develop up to 25 in. Hg. in an air tight pumping system.

The Primer is activated by a combination spring return on-off valve and electric switch. Pulling the valve out opens the valve and closes the electrical circuit to start the motor.

Before the pump can be primed, booster line valves, drain valves, cooling line valve, and all other openings into the pump must be closed and absolutely air tight. The discharge side of the pump is sealed by a check valve, therefore the main discharge valves need not be closed.

When operating from draft, suction hose connections must be tight and free of air leaks.

Make certain the suction hose strainer is properly submerged and free of foreign material.

The main pump drive should remain disengaged until priming is complete to prevent possible damage to impeller seal rings by running "dry".

Pull the primer shutoff valve all the way out to start priming and hold open until water discharges from primer pump exhaust port. Push valve all the way in to shut off primer motor and seal tight.



CAUTION: FOR PRIMING UP TO 10' OF LIFT:

If water does not discharge from the primer exhaust within about 30 seconds (45 seconds with 2 – 20' lengths of hose) stop the primer pump, check for air leaks and make sure primer pump is receiving lubricant from its reservoir, if one is present. **MAX PRIMER OPERATION TIME = 90 seconds every 5 minutes. DO NOT EXCEED 90 SECONDS OF PRIMER OPERATION.**



CAUTION: FOR PRIMING 10' OF LIFT AND HIGHER:

If water does not discharge from the primer exhaust within 90 seconds stop the primer pump, check for air leaks and make sure primer pump is receiving lubricant from its reservoir, if one is present. **DO NOT EXCEED 90 SECONDS OF PRIMER OPERATION.**



CAUTION: The primer pump and motor will begin to generate heat as soon as operation begins. Extended run times (up to 90 seconds) and repeating priming cycles consecutively or within short time periods may lead to premature failure of the primer pump assembly: such failures include but are not limited to: overheating of the motor, seizure of the rotor, and cracking of primer vanes. To avoid this, after your first priming attempt, thoroughly inspect the pump system for air leaks, check that the primer is

**receiving lubricant from its reservoir if such is present,
and resolve the issue before attempting re-prime.**

Engage "Pump" shift to start pumping water.

When pumping from hydrants, the primer is not needed and must be kept closed.

It may be necessary to use the primer momentarily when pumping from a booster tank when the suction head is insufficient to force all the air out of the pump.

LUBRICATING SYSTEM - ELECTRIC PRIMING PUMPS WITH FLUID RESERVOIR

The electric motor rotary van primer pump creates a high vacuum by continuous lubrication of rotor and vanes. Therefore the primer lubricant supply tanks (4 quarts) should be kept full at all times. Recommended primer system lubricant is Darley PRIME GREEN. PRIME GREEN is an environmentally safe, non-toxic, biodegradable lubricant. Its use assures proper primer vane lubricant while minimizing environmental effects.

After the main pump is drained, run the primer motor to drain primer lines and re-lubricate the primer pump.

The vent hole on the lubricant tank cap should be kept open at all times to prevent siphoning lubricant from the tank after the pump is stopped. Do not increase the size of the hole.

Locate the lubricant tank where it may be conveniently inspected and filled.

Should water appear in the lubricant supply tank, the primer valve is leaking. Check and replace valve plug seal o-ring if necessary.

ELECTRIC PRIMING PUMPS WITHOUT FLUID RESERVOIR





The fluidless electric-motor rotary-vane primer pump creates a high vacuum by using a special material for the vanes and an initial factory applied lubricant film. This film must be present in order for the primer to operate properly and to provide maximum life for the primer components.

This film should not wash away completely if the pump is used to pump clean water. If the priming pump is disassembled for any reason, all internal surfaces of the housing and end caps must be cleaned and coated completely with Dow Corning #111 Silicone valve lubricant prior to operating the primer. If a degradation of performance is noticed, performance may be restored by re-applying the film in this manner. It is recommended to service the primer annually to clean and re-apply the silicone film to the inside of the primer housing and end caps. Do not apply grease to the rotor slots, or the sides of the vanes.


After the main pump is drained, run the primer motor to drain primer lines.

NO.	DESCRIPTION	PART NO.	QTY.
1	ASSEMBLY - PRIMER, MOTOR	4240105	1
2	BEARING - OILITE, 0.625 ID	1760023	2
3	COUPLING - 844093	2404500	1
4	CYLINDER - VACUUM PUMP	020800	1
5	HEAD - CYLINDER INBOARD	2800904	1
6	HEAD - CYLINDER OUTBOARD	2800900	1
7	SHCS - 3/16 x 1.00 SST	5400610	4
8	KEY - SO. 0.18 x 0.62 GR2	3402425	1
9	KEY - WOODRUFF, 606	3402200	1
10	MOTOR - PRIMER, 12V	4223400	1
11	NUT - HEL. 5/16, STEEL	5403024	2
12	O-RING - 3.50 x 3.69 x 0.09	3401101	2
13	OIL SEAL - 0.625 ID x 1.128 OD	3400505	1
14	PLUG - PIPE, 0.250, BR. SO. NO.	0802504	1
15	STRAP - GROUND, 12V PRIMER	2400516	1
16	WASHER - FLAT, 5/16, STEEL	3403802	2
17	WASHER - LOCK, 0.313 ID	3403502	6

REVISIONS			
NO.	DESCRIPTION	DATE	BY
1	REVISED FOR DVC	01/03/09	SSG

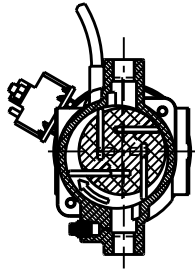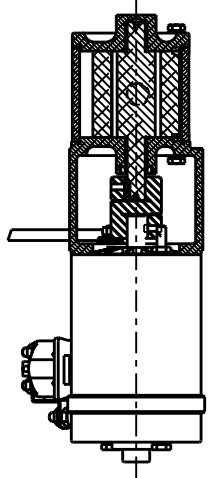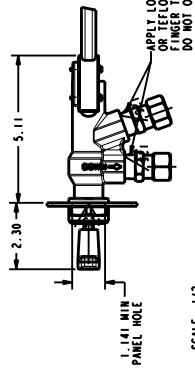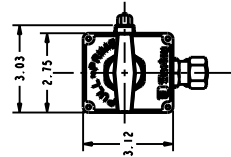


NOTE:
- FOR CROSS SECTION AND EXPLODED VIEW DRAWING
- SEE DRAWING 7162500 FOR DIMENSIONS
- THIS NEW VERSION OF THIS VALVE WITH
- BUSHING 7162500 CAN BE USED TO RETROFIT
- IT TO THE EXISTING PANEL.

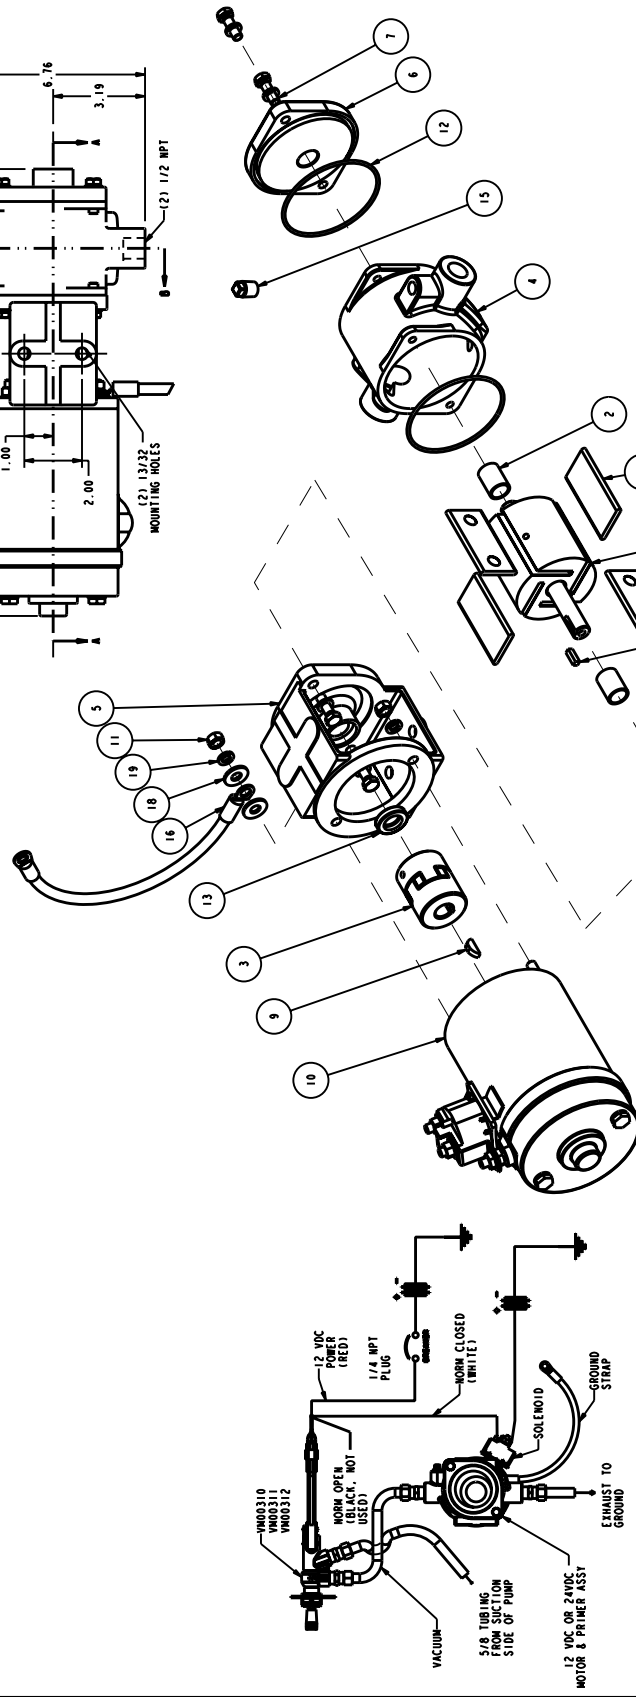

NOTE:
MOUNT WITH EXHAUST OUTLET DOWN
TO CLEAN, PAINT FREE GROUNDING SURFACE
IF SUPPLIED GROUND STRAP
IS REMOVED FROM ASSEMBLY,
RETIGHTEN CYLINDER HEAD ADAPTER
RETAINING NUTS EQUALLY
TO 90 IN. LB.

POSITIVE LEAD WIRE SIZES FOR 12 V & 24 V PRIMERS:
0 - 10 STANDARD 18 (12V), 18 (24V) COPPER
0 - 10 25 - 200 (12V), 42 (24V) COPPER
THESE GAGE WIRES CORRESPOND WITH AMP DRAW
REQUIREMENTS FOR EACH MOTOR AS WELL AS IN RELATION
TO RESISTANCE OVER GIVEN LENGTH.
12 V = 240 AMP
24 V = 140 AMP

REVISIONS		NO PART NO		TOLERANCE	
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3	4	5	6
1	2	3			

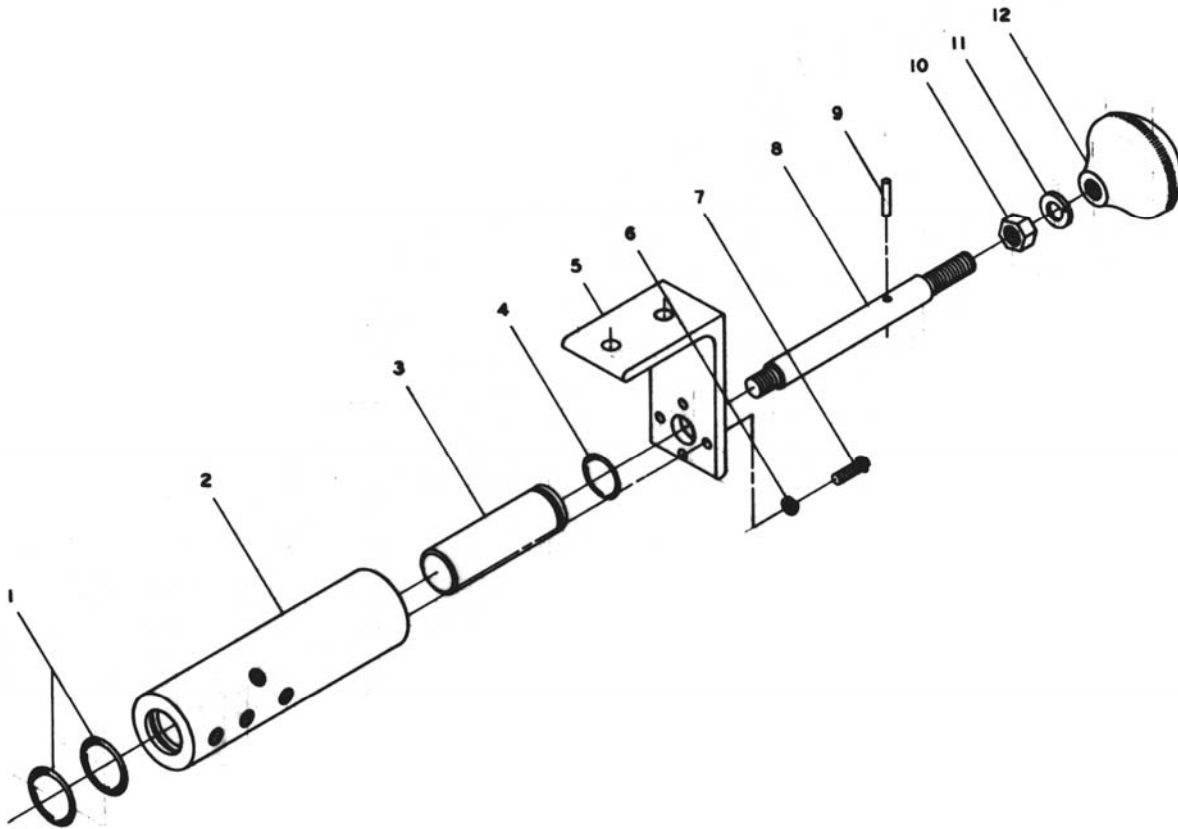

PARTS LIST FOR MULTIPLE DRAIN VALVE

DRAWING NO. DGC0112

Rep. No.	Name of Part	Qty	Rep. No.	Name of Part	Qty
1	O-ring – Body	2	7	Round Head Cap Screw	4
2	Drain Valve Body	1	8	Drain Valve Stem	1
3	Drain Valve Plug	1	9	Pin	1
4	O-ring – Plug	1	10	Hex Nut	1
5	Drain Valve Mounting Bracket	1	11	Lock Washer	1
6	Lock Washer	4	12	Knob	1

BALL VALVE QUARTER TURN - SELF LOCKING

The Darley Ball Valve is a quarter turn, all bronze valve designed for the fire service.

The ball is cast bronze, precision machined *stainless steel ball* for long trouble free service. It is easily serviced in the field.

The lever is self locking and easily adjusted, even under extreme high pressure.

TO DISASSEMBLE AND REPAIR THE BALL VALVE ILLUSTRATION DGC0100

TOOLS REQUIRED:

- 3/16" Allen Wrench
- 1-1/8" Wrench
- 3/4" & 1" Wrench
- Vise Grips or Pliers

1. Remove cap nut (20) and adjusting nut (16).
2. Lever Assembly (11) pulls straight up. Watch for 2 cam balls (12).
3. Unbolt and remove clutch ring (9), clutch sleeve (8), valve stem (7), spring (14), and valve stem washer (15). Check clutch ring (9) and sleeve (8) for scoring or excessive wear. Check o-ring (26). Replace if necessary.
4. Remove nipple (2). Check Quad Ring (25). Replace if necessary.
5. Unscrew ball guide screw (6). Check o-ring (23). Replace if necessary.
6. Remove valve ball (3). Check for scratches, corrosion, and wear. Replace if necessary.
7. Remove seat assembly (4). Check condition of rubber seat. Replace seat assembly if necessary.

REASSEMBLY OF BALL VALVE ILLUSTRATION DGC0100

1. Position ball (3) in body so ball guide screw (6) engages bottom of ball as it is screwed into position.
2. Put valve stem (7) into position. Make certain stem engages slot on top of ball.
3. Slip washer (15), spring (14), and clutch sleeve (8) over the stem. Place clutch ring (9) over the sleeve and secure with the four (4) 1/4" NC x 5/8" socket head cap screws.
4. Set the two cam balls (12) into the V grooves in the clutch sleeve (8) and drop lever assembly over them. Tighten the adjusting nut (16) so that approximately 1/8" play is left at the end of a 6" lever. Over tightening this nut will make the clutch lock inoperative. Lock adjusting nut (16) with cap nut (20). Recheck this adjustment after valve is placed in service.
5. Place seat assembly (4), seat o-ring (5), and quad ring (25) into position.
6. Secure nipple (2) to valve body with eight (8) 1/4" NC x 5/8" socket head cap screws.

**If more information is needed, call W.S. DARLEY & CO. at
Chippewa Falls, WI at 800-634-7812 or 715-726-2650**

REMOTE CONTROL SUCTION RELIEF VALVE DRAWING DGC0115

The suction relief valve bypasses water from the pump suction extension to the ground at a set pressure, preventing excessive rise of supply pressure when relay hose lines are shut off.

Turning pressure setting hand wheel (14) clockwise raises the relief pressure, and counterclockwise lowers it.

The self cleaning fine mesh strainer will prevent entry of solids that could cause the relief valve to malfunction. Open the strainer flush valve to remove small accumulations. This is accomplished by turning the strainer flush valve knob (6) counterclockwise 2 to 3 full turns. Strainer trapped debris will be flushed to the ground. Pump supply pressure should be 50-100 PSI when performing this procedure.

TO SET SUCTION RELIEF VALVE

1. Connect a discharge line from an auxiliary pump to the pump suction containing the suction relief valve. The auxiliary pump must be able to supply a pressure greater than the desired pressure setting of the suction relief valve.
2. Close all other discharge and suction valves.
3. Increase auxiliary pump engine throttle setting until pressure gage indicates the pressure that suction relief valve is open.
4. If suction relief valve opens to bypass excessive pressure, slowly turn hand wheel (14) clockwise until valve closes.
5. If suction relief valve does not open, turn hand wheel (14) counterclockwise until valve opens and begins bypassing water. Continue to turn hand wheel (14) counterclockwise 2 more complete turns. Now slowly turn hand wheel clockwise until valve closes and stops bypassing water.

The suction relief valve will now prevent damage to the pump from a pressure surge (water hammer) which is the result of rapid closing or opening of relay line valves.

Should a higher or lower relief pressure be desired, repeat the above procedure.

CAUTION: With all discharge valves closed, the water in auxiliary pump casing will heat up rapidly. Avoid damage by allowing a very low flow of water to discharge when pump is running.

REMOTE CONTROL SUCTION RELIEF VALVE WITH MECHANICAL SHUTOFF DRAWING DGC0115

MAINTENANCE

Open the relief valve strainer flush valve (6) during every operation at 50-100 PSI supply pressure to insure against foreign material blocking the screen.

The relief valve, pilot unit, and strainer assemblies should be taken apart for inspection and cleaning at least annually, or as often as found necessary to insure trouble free performance.

To disassemble pilot head, first turn hand wheel (14) counterclockwise to remove spring compression. Remove the four 1/4" screws holding regulator spring housing (18). Lift out diaphragm (23) and pilot valve (51) assembly. Clean and make certain 3/32" diameter orifice hole is free of obstruction.

When reassembling pilot head, turn hand wheel (14) a few times clockwise to compress spring before tightening four screws holding spring housing. This will properly center valve seat and diaphragm.

The valve piston (40) and spring (44) chamber should be inspected and cleaned.

Replace diaphragm and o-rings if damaged or deteriorated.

Apply a thin coating of waterproof grease lubricant: to spring housing counterbore that guides pilot valve (51) and ball (52), to end of tension screw (17), and between piston (40) and center post

Self cleaning strainer (63) can be removed for inspection or replacement by alternately turning valve knob (6) and stop nut (7) counterclockwise until stem is free for removal. To avoid discharging water through opening created by stem (62) removal, pump should be completely shut down before stem (62) is removed. Inspect and clean screen (63) if required. Check quad ring (64) for damage or deterioration. Reverse procedure to reassemble valve. Use care when initially inserting screen into body to avoid damaging quad ring (64) or valve seat.

To replace flush valve seat (69), remove stem/screen assembly. Disconnect tubing lines attached to (61) body half, unscrew (61) body half from (70) body half. Replace (69) valve seat. Reverse procedure to reassemble valve.

SUCTION RELIEF VALVE PARTS LIST DRAWING DGC0115

REP NO.	DESCRIPTION	REP NO.	DESCRIPTION
3	Decal - RV Flush	41	Relief Valve Body
4	Panel Nut	42	O-ring Flange
5	Socket Set Screw	43	Spring Centering Plug
6	Flush Valve Knob	44	Spring
7	Stop Nut	45	O-ring Body Flange
11	Panel Valve Nut	46	O-ring Piston
12	Decal - Pressure Hi-Lo	50	O-ring, Bleed Port
13	Trim Plate	51	Pilot Valve
14	Hand wheel	52	Ball
16	Socket Set Screw	53	Pilot Valve Body
17	Spring Tension Screw	61	Body Half, Flush Valve
18	Spring Housing	62	Stem
19	Spring Retainer	63	Screen
20	Regulator Spring	64	Quad Ring
21	Pilot Valve Nut	66	O-ring Valve Seat
22	Housing Pilot Ring	67	Valve Seat Ring
23	Diaphragm	68	O-ring Flush Valve Body
37	O-ring, Relief Valve Head	69	Flush Valve Seat
38	Relief Valve Head	70	Body Half, Flush Valve
40	Relief Valve Piston	84	Flange
		86	Lock Washer Internal

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

W.S. DARLEY & CO.

REMOTE CONTROL PRESSURE RELIEF VALVE WITH MECHANICAL SHUTOFF

Refer to Drawing DGC0141

The relief valve bypasses water from the pump discharge manifold to the suction chamber at a set pump pressure, preventing excessive rise of discharge pressure when hose lines are shut off.

Turning pressure setting hand wheel (14) clockwise raises the relief pressure, and counter clockwise lowers it.

The self-cleaning fine mesh strainer will prevent the entry of solids that could cause the relief valve to malfunction. Open the strainer flush valve to remove small accumulations. This is accomplished by turning the strainer flush valve knob (6) counter clockwise 2 to 3 full turns. Strainer trapped debris will be flushed to the ground. Pump supply pressure should be 50-100 PSI when performing this procedure.

TO SET RELIEF VALVE

1. Turn four-way valve OFF.
2. Open at least one discharge valve and increase engine throttle setting until pressure gage indicates the pressure at which relief valve is to open.
3. Turn four-way valve ON.
4. If gage reading drops below pressure set in step 2, turn hand wheel (14) clockwise until pressure returns to set point.
5. If gage reading does not drop, turn hand wheel (14) counter clockwise until pressure drops 5 to 10 PSI below set point. Then slowly turn hand wheel clockwise until pressure returns to pressure set in step 2.

The relief valve will now prevent the discharge pressure from rising above that for which it is set, and requires no further attention.

Should a higher or lower relief pressure be desired, repeat above procedure.

CAUTION

With all discharge valves closed, water in the auxiliary pump casing will heat up rapidly. To avoid possible damage, allow a very small stream of water to discharge when the pump is running.

REMOTE CONTROL PRESSURE RELIEF VALVE WITH MECHANICAL SHUTOFF

MAINTENANCE DRAWING DGC0141

Open the relief valve strainer flush valve (6) during every operation at 50-100 PSI supply pressure to insure foreign material is not blocking the screen.

The 3/32" diameter metering orifice and diaphragm chamber at (21) may be back-flushed if necessary while the pump is delivering water by opening the pilot head drain and placing valve handle (9) midway between ON and OFF position.

The relief valve, pilot unit, and strainer assemblies should be taken apart for inspection and cleaning at least annually, or as often as found necessary to insure trouble free performance.

To disassemble pilot head, first turn hand wheel (14) counter clockwise to remove spring compression. Remove the four 1/4" screws holding regulator spring housing (18). Lift out diaphragm (23) and pilot valve (51) assembly. Clean and make certain 3/32" diameter orifice hole is free of obstruction.

When reassembling pilot head, turn hand wheel (14) a few times clockwise to compress spring before tightening four screws holding spring housing. This will properly center valve seat and diaphragm.

The valve piston (40) and spring (44) chamber should be inspected and cleaned.

Replace diaphragm and o-rings if damaged or deteriorated.

Apply a thin coating of waterproof grease lubricant: to spring housing counterbore that guides the pilot valve (51) and ball (52), to end of tension screw (17), and between piston (40) and center post.




Self-cleaning strainer (63) can be removed for inspection or replacement by alternately turning valve knob (6) and stop nut (7) counter clockwise until stem is free for removal. To avoid discharging water through opening created by stem (62) removal, pump should be completely shut down before stem (62) is removed. Inspect and clean screen (63) if required. Check quad ring (64) for damage or deterioration. Reverse procedure to reassemble valve. Use care when initially inserting screen into body to avoid damaging quad ring (64) or valve seat.

To replace flush valve seat (69), remove stem/screen assembly, disconnect tubing lines attached to (61) body half and unscrew (61) body half from (70) body half. Replace (69) valve seat. Reverse procedure to reassemble valve.

All Darley relief valves can be provided with a micro switch and either one or two pilot lights to indicate when the valve is open or closed.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

NO.	DESCRIPTION	PART NO.	QTY.
1	LIGHT - AMBER	-	1
2	LIGHT - GREEN	-	1
3	DECAL - FLUSH SCREEN	-	1
4	NUT - PANEL FLUSH VALVE	-	1
5	SSS - NO 10-32 x 0.38 GR5	-	1
6	KNOB - FLUSH VALVE	-	1
7	NUT - PANEL 1.38-12	-	1
8	COUPLING - RELIEF VALVE STEM	-	1
9	LEVER - R.V. ON/OFF	-	1
10	PN - DRIVE LOK 0.125 X 0.750	-	1
11	NUT - PANEL VALVE 1.250-12	-	1
12	DECAL - PRESSURE HI/LO	-	1
13	PLATE - TRIM REMOTE HEAD	-	1
14	HANDWHEEL	-	2
15	DECAL - PRESSURE RELIEF VALVE	-	1
16	SSS - 1/4-20 x 0.38 SST	-	3
17	SCREW - SPRING TENSION	-	1
18	HOUSING - PILOT VALVE	-	1
19	RETAINER - SPRING	-	2
20	SPRING - PRESSURE REGULATOR	-	1
21	NUT - PILOT VALVE	-	1
22	RING - HOUSING PILOT	-	1
23	DIAPHRAM - PILOT HEAD	-	1
24	SHAFT - R.V. EXTENSION 24"	-	1
25	BUSHING - RETAINER PANEL	-	1
26	NUT - .750 CONDUIT	-	1
27	SSS - NO 10-24 x 0.19 GR5	-	1
28	COLLAR - SHAFT 1/2" BORE	-	1
29	SSS - .313 X 0.31 GR5	-	1
30	COUPLING - RELIEF VALVE STEM	-	1
31	MICROSWITCH - OMRON	-	1
32	PN - SPRING 0.19 X 1.12	-	1
33	O-RING - 0.38 X 0.50 X 0.06	-	2
34	O-RING - 0.44 X 0.62 X 0.09	-	1
35	O-RING - 0.75 X 0.94 X 0.09	-	1
36	PLATE - SEAL VALVE STEM	-	1
37	O-RING - 3.25 X 3.38 X 0.06	-	1
38	HEAD - RELIEF VALVE REMOTE 3"	-	1
39	STEM - RELIEF VALVE 3"	-	1
40	PISTON - RELIEF VALVE 3"	-	1
41	BODY - RELIEF VALVE 3"	-	1
42	O-RING - 3.50 X 3.89 X 0.09	-	2
43	CENTER PLUG - PISTON SPRING	-	1
44	SPRING - PISTON	-	1
45	PN - SPRING 0.16 X 0.88	-	1
46	QUAD RING - 2.88 X 3.25 X 0.19	-	1
47	WASHER - 0.39 X 0.61 X .06 BR	-	1
48	STEM - RELIEF VALVE SWITCH	-	1
49	SHIM - SWITCH SPACER 0.0125	-	1
50	PLUG - PIPE 0.125 SST SOC HD	-	1
51	PN - PILOT VALVE	-	1
52	BALL - CAM 0.04"	-	1
53	HEAD - PILOT CONTROL	-	1
54	COVER - ON/OFF VALVE	-	1
55	O-RING - 1.12 X 1.25 X 0.06	-	1
56	PLUG - VALVE	-	1
57	O-RING - 0.50 X 0.69 X 0.09	-	1
58	PN - SPRING 0.12 X 0.62 SST	-	1
59	RHMS - NO 8-32 X 0.50 BR	-	4
61	BODY - FLUSH VALVE COMPLETE	-	1
62	STEM - FLUSH VALVE	-	1
63	STRAINER - SCREEN	-	1
64	QUAD RING - 1.00 X 1.25 X 0.12	-	1
68	O-RING - 1.19 X 1.38 X 0.09	-	1
69	SEAT - FLUSH VALVE	-	1
71	TUBE FITTING - EL. 3/8 x .25	-	5
72	TUBE FITTING - STR. 3/8 d x .25 NPTM	-	3
73	TUBE FITTING - STR. 3/8 d x .12 NPTM	-	1
74	SHCS - 250-20 X 0.88 SST	-	4
75	SHCS - 315-19 X 0.75 GR8	-	2
76	WASHER - LOCK NO 6 ID SST	-	2
77	RHMS - NO 6-32 X 1.00 BR	-	2
79	NUT - HEX .375-16 GR2	-	8
81	HKCS - .375-16 X 2.25 GR5	-	8
82	FLANGE - ADAPTER 3 NPT	-	2
83	RHMS - NO 10-24 X 0.75 GR5	-	3
86	WASHER - INT. TOOTH 1.250 ID	-	1
88	BEARING - NYLINER 0.50 ID	-	2
90	JOINT - UNIVERSAL .500"	-	2
91	SHIM - SWITCH SPACER 0.025	-	1
93	WASHER - LOCK NO 10 ID SST	-	3
95	CONNECTOR - DUETCH DT 06-3S	-	1

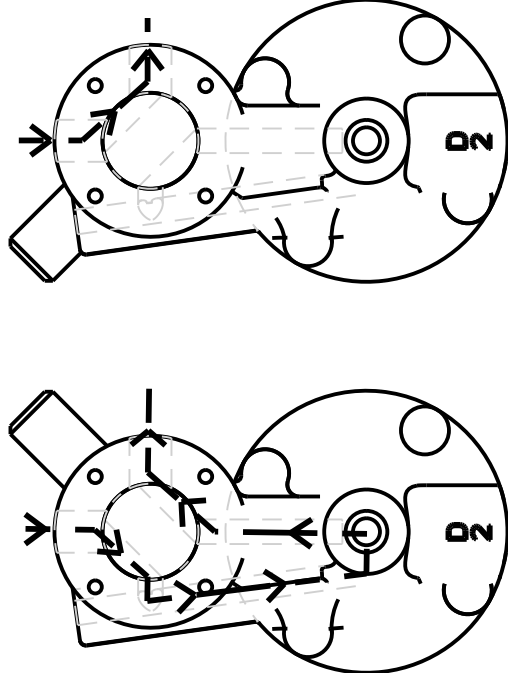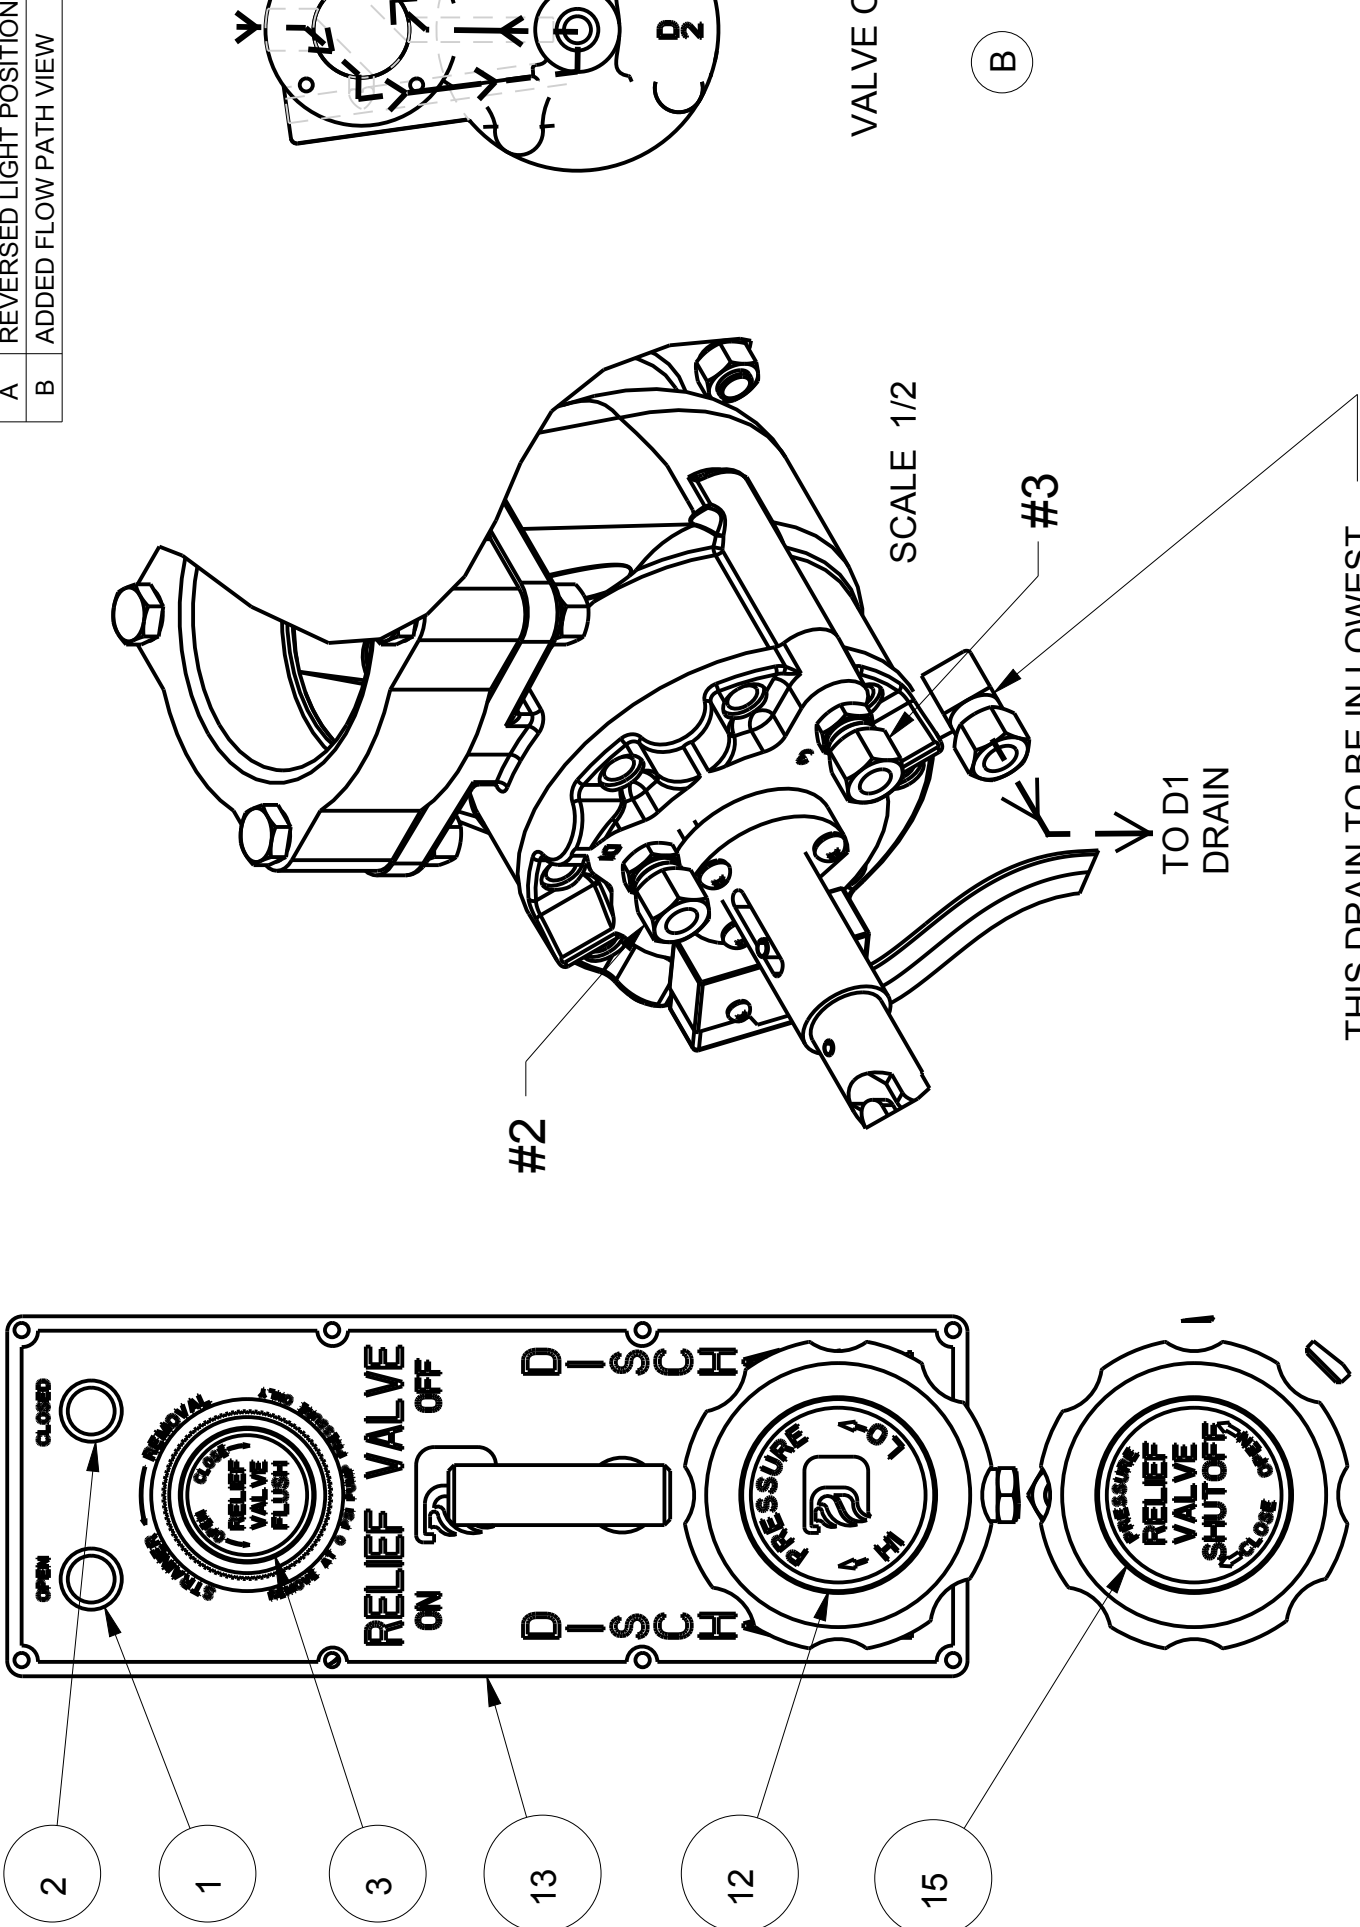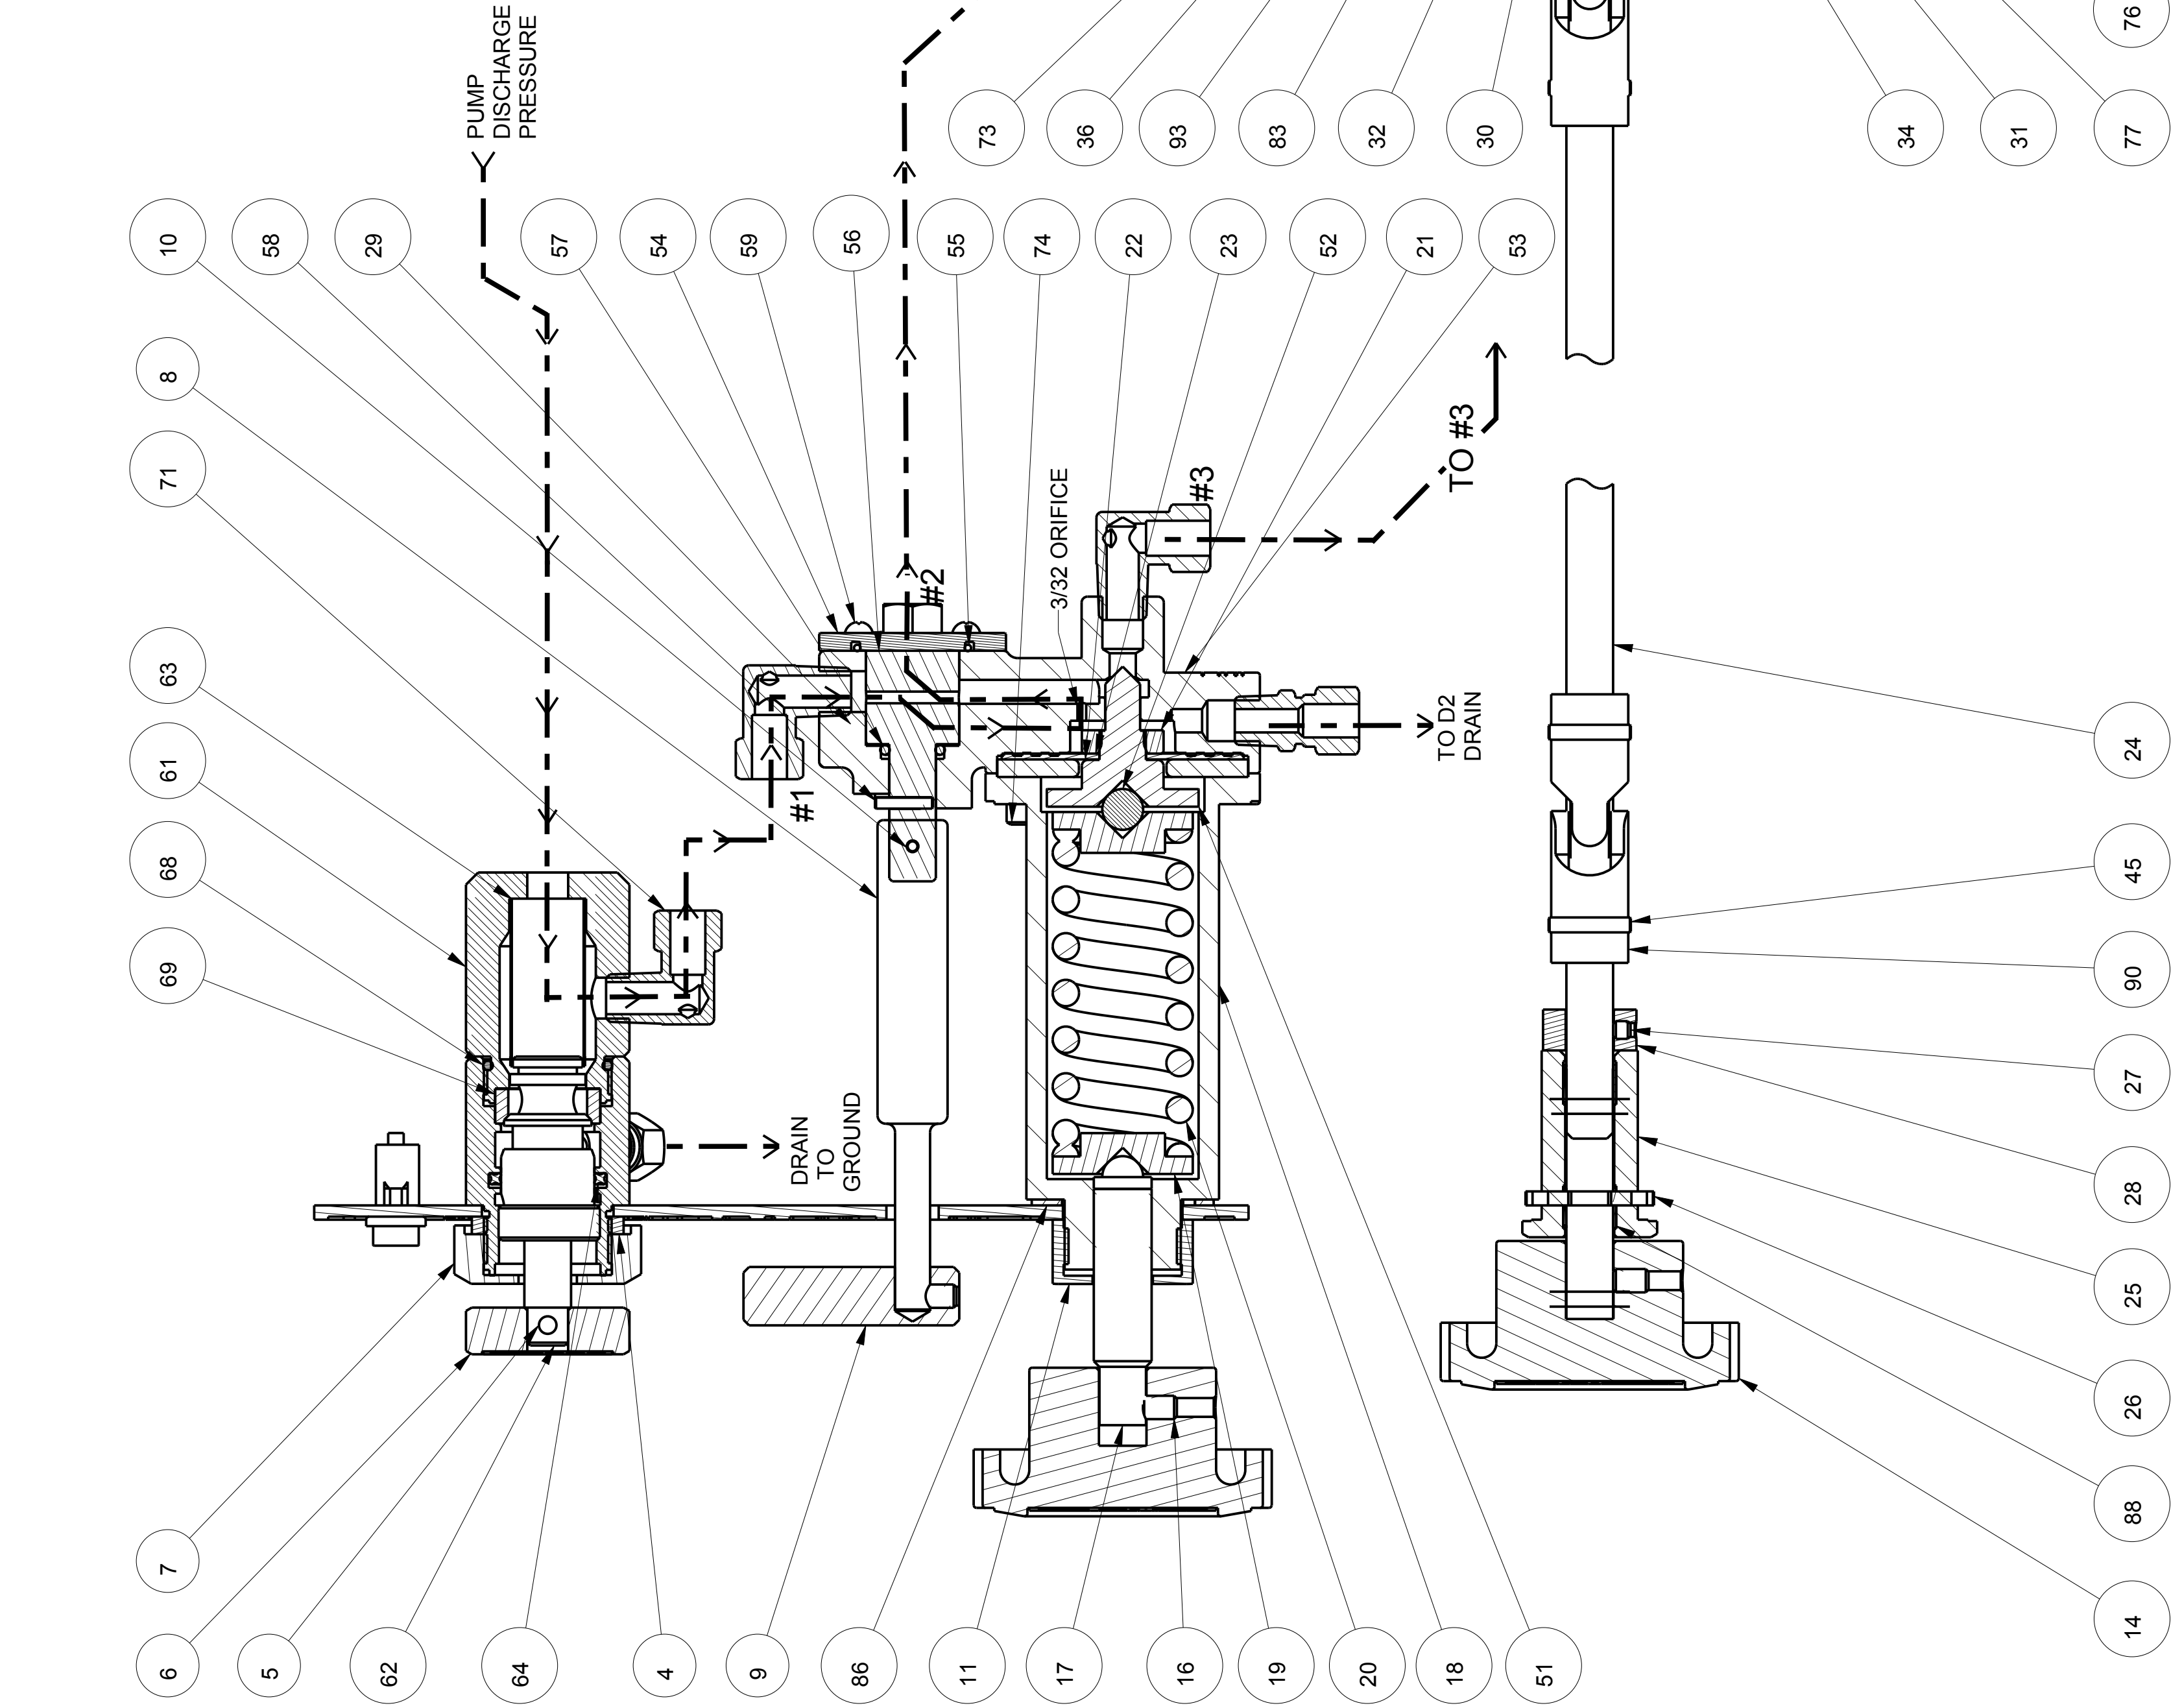

Ⓑ FLOW PATH THRU PILOT CONTROL VALVE


EXTENSION SHAFT - PART #24 - TO BE CUT AND DRILLED AT TIME OF INSTALLATION

SHOWN WITH OPTIONAL 3" NPT FLANGES P.N. 1920503

DO NOT CONNECT A D1 DRAIN TO A D2 DRAIN PORT ON MULTIPLE DRAIN VALVE

DRAIN MUST BE CLOSED DURING OPERATION

SEE DRAWING #DGC0112 FOR DETAILED LOCATION

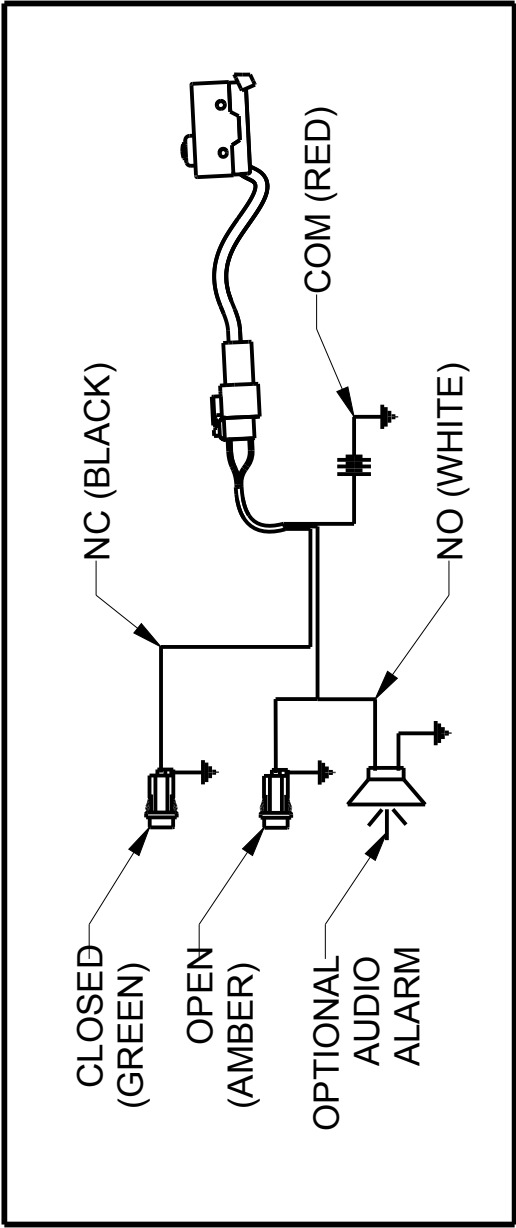

REVISIONS			
LTR	DESCRIPTION	DATE	CHG NO. / APPR'D
A	REVERSED LIGHT POSITIONS	12JUL07	2007-285 RJG
B	ADDED FLOW PATH VIEW	21NOV2007	2007-451 SMS

MODEL NAME	DGC0141	REV. CREATED	08JUN05	SHEET	1 / 2	D
TOLERANCE	AS NOTED	OLD PART NO.				
W.S. Darley & Co.	ITASCA, IL - CHIPPewa FALLS, WI	PATTERNING				
RELIEF VALVE		MATERIAL NO.				
DATE	13-Jun-05	DO NOT SCALE	PRINT			
SCALE	3/4	ALL DIMENSIONS IN INCHES UNLESS NOTED				
DGC0141						

NO.	DESCRIPTION	PART NO.	QTY.
1	LIGHT - AMBER	-	1
2	LIGHT - GREEN	-	1
3	DECAL - FLUSH SCREEN	-	1
4	NUT - PANEL FLUSH VALVE	-	1
5	SSS - NO 10-32 x 0.38 GR5	-	1
6	KNOB - FLUSH VALVE	-	1
7	NUT - PANEL 1.38-12	-	1
8	COUPLING - RELIEF VALVE STEM	-	1
9	LEVER - R.V. ON/OFF	-	1
10	PN - DRIVE LOK 0.125 X 0.750	-	1
11	NUT - PANEL VALVE 1.250-12	-	1
12	DECAL - PRESSURE HILO	-	1
13	PLATE - TRIM REMOTE HEAD	-	1
14	HANDWHEEL	-	2
15	DECAL - PRESSURE RELIEF VALVE	-	1
16	SSS - 1/4-20 x 0.38 SST	-	3
17	SCREW - SPRING TENSION	-	1
18	HOUSING - PILOT VALVE	-	1
19	RETAINER - SPRING	-	2
20	SPRING - PRESSURE REGULATOR	-	1
21	NUT - PILOT VALVE	-	1
22	RING - HOUSING PILOT	-	1
23	DIAPHRAM - PILOT HEAD	-	1
24	SHAFT - R.V. EXTENSION 24"	-	1
25	BUSHING - RETAINER PANEL	-	1
26	NUT - .750 CONDUIT	-	1
27	SSS - NO 10-24 x 0.19 GR5	-	1
28	COLLAR - SHAFT 1/2 BORE	-	1
29	SSS - .313 x 0.31 GR5	-	1
30	COUPLING - RELIEF VALVE STEM	-	1
31	MICROSWITCH - OMRON	-	1
32	PN - SPRING 0.19 X 1.12	-	1
33	O-RING - 0.38 x 0.50 x 0.06	-	2
34	O-RING - 0.44 x 0.62 x 0.09	-	1
35	O-RING - 0.75 x 0.94 x 0.09	-	1
36	PLATE - SEAL VALVE STEM	-	1
37	O-RING - 3.25 x 3.38 x 0.06	-	1
38	HEAD - RELIEF VALVE REMOTE 3"	-	1
39	STEM - RELIEF VALVE 3"	-	1
40	PISTON - RELIEF VALVE 3"	-	1
41	BODY - RELIEF VALVE 3"	-	1
42	O-RING - 3.50 x 3.89 x 0.09	-	2
43	CENTER PLUG - PISTON SPRING	-	1
44	SPRING - PISTON	-	1
45	PN - SPRING 0.19 X 0.88	-	1
46	QUAD RING - 2.88 x 3.25 x 0.19	-	1
47	WASHER - 0.39 x 0.61 x .06 BR	-	1
48	STEM - RELIEF VALVE SWITCH	-	1
49	SHIM - SWITCH SPACER 0.0125	-	1
50	PLUG - PIPE 0.125 SST SOC HD	-	1
51	PN - PILOT VALVE	-	1
52	BALL - CAM 0.44"	-	1
53	HEAD - PILOT CONTROL	-	1
54	COVER - ON/OFF VALVE	-	1
55	O-RING - 1.12 x 1.25 x 0.06	-	1
56	PLUG - VALVE	-	1
57	O-RING - 0.50 x 0.69 x 0.09	-	1
58	PN - SPRING 0.12 X 0.62 SST	-	1
59	RHMS - NO 8-32 X 0.50 BR	-	1
60	BODY - FLUSH VALVE COMPLETE	-	4
61	STEM - FLUSH VALVE	-	1
62	STRAINER - SCREEN	-	1
63	QUAD RING - 1.00 x 1.25 x 0.12	-	1
64	O-RING - 1.19 x 1.38 x 0.09	-	1
65	SEAT - FLUSH VALVE	-	1
66	TUBE FITTING - EL .38 x .25	-	5
67	TUBE FITTING - STR .38 d1 x .25 NPTM	-	3
68	TUBE FITTING - STR .38 d1 x 12 NPTM	-	1
69	SHCS - 250-20 X 0.68 SST	-	4
70	SHCS - 313-18 x 0.75 GR8	-	8
71	WASHER - LOCK NO 8 ID SST	-	2
72	RHMS - NO 6-32 X 1.00 BR	-	2
73	NUT - HEX .375-16 GR2	-	8
74	HHCS - .375-16 x 2.25 GR5	-	8
75	FLANGE - ADAPTER 3 NPT	-	2
76	WASHER - INT TOOTH 1.250 ID	-	3
77	BEARING - NYLINER 0.50 ID	-	2
78	JOINT - UNIVERSAL .500"	-	2
79	SHIM - SWITCH SPACER 0.025	-	1
80	WASHER - LOCK NO 10 ID SST	-	3
81	CONNECTOR - DUETCH DT 06-SS	-	1

SHOWN WITH OPTIONAL 3" NPT FLANGES - P.N. 1920503


EXTENSION SHAFT - ITEM #24 - TO BE CUT AND
DRILLED AT TIME OF INSTALLATION

DO NOT CONNECT A D1 DRAIN TO A D2 DRAIN PORT
ON MULTIPLE DRAIN VALVE
DRAIN MUST BE CLOSED DURING OPERAIIION

SEE DRAWING #DGC0112 FOR DETAILED LOCATION

SEE SHEET #1 FOR WIRING SCHEMATIC

REVISIONS			DATE	CHG NO.	APPRO
LTR	DESCRIPTION				

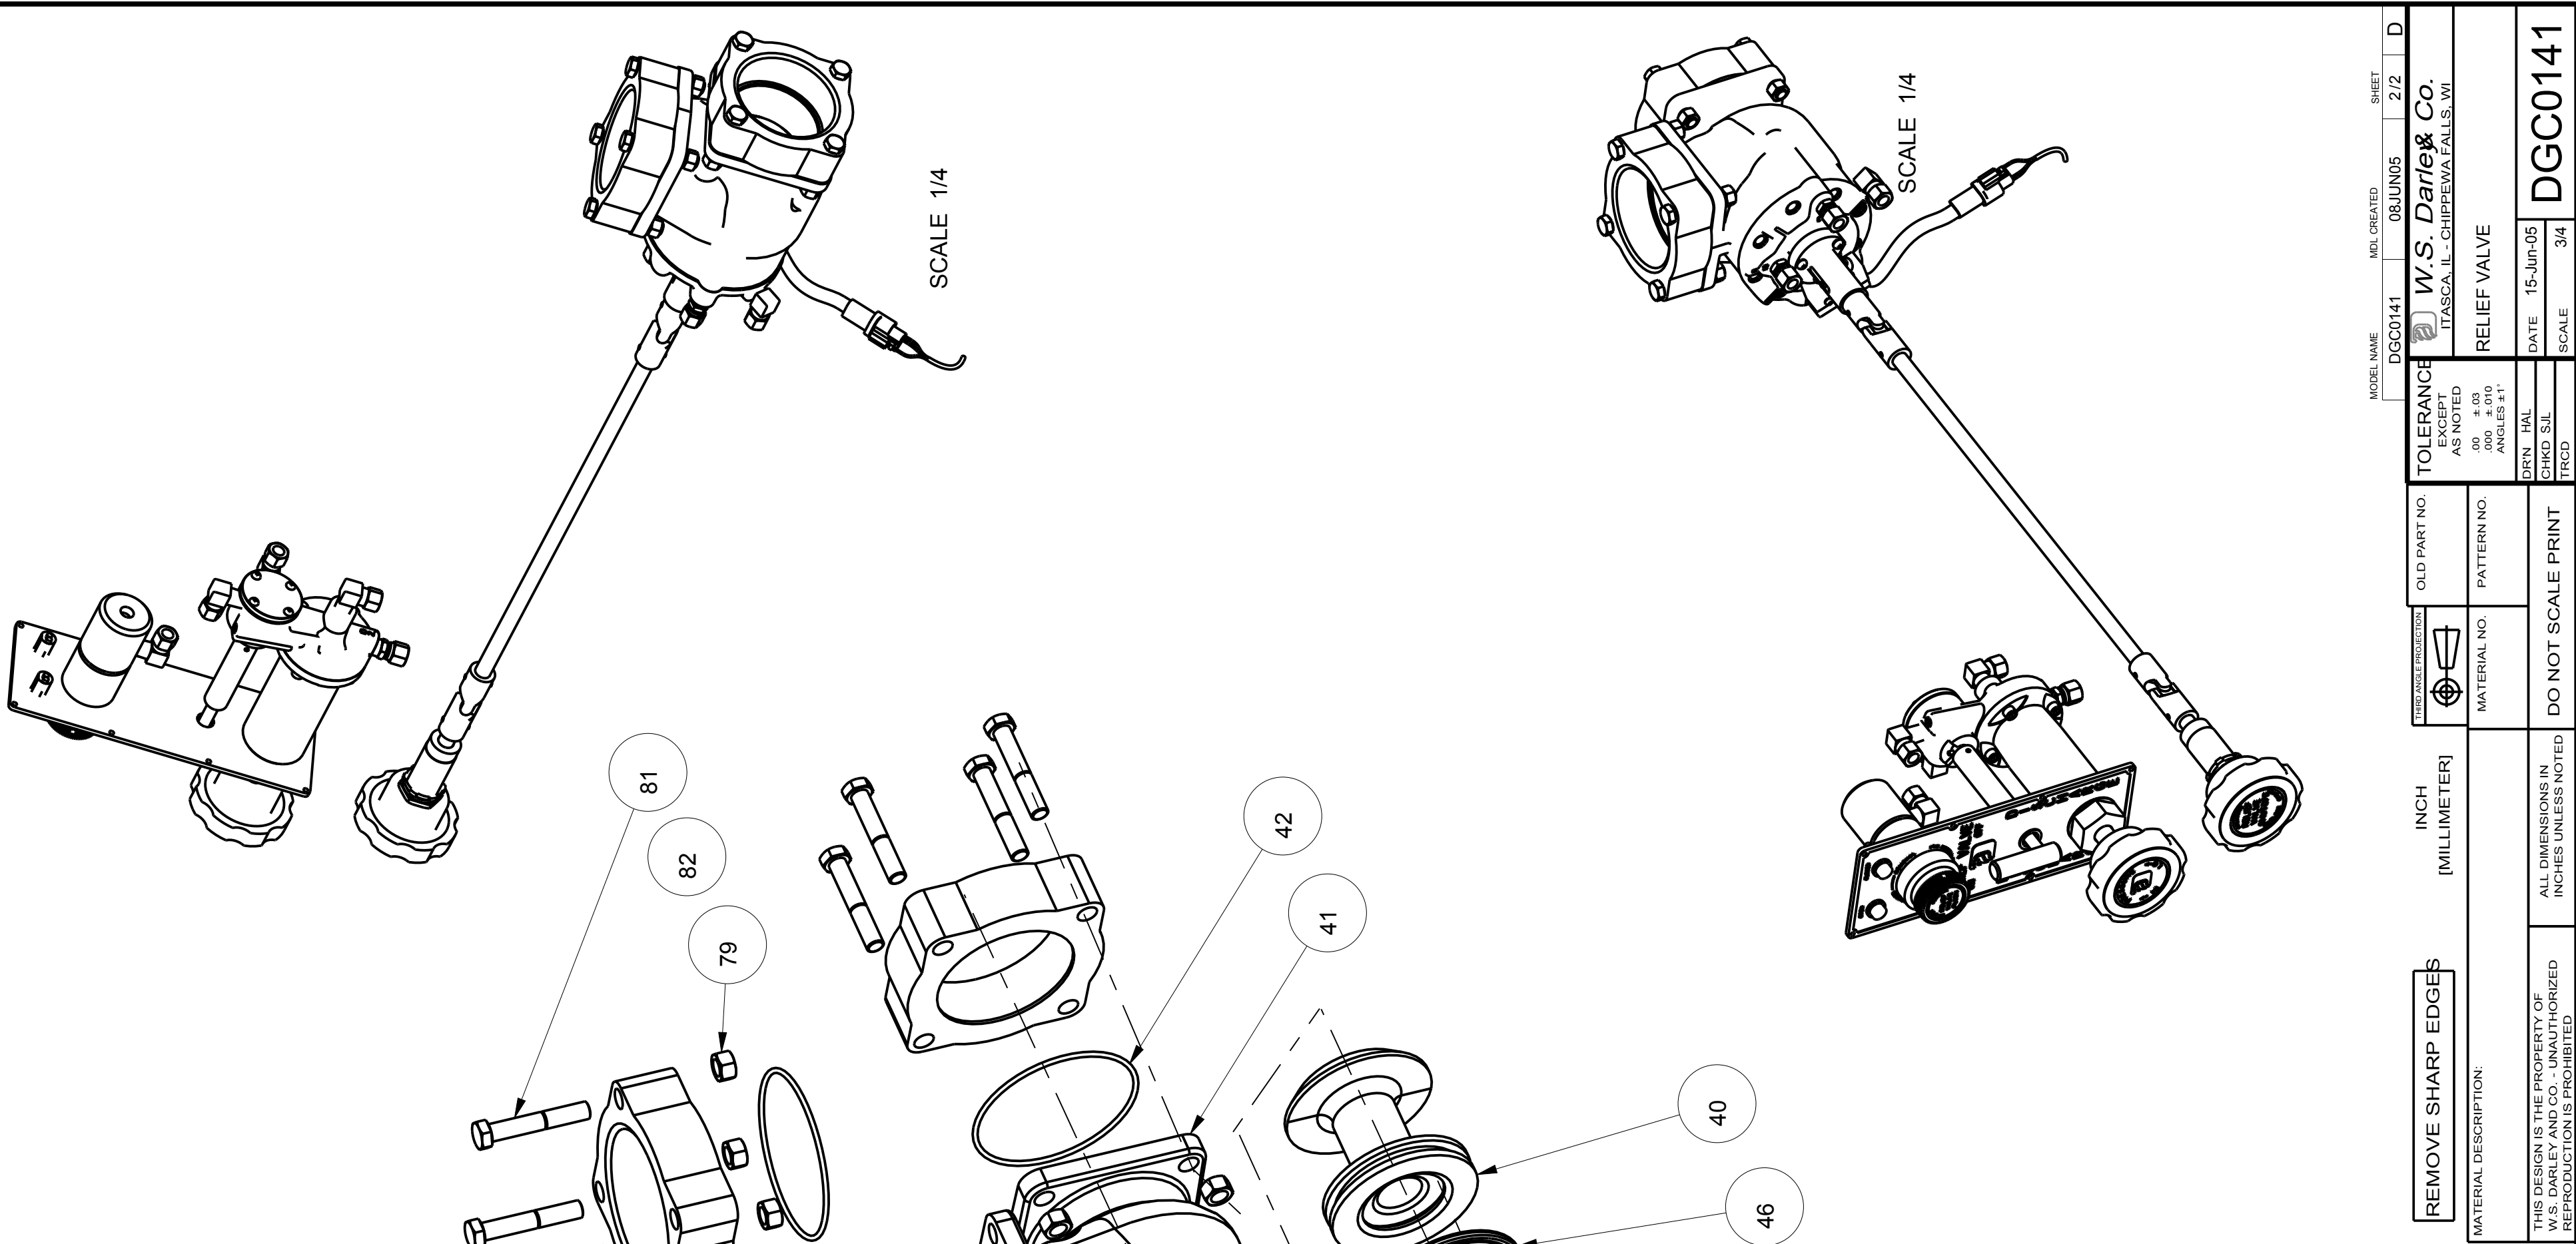

MODEL NAME		REV. OR REVISED		SHEET	
DGC0141		08JUN05		2/2	
TOLERANCE		OLD PART NO.		INCH	
AS NOTED		[SYMBOL]		[MILLIMETER]	
.00 ±.03		MATERIAL NO.		ALL DIMENSIONS IN	
.00 ±.03		PATTERNING		INCHES UNLESS NOTED	
ANGLES 90°		DO NOT SCALE PRINT		INCHES UNLESS NOTED	
RELIEF VALVE		DATE		SCALE	
15-JUN-05		3/4		DGC0141	

W.S. DARLEY & CO.

Relief Valve Alarm Installation Instruction

This Alarm is designed to concentrate audible sound in the operator zone only. For optimum Performance, position alarm sound opening so it is facing the operator at a distance of 24 - 36 inches.

Mount unit in 1.12 diameter panel hole. If panel is thicker than .09 inches, invert nut.

Do not mount with sound opening in an upward position. Do not obstruct opening.

Connect to 12 VDC only.

Two (2) wires are required to complete the circuit. The alarm is sensitive to polarity and will not operate if connected with polarity reversed.

Relief Valve Alarm Installation Instructions


THIS ALARM IS DESIGNED TO CONCENTRATE AUDIBLE SOUND IN THE OPERATOR ZONE ONLY. FOR OPTIMUM PERFORMANCE, POSITION ALARM SOUND OPENING SO IT IS FACING THE OPERATOR AT A DISTANCE OF 24-36 INCHES.

MOUNT UNIT IN 1.12 DIAMETER PANEL HOLE. IF PANEL IS THICKER THAN .09 IN., INVERT NUT.


DO NOT MOUNT WITH SOUND OPENING IN AN UPWARD POSITION. DO NOT OBSTRUCT OPENING.

CONNECT TO 12 VDC ONLY.

TWO (2) WIRES ARE REQUIRED TO COMPLETE THE CIRCUIT. THE ALARM IS SENSITIVE TO POLARITY AND WILL NOT OPERATE IF CONNECTED WITH POLARITY REVERSED.

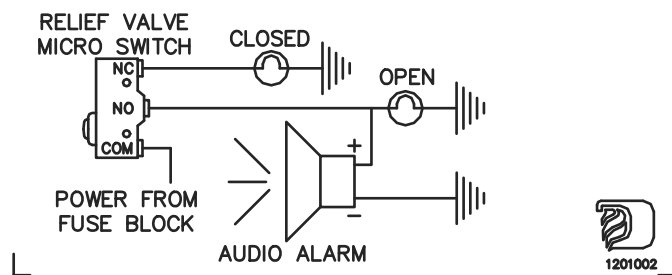

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

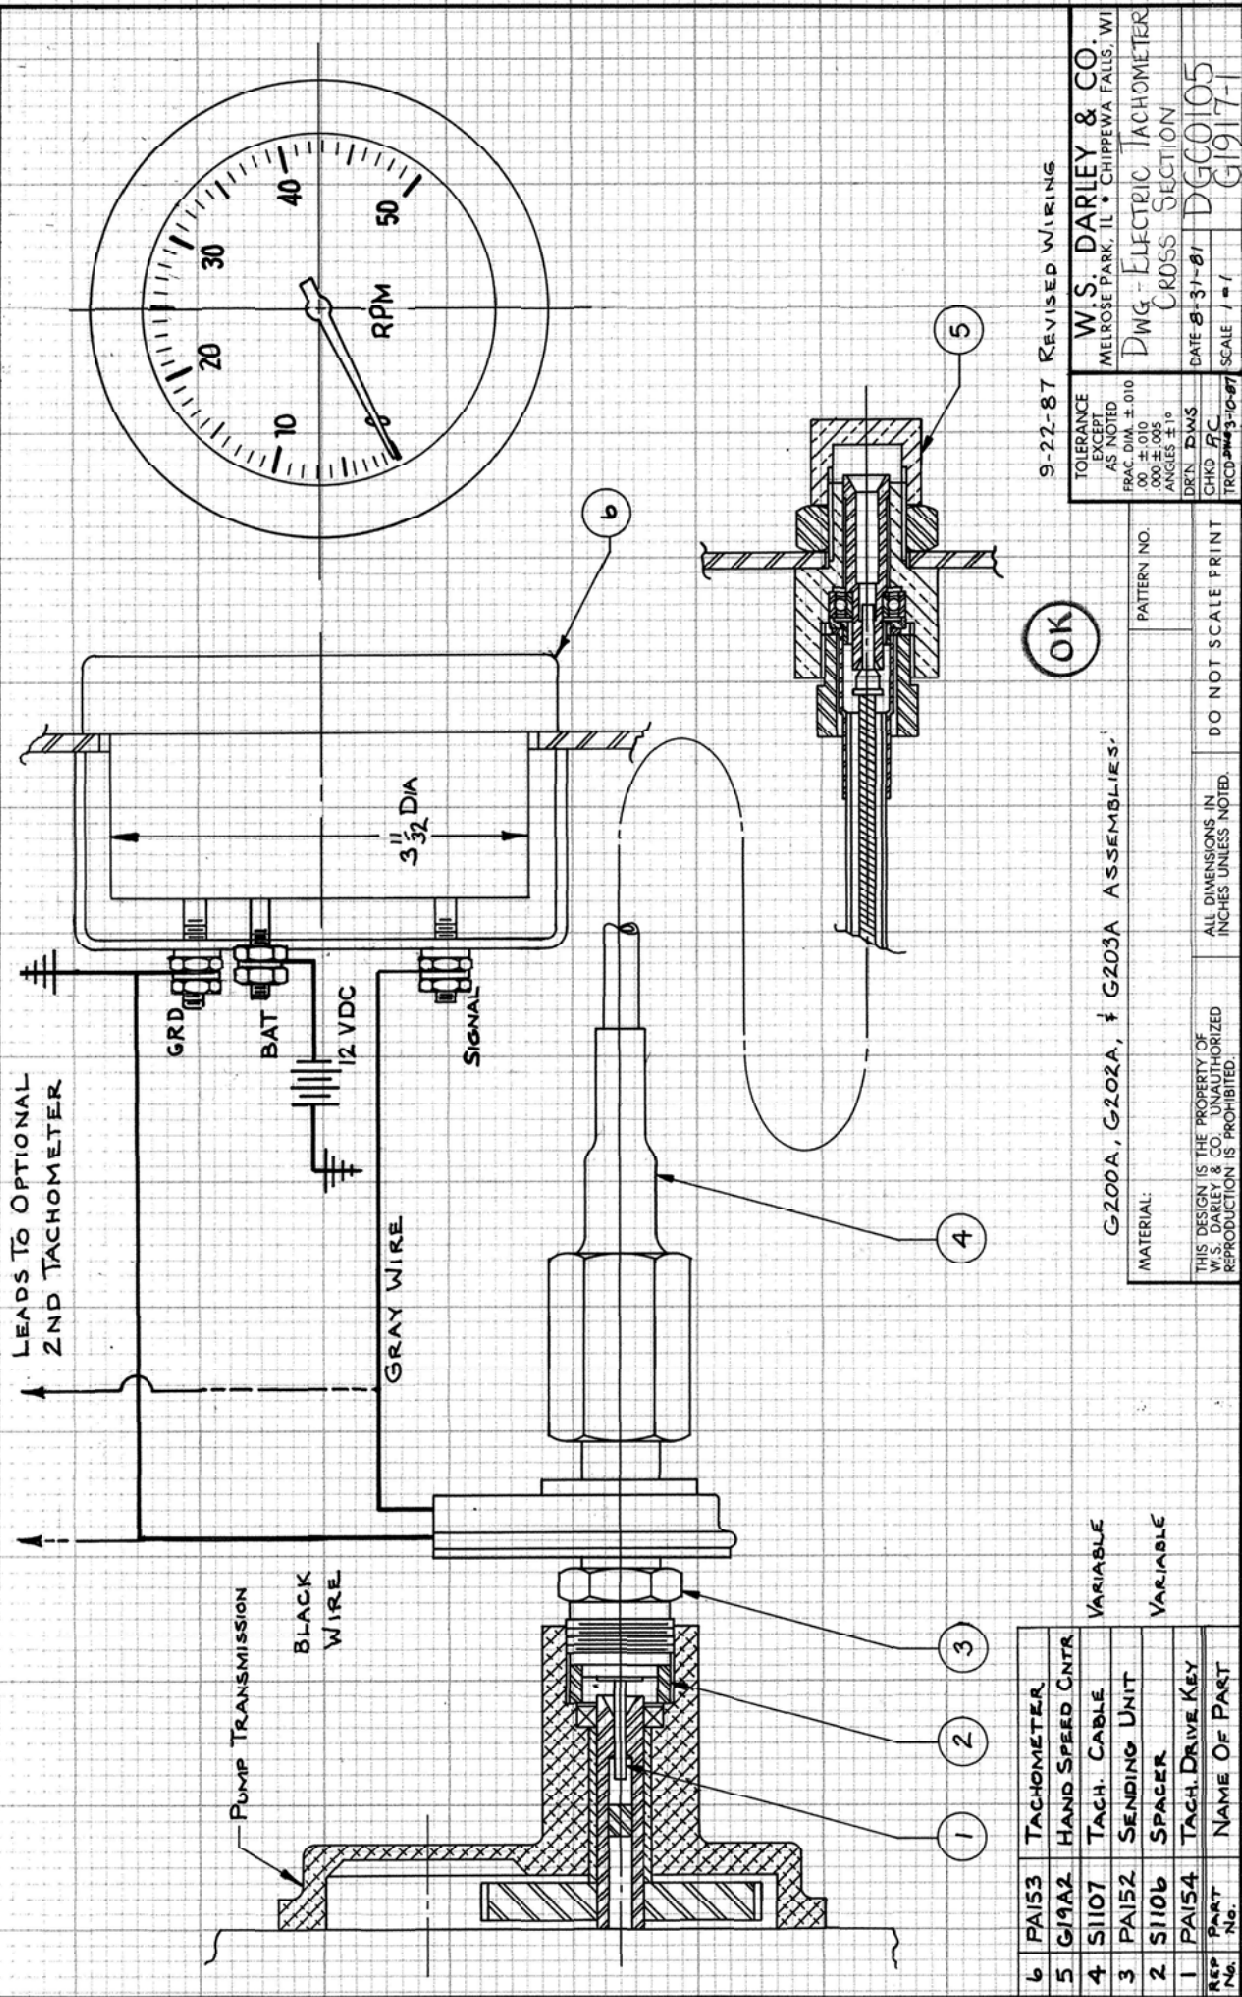

REP. NO.	PART NO.	NAME OF PART
6	PA153	TACHOMETER
5	G19A2	HAND SPEED CNTR
4	S1107	TACH. CABLE
3	PA152	SENDING UNIT
2	S1106	SPACER
1	PA154	TACH. DRIVE KEY

VARIABLE
VARIABLE

W.S. DARLEY & CO.


SWITCHING DIESEL TACHOMETER

1. CAUTION: Disconnect the battery during installation. Tighten nuts on back clamp only slightly more than you can tighten them with our fingers. Six inch pounds of torque is sufficient. Over tightening may result in damage to the instrument and may void your warranty!
2. Location: The tachometer should be located at least 18" from a magnetic compass. Some interference (erratic operation) may be noticed on the tachometer during radio transmission. This will neither damage a Faria tachometer nor affect accuracy when not transmitting.
3. Be certain to use insulated wire not less than 18 gauge that is approved for marine use. It is recommended that insulated wire terminals, preferably ring type, be used on all connections to the tachometer except for the light which requires a 1/4" female blade terminal.
4. The tach sender, DK-3 or equivalent, must be used in conjunction with the tachometer. One DK-3 sender will operate two tachometers. Mount the sender to the pump at the mechanical tachometer drive take-off using the correct drive tip (supplied with DK-3) to properly engage the sender.
5. Using a small screwdriver, SLIGHTLY depress and turn the selector switch on the back of the tachometer to match the tachometer drive take-off (see label on side of tachometer).
DEPRESSING THE SWITCH TOO HARD MAY CAUSE DAMAGE TO THE TACHOMETER.
Be sure the selector switch has locked into the detent at the correct position by slightly rotating the switch back and forth with the screwdriver. (PTO Pump tach ratio = 1/2, Midship Pump tach ratio = 1/1).
6. Cut a 3-3/8" diameter hole in the dash and mount the tach with back clamp supplied.
7. Connect a wire to the tach stud marked "BAT" (battery) and secure with nut and lockwasher. Connect opposite end of the 12 VDC circuit that is activated by the ignition switch.
8. Connect a wire to the tach stud marked "SIGNAL" and secure with a nut and lockwasher. Connect the opposite end to the gray wire of the diesel tachometer sender. Connect the black wire of the diesel tachometer sender to the engine ground.
9. Connect a wire to the tach stud marked "GND" (ground) and secure with a nut and lockwasher. Connect opposite end to the electrical ground.
10. Connect the blade terminal adjacent to the twist-out light assembly to the positive "+" side of the vehicle's instrument lighting circuit. No separate ground is required for lighting.
11. Reconnect the battery.
12. NOTE: To change light bulb, twist black socket assembly one-eighth (1/8) turn counter clockwise until it pops out. Bulb pulls straight out of socket assembly. It is a GE #158 instrument lamp.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**



ATTACH WARNING PLATE
(ASSY AM00700) TO
CONTROL PANEL VIA
REV. NO. 96-115 (REF). Ⓢ

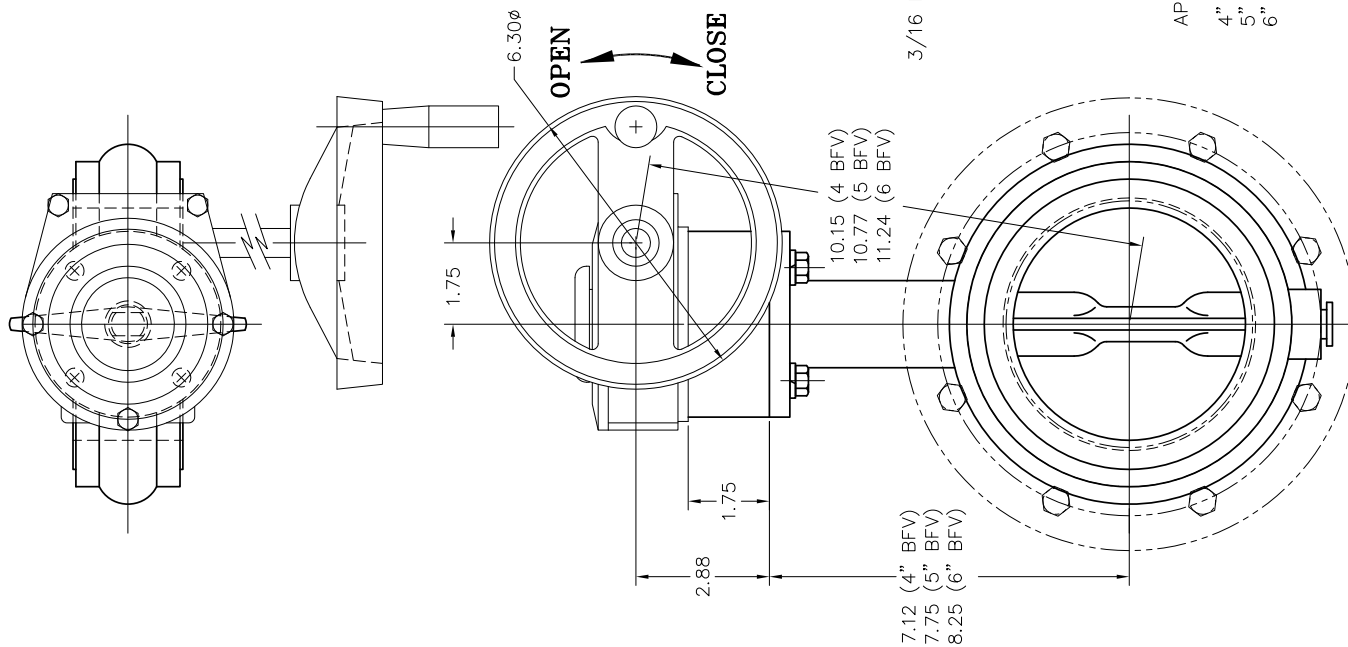

APPROXIMATE WEIGHT

4" - 19 LB = 8.6 KG
5" - 22 LB = 10 KG
6" - 27 LB = 12.2 KG

96-115/9/19/96 Ⓢ ADDED PLATE LMH

PART NO.	DATE	CHANGE
W.S. DARLEY & CO.		
MELROSE PARK, IL - CHIPPENVA FALLS, WI		
DWG - BIRFLY VALVE ASSY		
MANUAL CONTROLLED		
DATE	SEP25,91	
SCALE	1/2	



OLD PART NO.
G2420



CHKD	DWS	TRCD
DO	NOT	SCALE
PRINT		

THIS DESIGN IS THE PROPERTY OF
W.S. DARLEY & CO. AND IS
UNAUTHORIZED REPRODUCTION IS PROHIBITED

DGD0104



ATTACH WARNING PLATE
(ASSY AM00700) TO
CONTROL PANEL VIA
REV. NO. 96-115 (REF). ③

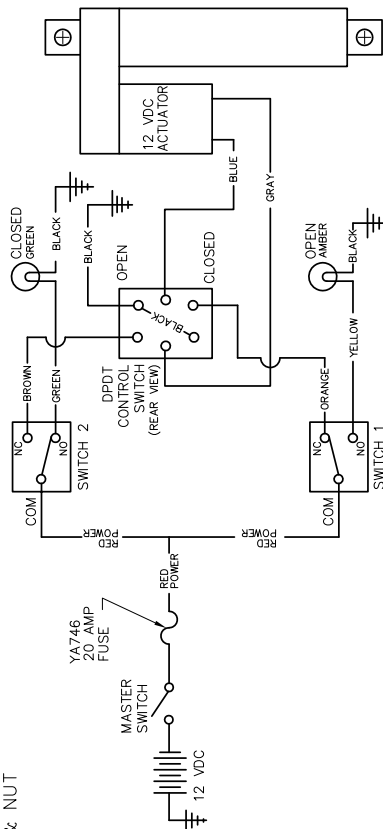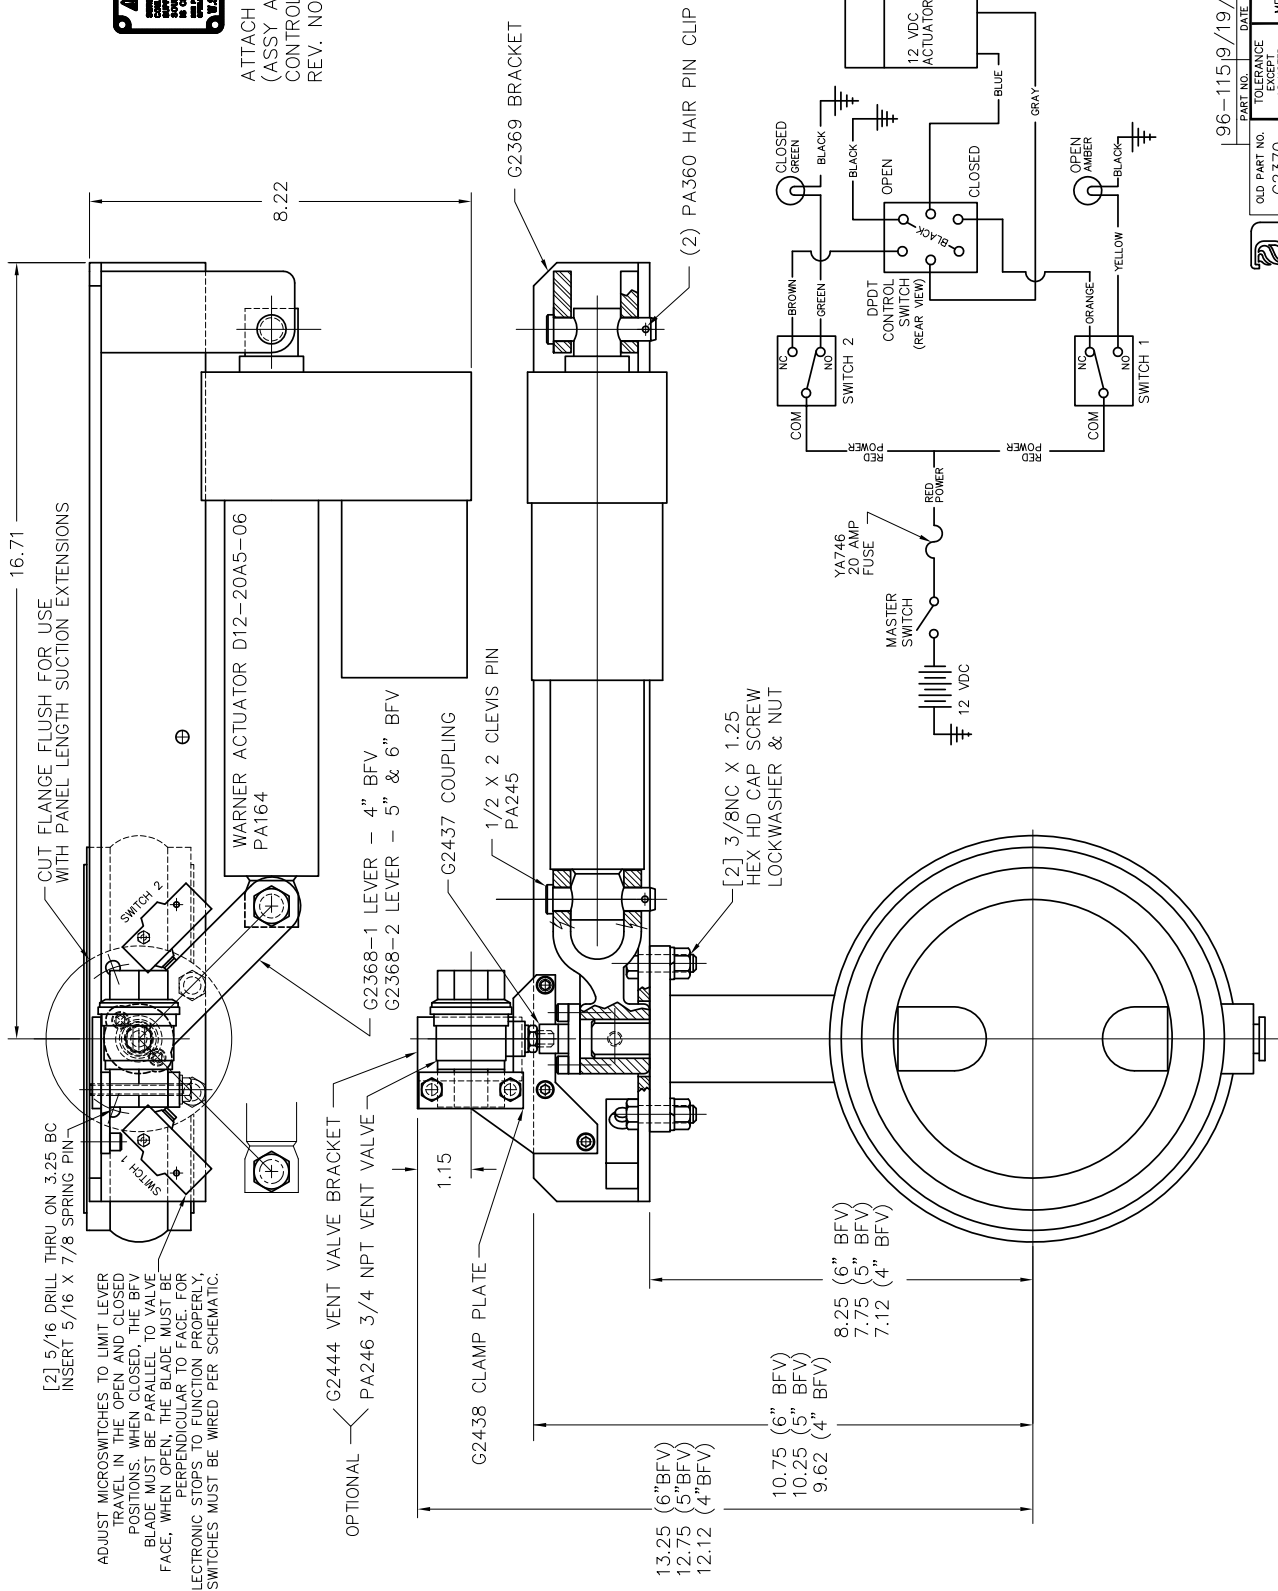

APPROXIMATE WEIGHT = 35 LB = 15.9 KG (6" BFV)
30 LB = 13.6 KG (5" BFV)
27 LB = 12.2 KG (4" BFV)

96-115/19/96 ③ ADDED PLATE LMH	
PART NO.	CHANGE
OLD PART NO.	DATE
G2370	
TOLERANCE EXCEPT AS NOTED	
FRACTIONAL ANGLES 3/16"	
DECIMAL ANGLES 3/16"	
W.S. DARLEY & CO. MELROSE PARK, IL - CHIPPewa FALLS, WI	
DWG - BUTTERFLY VALVE ASSEMBLY ELECTRIC ACTUATED	
DATE NOV20,91	SCALE 1/2
CHKD SETZ	TRCD
DO NOT SCALE PRINT	
ALL DIMENSIONS IN INCHES UNLESS NOTED	
MATERIAL:	
THIS DESIGN IS THE PROPERTY OF W.S. DARLEY & CO. UNAUTHORIZED REPRODUCTION IS PROHIBITED	
DGD0101	


INLET RELIEF VALVE INFORMATION:

ACTUAL PRESSURE RANGE IS 90PSI – 300PSI
THERE MAY BE SOME DIMINISH IN FLOW AT HIGHER
PRESSURE SETTINGS. (SETTINGS BELOW 200 PSI
RECOMMENDED FOR MOST APPLICATIONS).
RELIEF VALVE IS FACTORY SET AT 125 PSI AND
WHEN PRESET AT 125 PSI, THE PRESSURE RELIEF
VALVE SHALL NOT ALLOW A PRESSURE RISE GREATER
THAN 60 PSI AT THE DEVICE INLET WHILE FLOWING A
MINIMUM OF 150 GPM.
THIS VALVE IS NFPA 2009 1901 COMPLIANT PER SECTION
16.6.6.3

ADJUSTMENT INSTRUCTIONS (IF REQUIRED):

ADJUST CENTER HEX COUNTERSUNK HEX HEAD PRESSURE
ADJUSTING BOLT WITH A 1/4" ALLEN WRENCH, 9/16" OR
14 MM SOCKET.

TO SET AT THE DESIRED RELIEF PRESSURE, ADJUST THE ADJUSTING
BOLT HEAD SO THE TOP OF THE BOLT HEAD IS EVEN WITH
THE DESIRED PRESSURE.

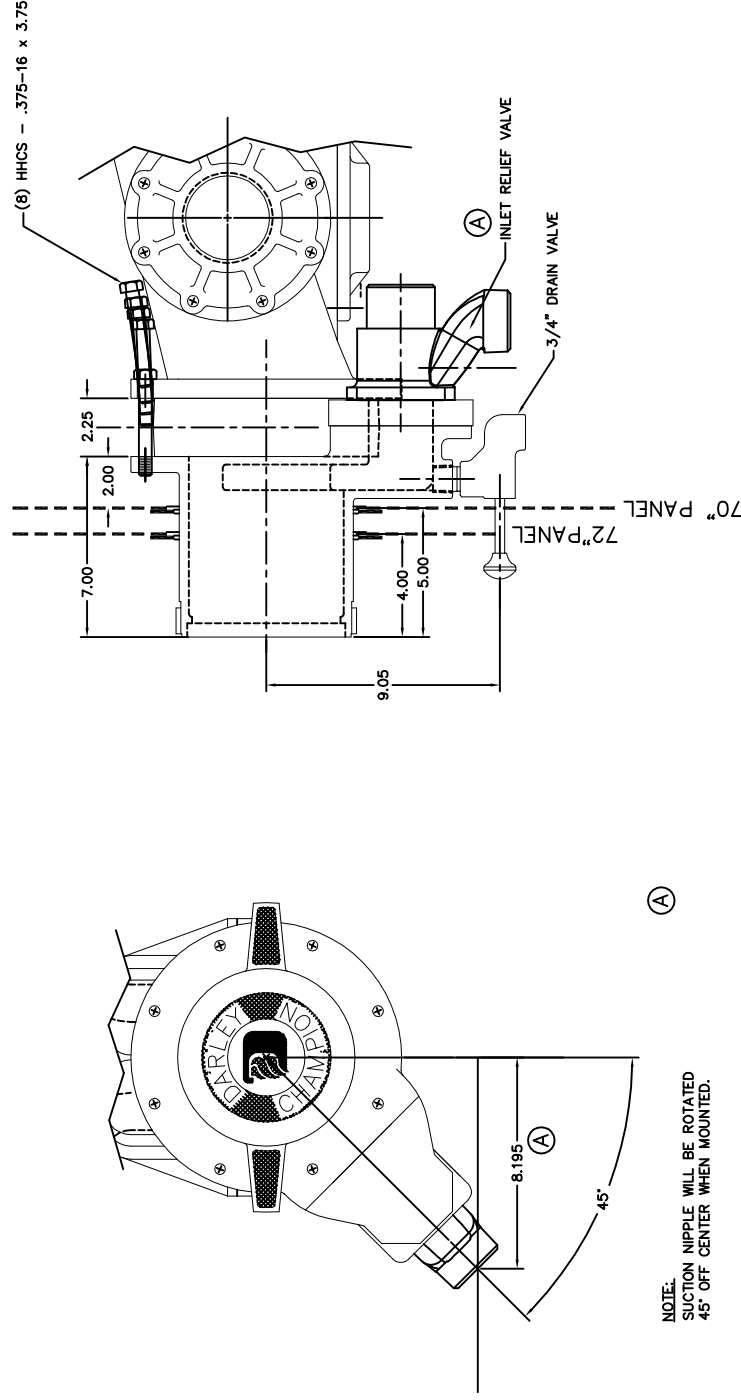

NOTE:
SUCTION NIPPLE WILL BE ROTATED
45° OFF CENTER WHEN MOUNTED.

TYPICAL SUCTION EXTENSION CONFIGURATION FOR EM, LDM, N, & S PUMP

EXTENSION AND NIPPLE
ARE THE SAME FOR 70 & 72"
ASSEMBLES WITH AND
WITHOUT BUTTERFLY VALVES.
IF BFV IS NOT REQUIRED, THEN
K000300 ASSY W/2.25" THICK SPACER IS USED.
USE 1962503 STAINLESS STEEL PANEL TRIM RING



A - #B512	07/18/12	UPDATED DRAWING TO REFLECT USE OF TFT SECTION RELIEF VALVE 8.20 WAS 5.22, UPDATED INFO AND SECTION	
		DATE	ADDITIONAL CHANGE
TOLERANCE EXCEPT AS NOTED		W.S. DARLEY & CO. MELORE PARK, IL - CHIPPEWA FALLS, WI	
FRAC DIM ±.01		INSTR - INLET RV ADJUSTMENT —	
HOLE DIM ±.005			
TAP DIM ±.005			
ANGLES ±1°			
DATE	03/FEB/00	1200572	
DRN	CKE		
CHKD	S/L	SCALE	1/4"
TRVD			

MATERIAL:	PATTERN NO.
-----------	-------------


THIS DESIGN IS THE PROPERTY OF W.S. DARLEY AND CO. - UNAUTHORIZED REPRODUCTION IS PROHIBITED.	ALL DIMENSIONS IN INCHES UNLESS NOTED	DO NOT SCALE PRINT
-----------------------------------------------------------------------------------------------------	------------------------------------------	--------------------

THIS DESIGN IS THE PROPERTY OF W.S. DARLEY AND CO. - UNAUTHORIZED REPRODUCTION IS PROHIBITED.	ALL DIMENSIONS IN INCHES UNLESS NOTED	DO NOT SCALE PRINT
-----------------------------------------------------------------------------------------------------	------------------------------------------	--------------------

REVISIONS				
LTR	DESCRIPTION	DATE	CHG NO.	APPR'D
A	REVISED WIRING TO REFLECT HRNESS25FEB2009	5236		SMS
B	ADDED BUSHING, CLOSE NIPPLE, CHECK VALVE, AND NOTES TO MODEL AND DRAWING	06/22/10	6482	RJG

INSTALLATION INSTRUCTIONS:

- 1) INSTALL TEMPERATURE SWITCH ON SUCTION SIDE OF PUMP, AS NEAR TO IMPELLER AS POSSIBLE, PREFERABLY BETWEEN THE IMPELLER AND THE RELIEF VALVE.
 - 2) INSTALL THE ACTUATOR VALVE ON THE DISCHARGE SIDE OF THE PUMP. ITS LOCATION IS NOT CRITICAL. IT CAN BE MOUNTED DIRECTLY TO THE PUMP OR POSITIONED REMOTELY AND CONNECTED WITH A 3/8 OD MINIMUM LINE.
 - 3) VALVE DOES NOT NEED TO BE MOUNTED VERTICALLY AS SHOWN.
 - 4) *PLUMB THE VALVE OUTLET TO TANK, IF DESIRED, USING 3/8 OD MINIMUM LINE. KEEP ALL LINES AS SHORT AS POSSIBLE.
 - 5) ATTACH ONE LEAD OF VALVE TO THE TERMINAL ON THE TEMPERATURE SWITCH. ATTACH THE OTHER LEAD TO A FUSED VOLTAGE SOURCE. IF DESIRED, THE TEMPERATURE SWITCH CAN ALSO BE USED TO CONTROL A LIGHT ON THE PANEL NOTIFYING THE OPERATOR THAT OVERHEATING IS OCCURRING AND THE UNIT HAS BEEN ACTIVATED.
 - 6) TO TEST THE VALVE: WITH PUMP RUNNING, JUMP THE TERMINALS ON THE TEMPERATURE SWITCH. IF THE VALVE DOES NOT DISCHARGE, IT MAY BE INSTALLED BACKWARDS OR WIRING CONNECTIONS MAY BE INCORRECT.
- * CONNECTION TO TANK MAY CAUSE TANK TO OVERHEAT, REDUCING THE EFFECTIVENESS OF THIS DEVICE.
 - TO PREVENT FREEZING DAMAGE, WHEN CONNECTING TO TANK, THE VALVE SHOULD BE MOUNTED ON THE TANK, BUT ABOVE THE PUMP.
 - IF THE VALVE IS TO DISCHARGE TO ATMOSPHERE, THE VALVE SHOULD BE MOUNTED ON, OR AS CLOSE TO THE PUMP AS POSSIBLE.



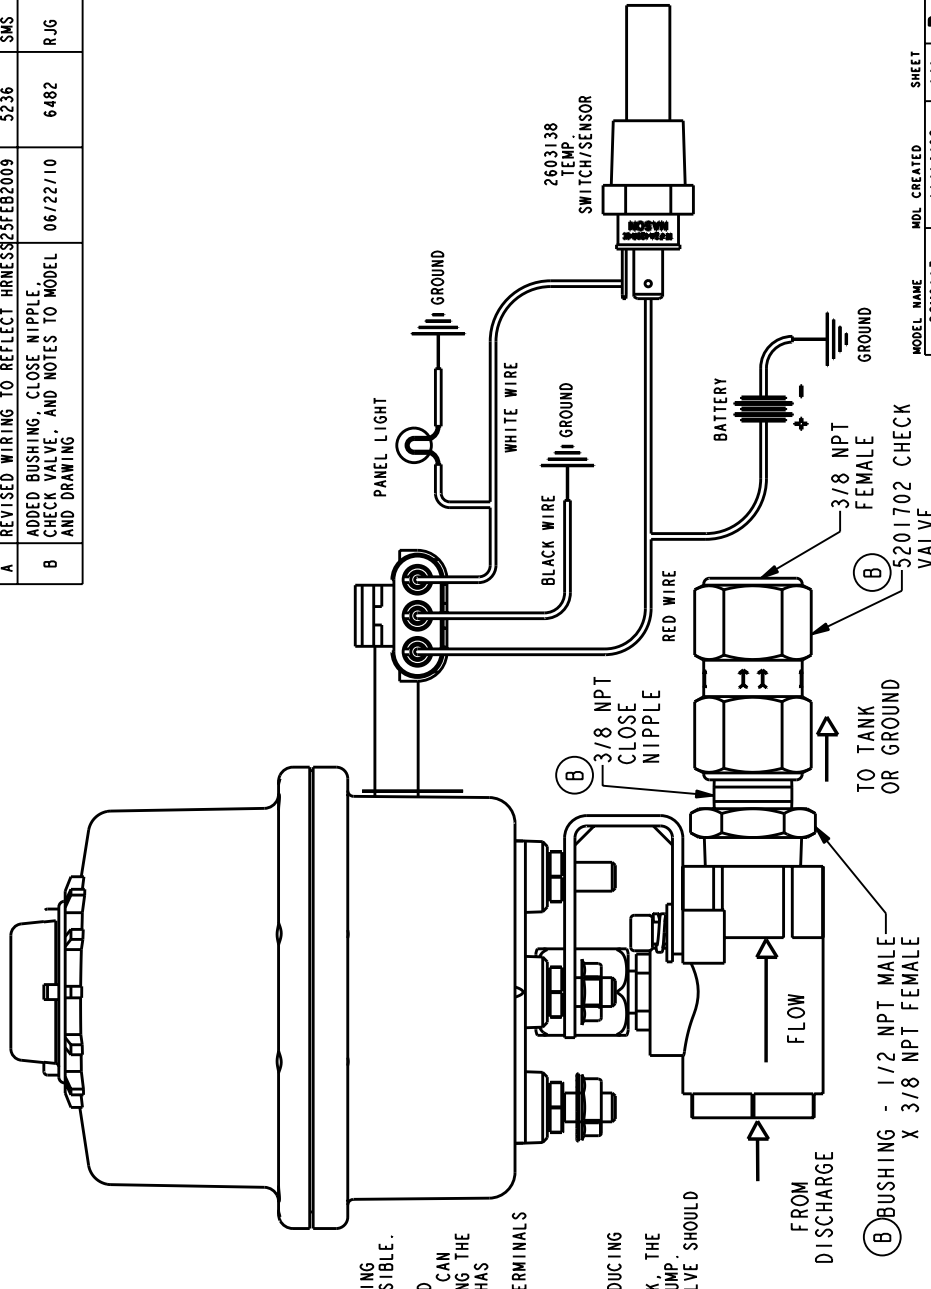


REMOVE SHARP EDGES		INCH (MILLIMETER)	
MATERIAL DESCRIPTION:		ALL DIMENSIONS IN INCHES UNLESS NOTED	
THIS DESIGN IS THE PROPERTY OF W.S. DARLEY AND CO. UNAUTHORIZED REPRODUCTION IS PROHIBITED		DO NOT SCALE PRINT	
DR'N RJG CHKD DWS TRCD		SCALE 1/1	
DATE 14-NOV-08		DGM0117	
TOLERANCE EXCEPT AS NOTED -00 ± 0.03 ANGLES ± 1°		OLD PART NO.	
PATTERN NO.		MATERIAL NO.	
W.S. Darley & Co. ITASCA, IL - CHIPPewa FALLS, WI		DWG - THERMAL RELIEF SYSTEM KZCO VALVE, 2603138 TEMP. SENSOR	
MODEL NAME DGM0117		MDL CREATED 11/14/08	
SHEET 1/1		B	


REVISIONS			
LTR	DESCRIPTION	DATE	CHG NO. APPR'D

SUPPLIED BY KZCO

White: Switched 12VDC (+) - Relay Energized "CLOSE"
 Black: Constant 12VDC (-)
 Red: Constant 12VDC (+)

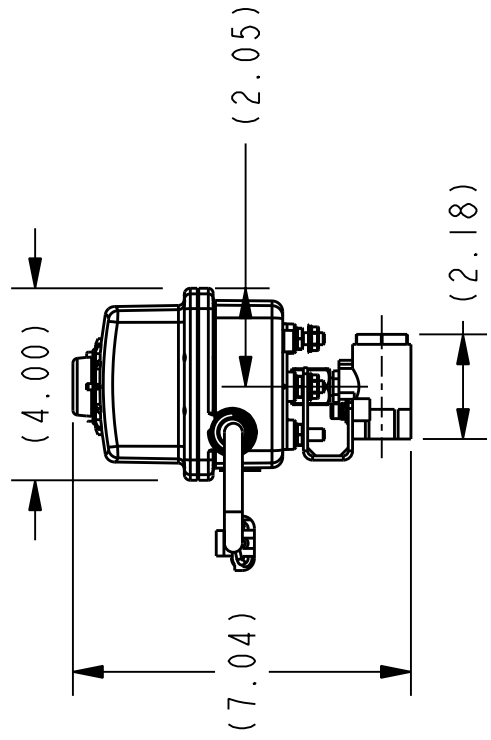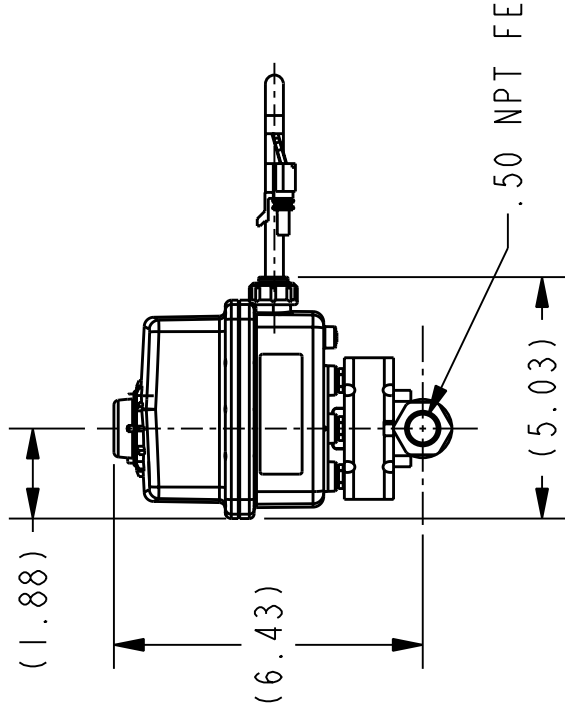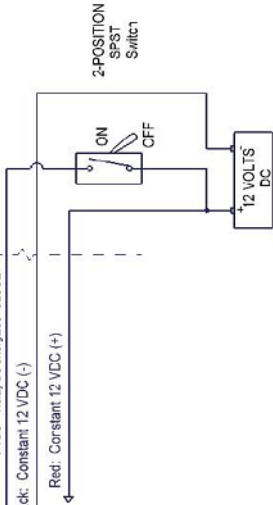

REMOVE SHARP EDGES

 

OLD PART NO.

TOLERANCE
 EXCEPT
 AS NOTED

W.S. Darley & Co.
 ITASCA, IL - CHIPPEWA FALLS, WI

MATERIAL DESCRIPTION:
 KZCO 84D23-10D20-P01

VALVE - ACTUATED, 12VDC, .50NPT FE
 KZCO 84D23-10D20-P01

THIS DESIGN IS THE PROPERTY OF
 W.S. DARLEY AND CO. - UNAUTHORIZED
 REPRODUCTION IS PROHIBITED

DO NOT SCALE PRINT

ALL DIMENSIONS IN
 INCHES UNLESS NOTED

DATE 13-Nov-08
 SCALE 1/4

5209401

MODEL NAME	MDL CREATED	SHEET
5209401	11/13/08	1/2

A

INPUT/OUTPUT POWER = 1224 VDC
 1 - BLACK - POWER (-) NEGATIVE
 2 - RED - POWER (+) POSITIVE
 3 - WHITE - SIGNAL (+) POSITIVE TO OPEN
 4 - *SEE

DIP SW 4 ON

RED MOTOR LEAD TO RED DOT

PIN A - RED
 PIN B - BLACK
 PIN C - WHITE

SCALE .000

PROGRAM NOTE:

MA500 SET DATA
 CONTROL INPUT = 1
 FEEDBACK = 0
 OPERATION = 0
 MOTOR = MC
 SPEED CT = 0.8
 ZEROSET = 135
 RANGE TOLERANCE = 1
 ROTATION = CCW
 ACTUATOR RANGE = 0.00/0.00
 DESIGN VOLTAGE = E
 DIP SW = 3
 LABEL = K200
 OPTIONS = 0
 PLUG TYPE = P
 TEST PLUG =

DATE 2008-05-29
 DESIGNED L. FREDERICK
 DRAWN W. FREDERICK
 APPROVED A. KOTTAS

SCALE .000
 1 OF 1

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE




MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

MA500 ACTUATOR, EH3, SOLID STATE

8	1	EH-502	LABEL, EH ACTUATOR, 2.5" X 1", THERMAL TRANSFER, WHITE	NO. MATERIAL
7	2	OX-222	NUT, HEX HEAD, SERRATED FLANGE, .250-20 UNC-2B	STAINLESS_STEEL_TYPE_303
6	4	EH3-135	STUD, 1/4-20 X 1/2 MTG	STAINLESS_STEEL_TYPE_303
5	1	800018	HARNISS, 60A, 3ST, WP3T, 22.5"	
4	1	EH3-115-Y	FLAG, YELLOW	POLYPROPYLENE_TALC_20
3	1	800468	PCB ASSY, EH3 24VDC 60AD/60DF	
2	1	EH3-110	GEAR MOTOR, EH3 SERIES M1 18 RPM @ 12VDC	
1	1	485-0005	CASE KIT, EH3 IM DOME NYLON M1 & N1 MTR	
DET	QTY	PART NUMBER	DESCRIPTION	MATERIAL

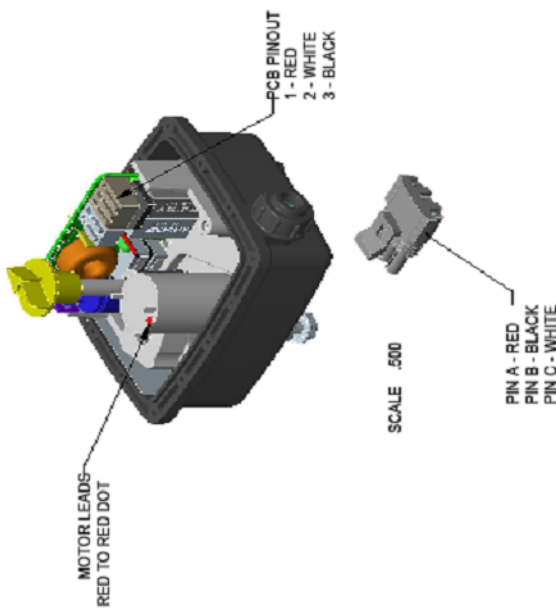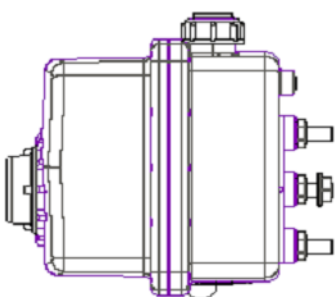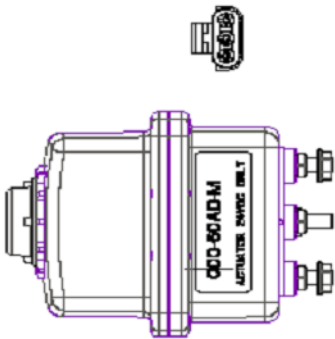

MASRO SET DATA
CONTROL INPUT = 1
FEEDBACK = 0
OPERATION = 0
MOTOR = M
SPEED CT = 0.8
ZEROSSET = 135
RANGE TOLERANCE = 1
ROTATION = CC091
ACTUATOR RANGE = 0.0010.00
DESIGN VOLTAGE = D
DIP SX =
LABEL = KZCO
OPTIONS = 0
PLUG TYPE =
TEST PLUG =

REVISION	REVISION ECO	REVISION/REVISION DATE	REVISION/REVISION BY
1.1	1	3/28/2008 1:49:38 PM	wfeddie

DESIGNED BY: L. EROKAMP DRAWN BY: W. FEDDE APPROVED BY: A. KOTTAS	DATE: 2007-04-10	KZCO inc. 33000 PARKWAY GREENSBORO, NC 27409 PHONE: 336.402.9443 FAX: 336.402.9443
DESIGN: 247, 18MCM IN SUP. AREA: 183.39 SQ IN VOLUME: 12.00 CU IN	SCALE: .500	TITLE: ACTUATOR, EH3, 8S @24VDC
SIZE: B	PART NO: 000-60AD-M	REVISION: 1.1
MATERIAL:	DRAWING NO: 000-60AD-M	SHEET: 1 of 1

