

Operator's Manual Table of Contents For Darley Midship Type LDM Fire Pump

	<u>Page #</u>
Description, Operation & Maintenance, & Lubrication-----	1200531 1
Related Drawings-----	DLC0100 2
	DLC0608 3-4
	DLC0102 5
	DLC0607 6-7
	DLD1300 8
	DLM0300 9
	DNM0000 10
 Mechanical Seal -----	 1200583 11-12
Seal Installation Instructions-----	1201040 13-14
Packing Adjustment-----	1200504 15-16
	1200514 17
Pump Shifting Procedure -----	1200515 18
Manual transmission / Automatic Transmission-----	1200507 19-21
Pump Shift "Air Shift"-----	DGS0500 22
	DGC0701 23
Wiring Schematics Pump Shift-----	DGC0104 24-27
High Pressure Stage-----	1200511 28
	DLC0104 29
General Operation-----	1200509 30
	1200510 31-32
	1201500-1201502 33-49
Electric Primer -----	1200512 50-51
	DVC0207 52
	DVC0209 53
Multiple Drain Valve -----	1204506 54
	DGC0903 55
Ball Valve-----	1200000 56
	DGC0100 57
Relief Valve "Suction / Discharge Valve"-----	1200508 58-59
	DGC0115 60
	1200503 61-62
	DGC0141 63-64
	DGD0800 65
	1201002 66
Tachometer -----	DGC0105 67
	1201001 68
Butterfly Valve -----	DGD0104 69
	DGD0101 70
	1200572 71
Pump Overheat Protection -----	DGM0117 72
	5209401 73-74
	5209402 75-77

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

This manual is for DARLEY FIRE PUMP:

Model: LDM Pump Serial Number: _____

Description of Pump Type

The **Type LDM** pump is a high speed, single stage, centrifugal pump.

Inherent characteristics are compactness, light weight, high efficiency, and a wide range of pumping capabilities.

This pump is normally midship mounted

Description of Pump Type

The Type LDM pump is a high speed, single stage, UL rated, centrifugal Fire Fighting Pump with an integral belt driven rotary screw air compressor for compressed air foam generation.

Inherent characteristics of the LDM are compactness, lightweight, high efficiency, and a wide range of pumping capabilities.

The LDM pump is midship mounted and powered via the chassis engine/transmission.

Operation and Maintenance of Type LDM Fire Pump

Operation of Pump

The pump gearshift consists of a sliding clutch gear splined to the transmission shaft. The sliding clutch gear can be moved forward to engage the pump clutch gear (PUMP position) or to the rear engaging the rear drive shaft (ROAD position). A neutral position is half way between.

The sliding clutch gear is moved either by direct mechanical linkage from a shift lever, or an air powered cylinder controlled by a selector switch. The shift lever must be moved all the way and locked into either ROAD position to drive the truck, or PUMP position to power the pump.

The truck clutch must always be disengaged to stop the rotation of the truck transmission output shaft before shifting into either ROAD or PUMP gear to prevent clashing and damaging the gear teeth. With the manual shift lever, a butt tooth position of gears may be encountered occasionally preventing engagement. If this occurs, move pump shift lever to neutral (half way) position, engage truck clutch momentarily, then disengage the truck clutch and try to shift the pump again.

The pump is always operated with the truck transmission in direct (high) gear, such as 4th on a 4-speed, or 5th on a 5-speed manual transmission, and D or 2.5 on an automatic transmission.

Review the following instruction sheet "*PUMP SHIFTING PROCEDURE*" for step-by-step shifting instructions.

Pump Gear Case Lubrication

Maintain gear case oil level to a point between the two grooves on the oil level dipstick. When checking oil level, dipstick must be screwed all the way in for accurate readings.

Check the oil level every 25 hours or every three months. Change the oil every 50 hours or 6 months.

Service the pump transmission with SAE 80W/90, GL4/GL5 gear lubricant. Do not use grease.



CAUTION: Do not overfill. Overfilling may cause excessive gear case operating temperatures.

Inject grease in zerk fittings on the driveline universal joints once a year.



Darley
Pump Division
1051 Palmer St.
Chippewa Falls, WI 54729
715-726-2650

Technical Bulletin on Midship Mounted Fire Pump Drivelines

1202519

FEB, 25 2016


The driveline torque rating is 19,230 lb-ft (26,072 Nm) – exceeding this torque rating can result in a driveline failure.


Great care must be taken in the layout of pump drivelines. Interference and driveline vibration must be considered. An experienced installer with knowledge of driveline considerations, proper layout and recommended guidelines should be utilized as well as proper CAD systems for driveline layouts. Installation of the driveline should not occur until a proper analysis is performed by either a qualified driveline specialist or W.S. Darley. W.S. Darley utilizes, can distribute and can train qualified individuals to use the Allison Multiple Joint Driveline Analysis program.


W.S. Darley requires that midship driven pumps have at most 500 radians per second² torsional vibration, at most 1000 radians per second² inertial drive torsional vibration and at most 1000 radians per second² inertial coast torsional vibration, as calculated by the Allison Multiple Joint Driveline Analysis program, for a completed driveline installation. A completed driveline installation includes the entire multi-driveshaft assembly from the power source on apparatus transmission output flange to the input flange of the rear axle.

Failure to design and analyze a proper driveline layout could result in severe injury and damage to equipment, including but not limited to: the water pump, the water pump transmission, drive tubes, hanger bearings, u-joint crosses, gears, the rear differential, and the main truck transmission.

Questions can also be directed to our Customer Service Department at
800-634-7812 or 715-726-2650.

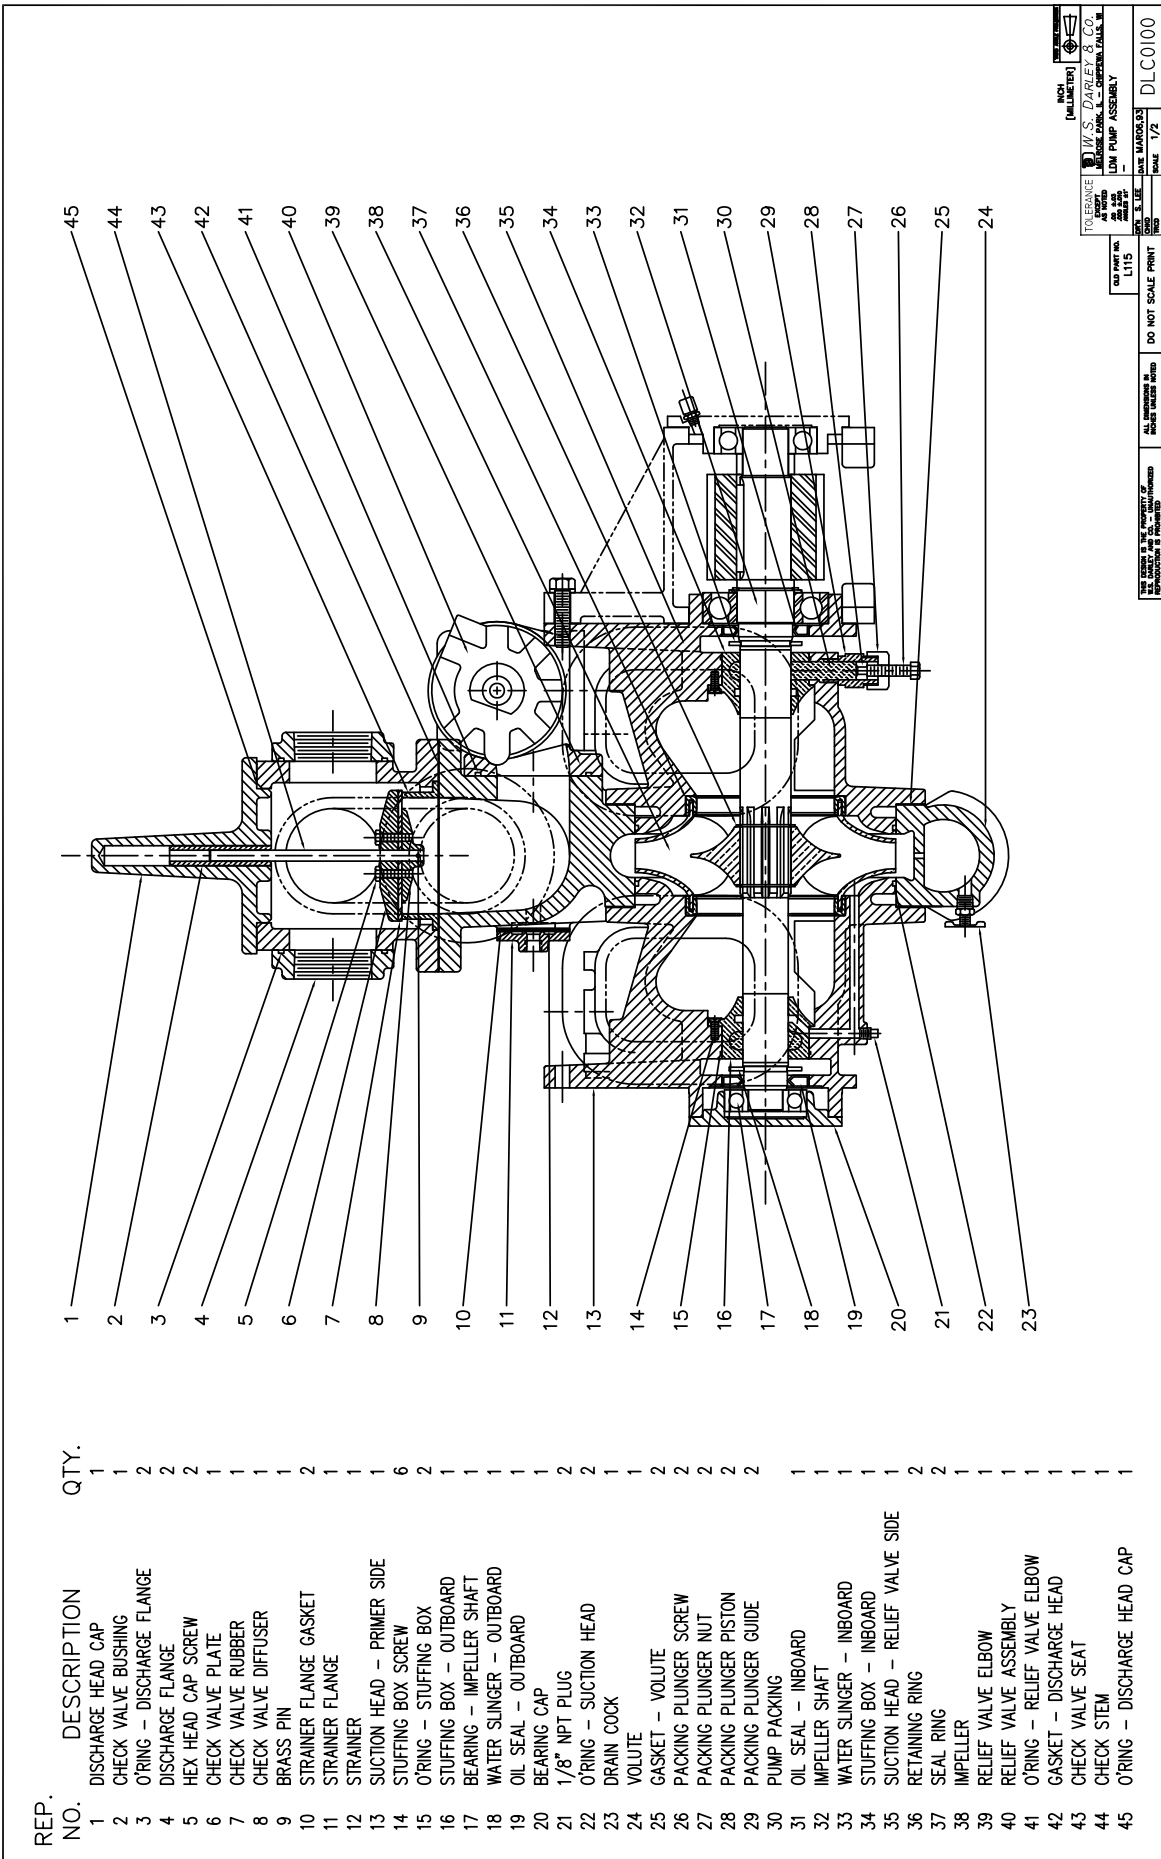


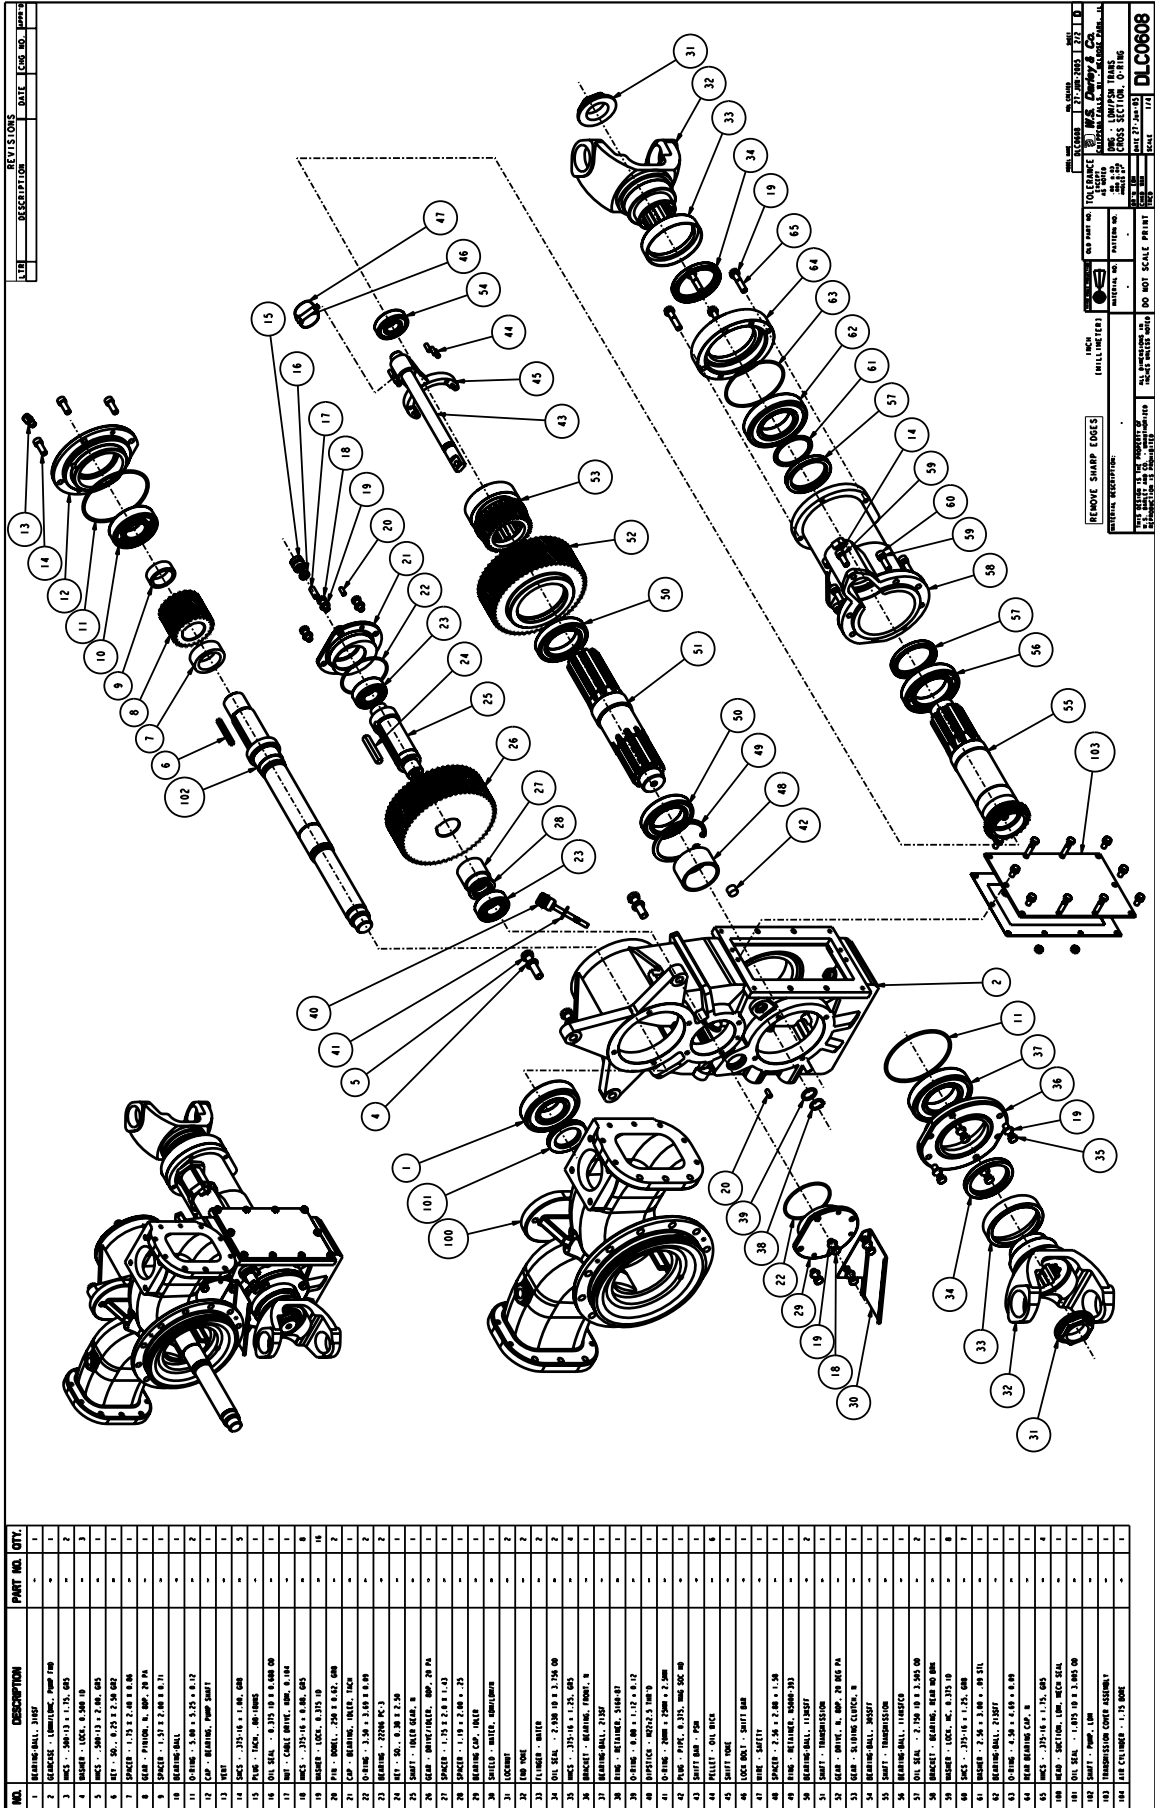

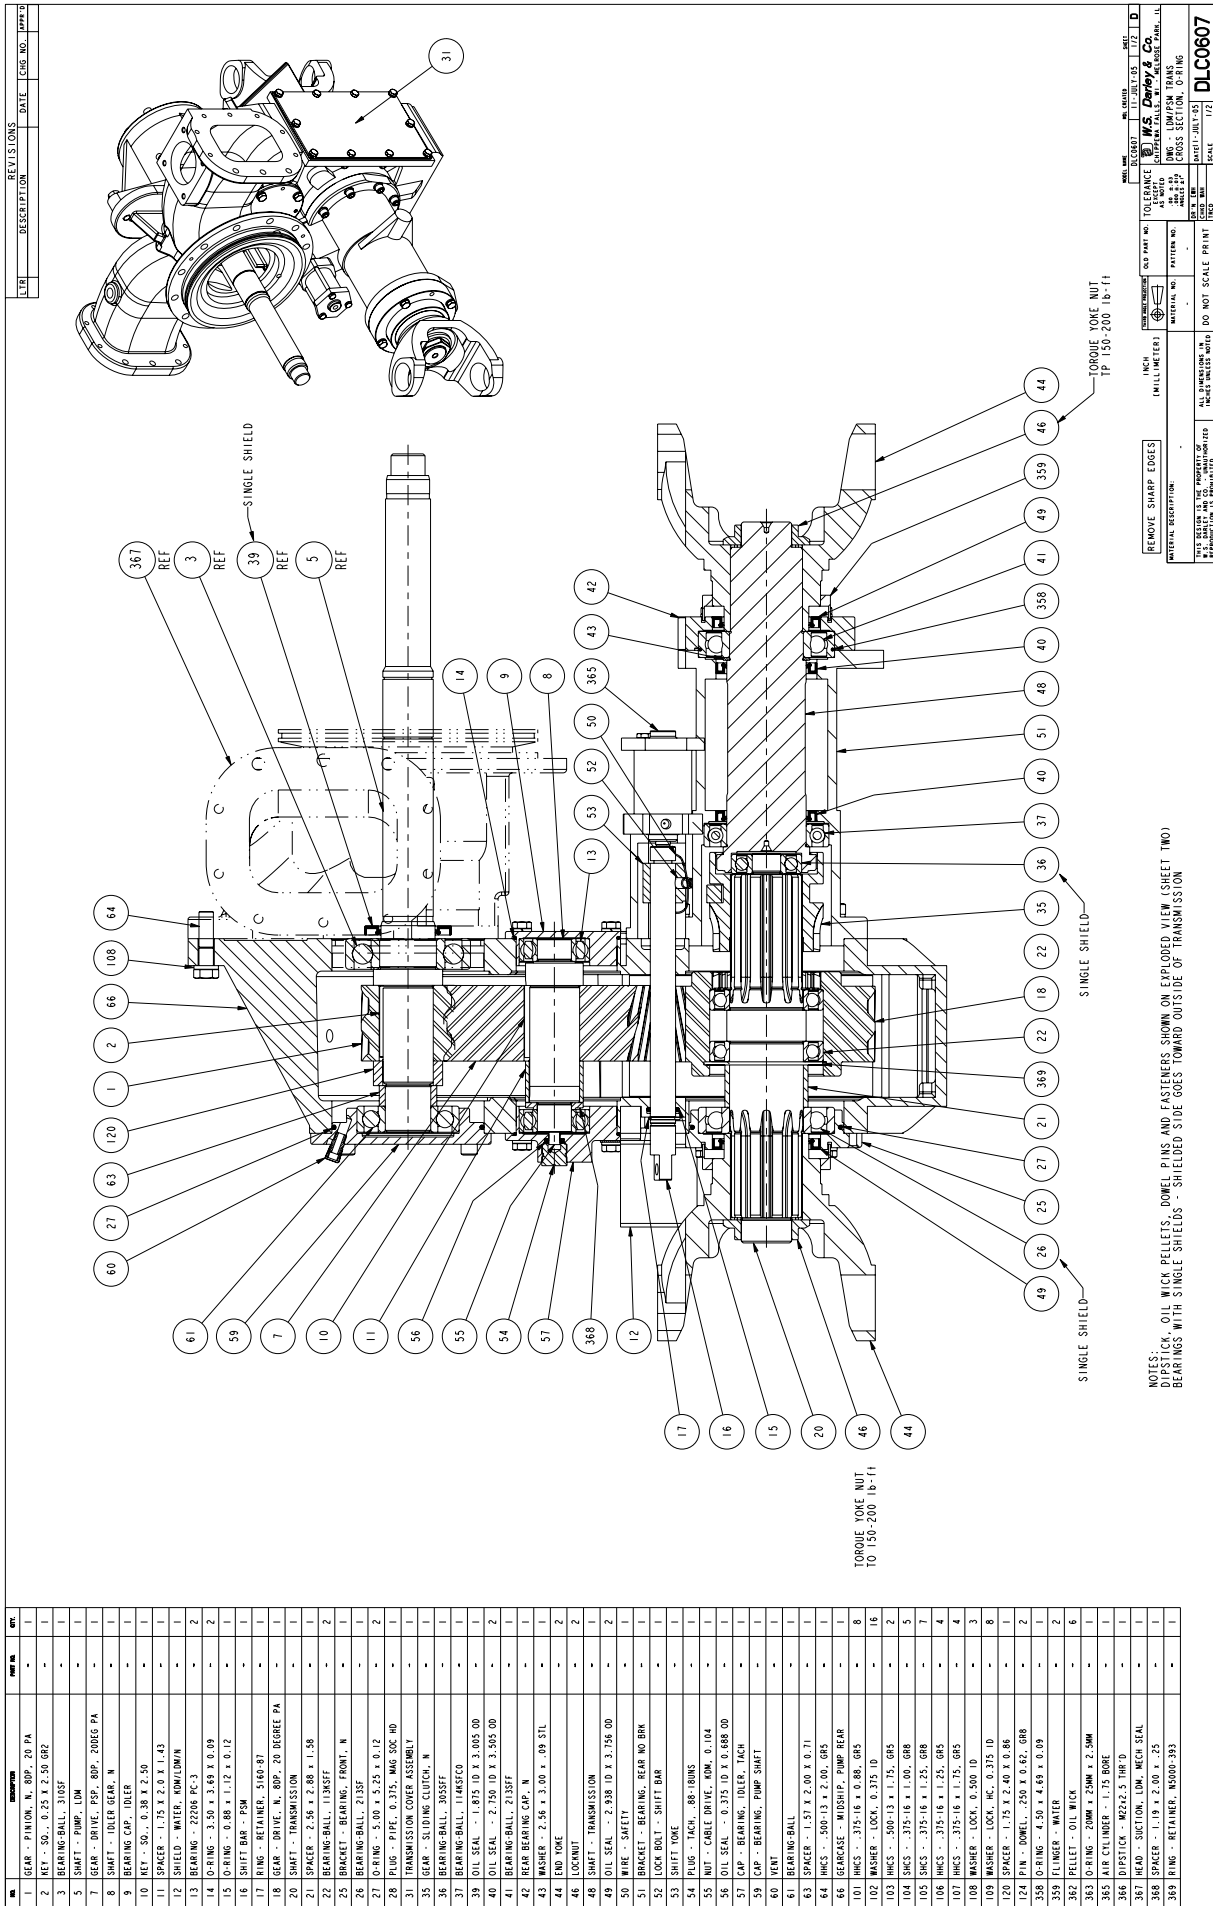

NOTES:
DIPSTICK, OIL WICK PELLETS, DOWEL PINS AND FASTENERS SHOWN ON EXPLODED VIEW (SHEET TWO)
BEARINGS WITH SINGLE SHIELDS - SHIELDED SIDE GOES TOWARD OUTSIDE OF TRANSMISSION

REV. NO.	DATE	DESCRIPTION	BY	CHK	APP
1	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
2	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
3	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
4	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
5	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
6	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
7	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
8	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
9	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
10	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
11	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
12	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
13	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
14	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
15	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
16	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
17	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
18	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
19	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
20	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
21	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
22	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
23	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
24	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
25	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
26	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
27	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
28	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
29	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
30	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
31	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
32	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
33	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
34	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
35	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
36	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
37	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
38	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
39	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
40	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
41	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
42	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
43	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
44	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
45	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
46	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
47	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
48	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
49	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
50	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
51	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
52	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
53	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
54	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
55	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
56	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
57	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
58	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
59	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
60	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
61	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
62	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
63	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN
64	11 JUL 85	REVISED TO 11 JUL 85	W. J. DUNN	W. J. DUNN	W. J. DUNN

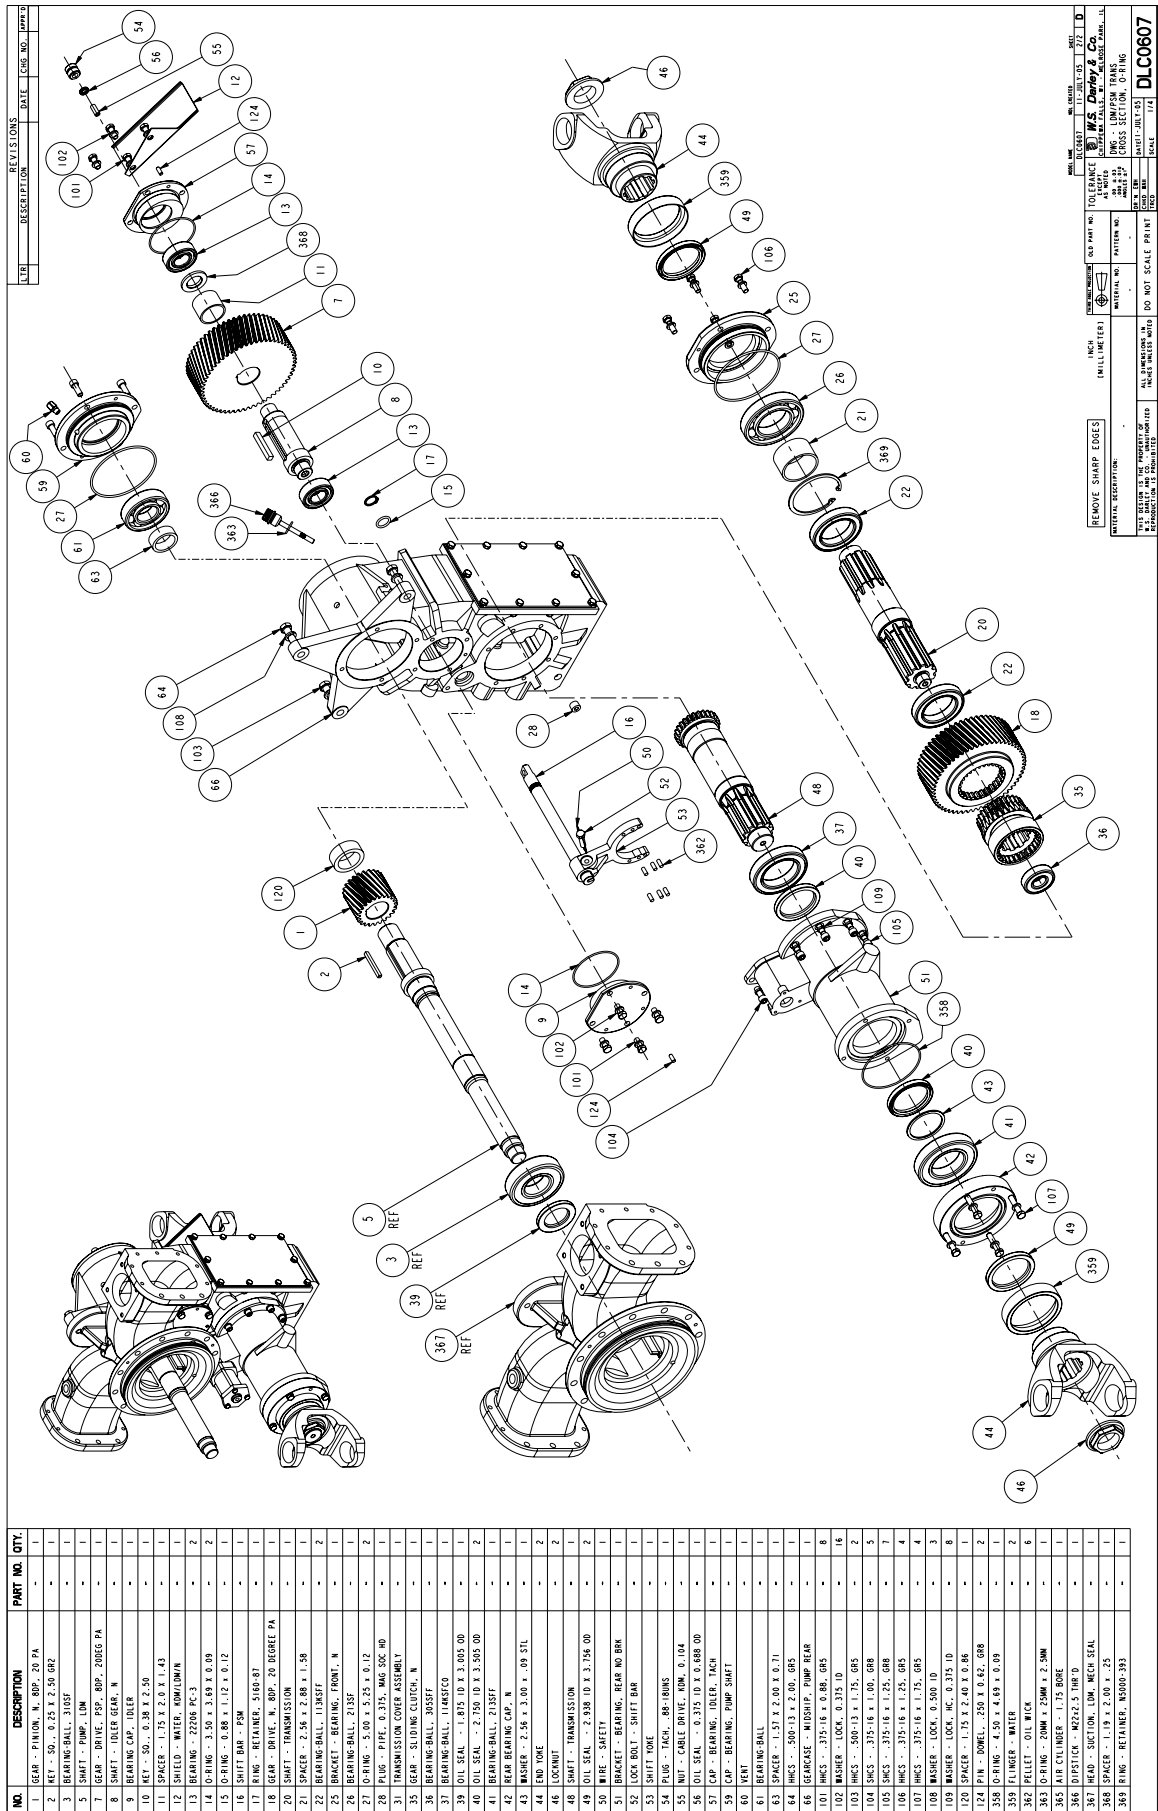



Prepared By: EAP
Revised By: EAP
Approved By: TED

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

YORK SERIES	A	B	C-C
1550	5.75 [146.1]	28.90 [734.1]	2.25 [57.2]
1600	6.12 [155.4]	29.64 [752.9]	1.88 [47.8]
1710	5.63 [143.0]	28.66 [728.0]	2.38 [60.5]
1760	6.00 [152.4]	29.40 [746.76]	2.00 [50.8]
1810	5.88 [149.4]	29.16 [740.7]	2.12 [53.8]

SEE DRAWING DMD000 FOR
DRIVE LINE PART DETAILS

BODY PANEL DIMENSIONS			
BW	NB	DB	
70 [1778]	5 [127]	13 [330]	
72 [1829]	4 [102]	14 [356]	

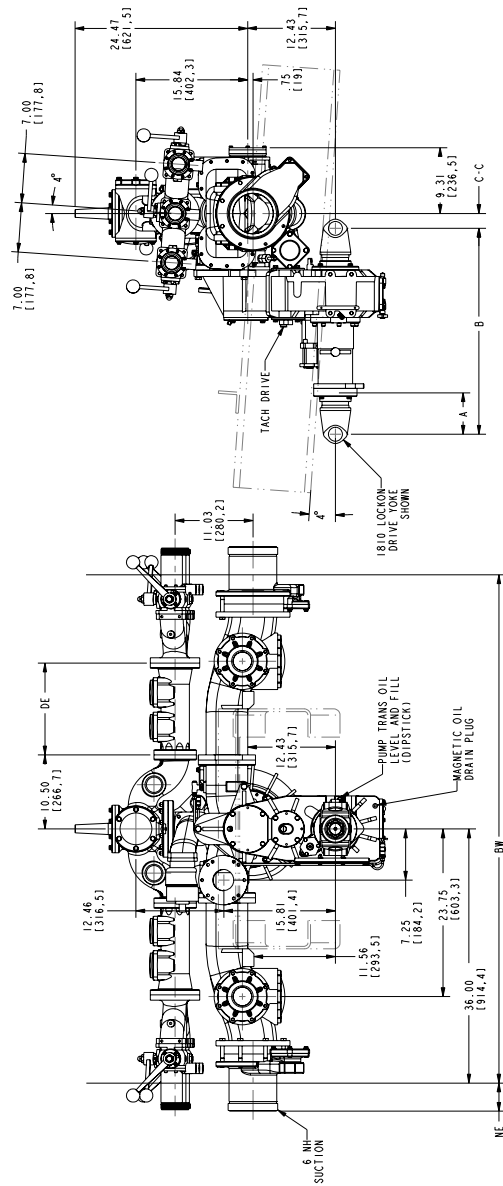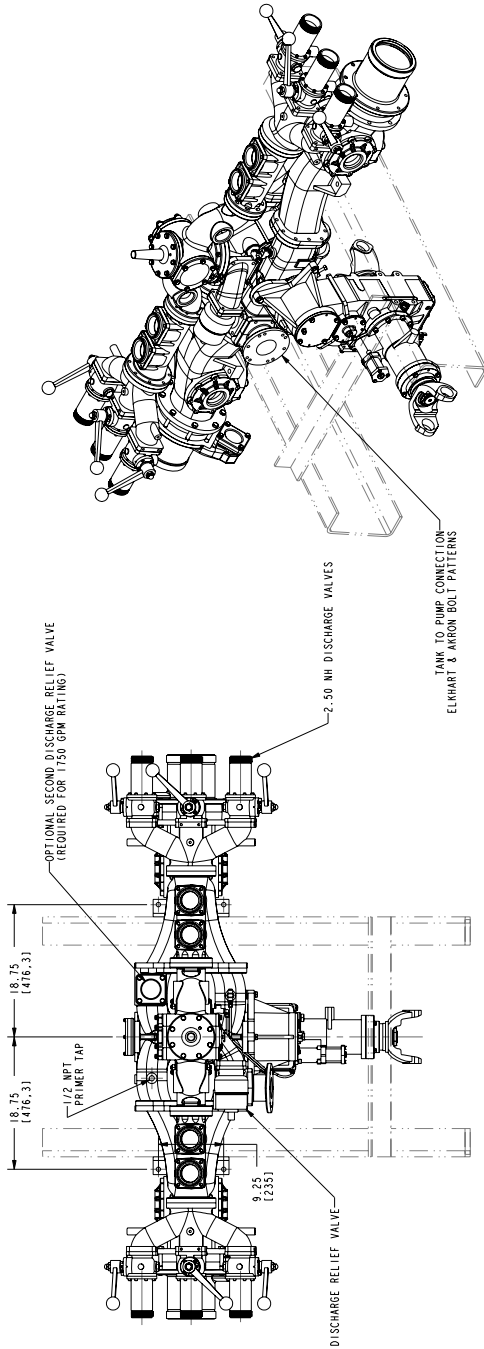

FRONT VIEW

REAR VIEW

SEE DETAIL DRAWING
BRACKET DIMENSIONS

NET WEIGHT: 1200 LBS

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531


REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531


REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
REV	DESCRIPTION	DATE	CODE NO.
1	REVISED	05/09/07	1200531

REVISIONS			
-----------	--	--	--

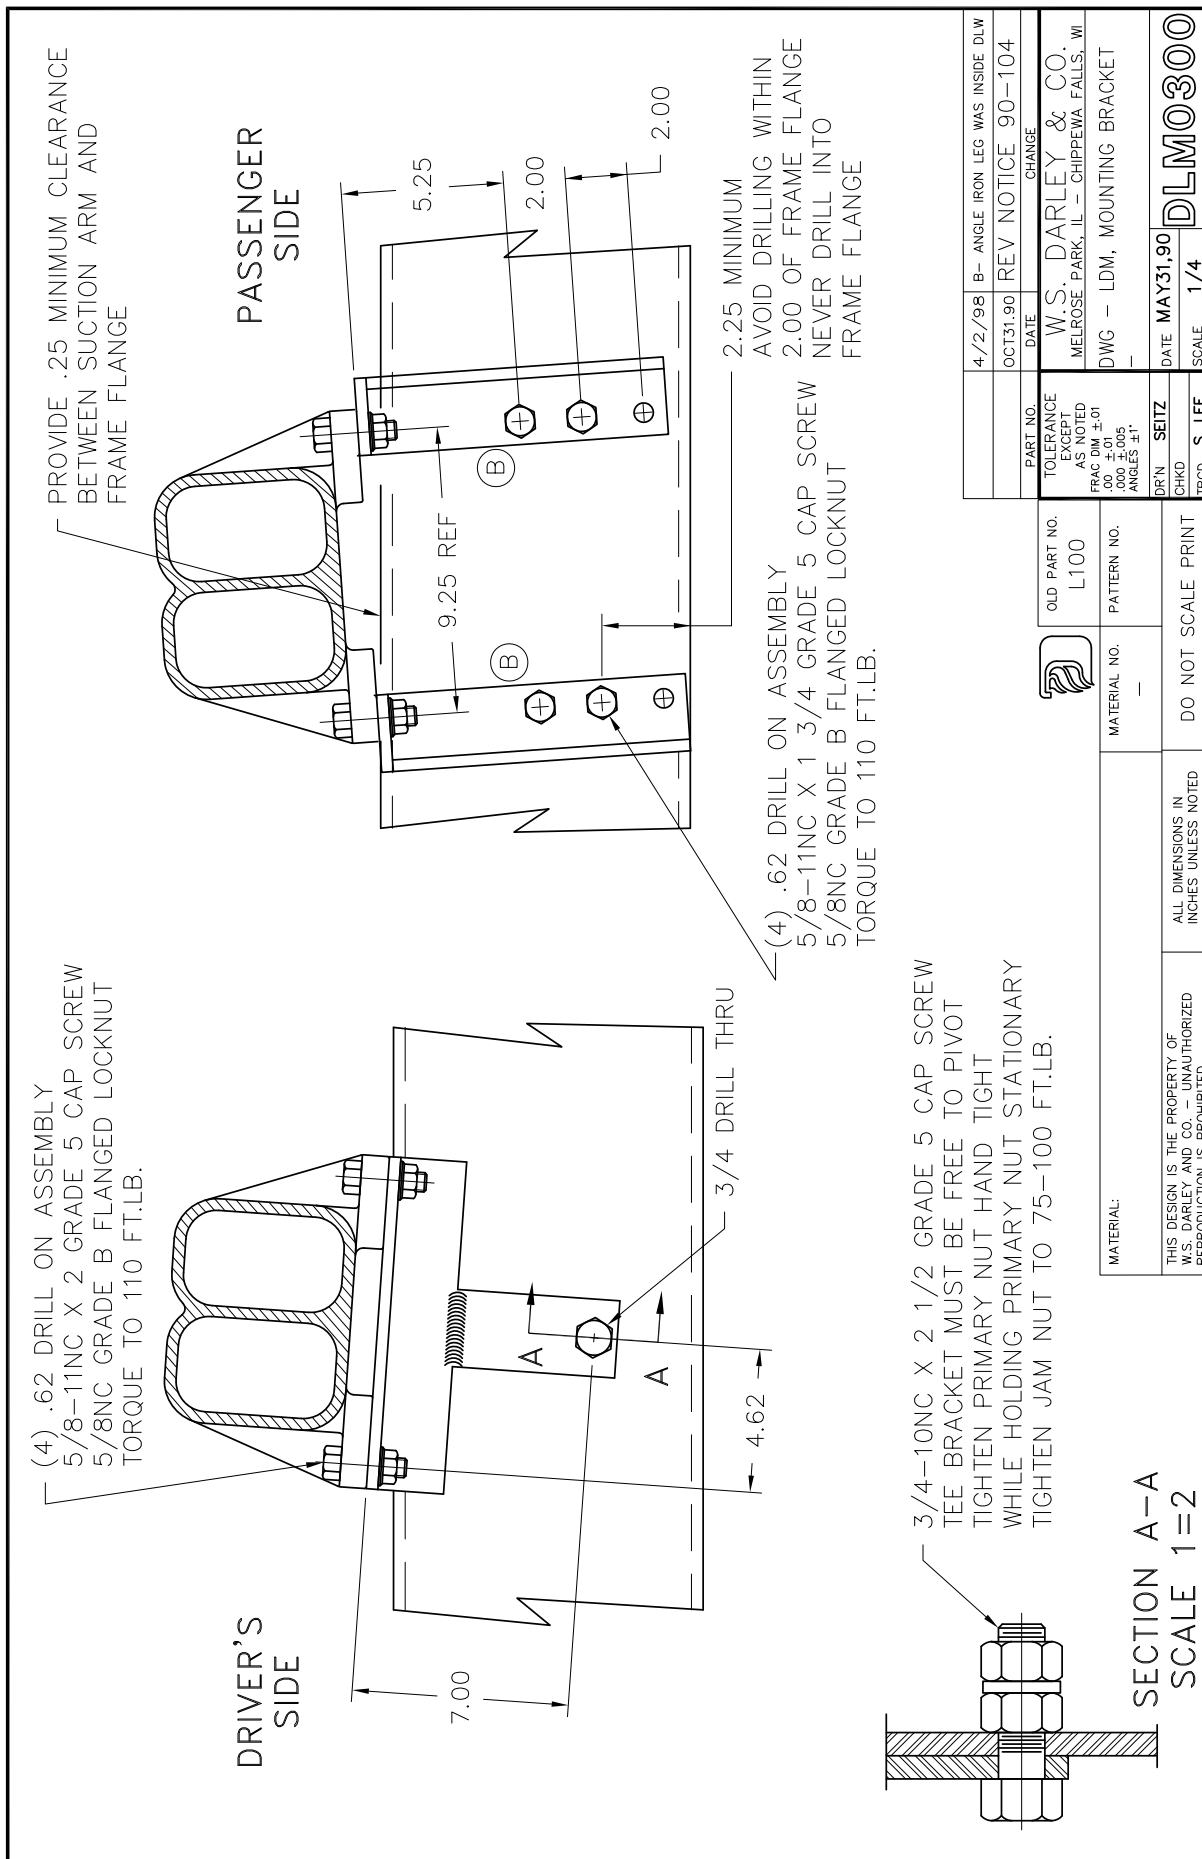

YOKE SERIES	TUBE SIZE	SLIP STUB SHAFT ①	TUBE YOKE ②	PUMP YOKE ③	SLIP YOKE ④	YOKE SHAFT ⑤ (FOR CLOSE COUPLE)	BEARING KIT ⑥	A	B	C CLOSE COUPLED	D	E
1550	3.00x.095W	PA671 (4-40-821)	PA678 (4-28-377X)	ASSEMBLY: AU01001 [G452A1] (REF. DETAIL A)	PA690 (4-3-1241KX)	PA695 (4-82-371)	PA620 (5-155X)	5.75	28.90	10.31	1.38	4.97
1550	3.50x.095W	PA672 (4-40-761)	PA679 (4-28-307)									
1610	3.50x.095W	PA673 (5-40-451)	4816900 (5-28-167)	4813310 (K)	4814201 (5-3-108KX)	PA696 (5-82-871)	4809900 (5-279X)	6.12	29.64	11.25	1.88	5.31
1610	3.50x.134W	4814401 (5-40-1151)	4810800 (5-28-627)									
1710	4.00x.134W	PA675 (6-40-711)	4811700 (6-28-347)	4813410 (K)	4813700 (6-3-2741KX)	4813800 (6-82-1251)	4810300 (5-280X)	5.63	28.66	11.42	1.94	6.09
1710	4.50x.134W	PA676 (6-40-631)	PA682 (6-28-407)									
1760	4.00x.134W	PA675 (6-40-711)	PA683 (6.3-28-17)	4813510 (K)	PA693 (6.3-3-41KX)	PA698 (6.3-82-21-13)	4810600 (5-407X)	6.00	29.40	13.66	1.94	7.00
1760	4.50x.134W	PA676 (6-40-631)			SEE NOTE 3. (H)							
1810	4.50x.134W	PA677 (6.5-40-201)	PA684 (6.5-28-117)	4813610 (K)	PA694 (6.5-3-1431KX)	PA699 (6.5-82-451-8)	PA633 (5-281X)	5.88	29.16	13.46	1.94	7.55

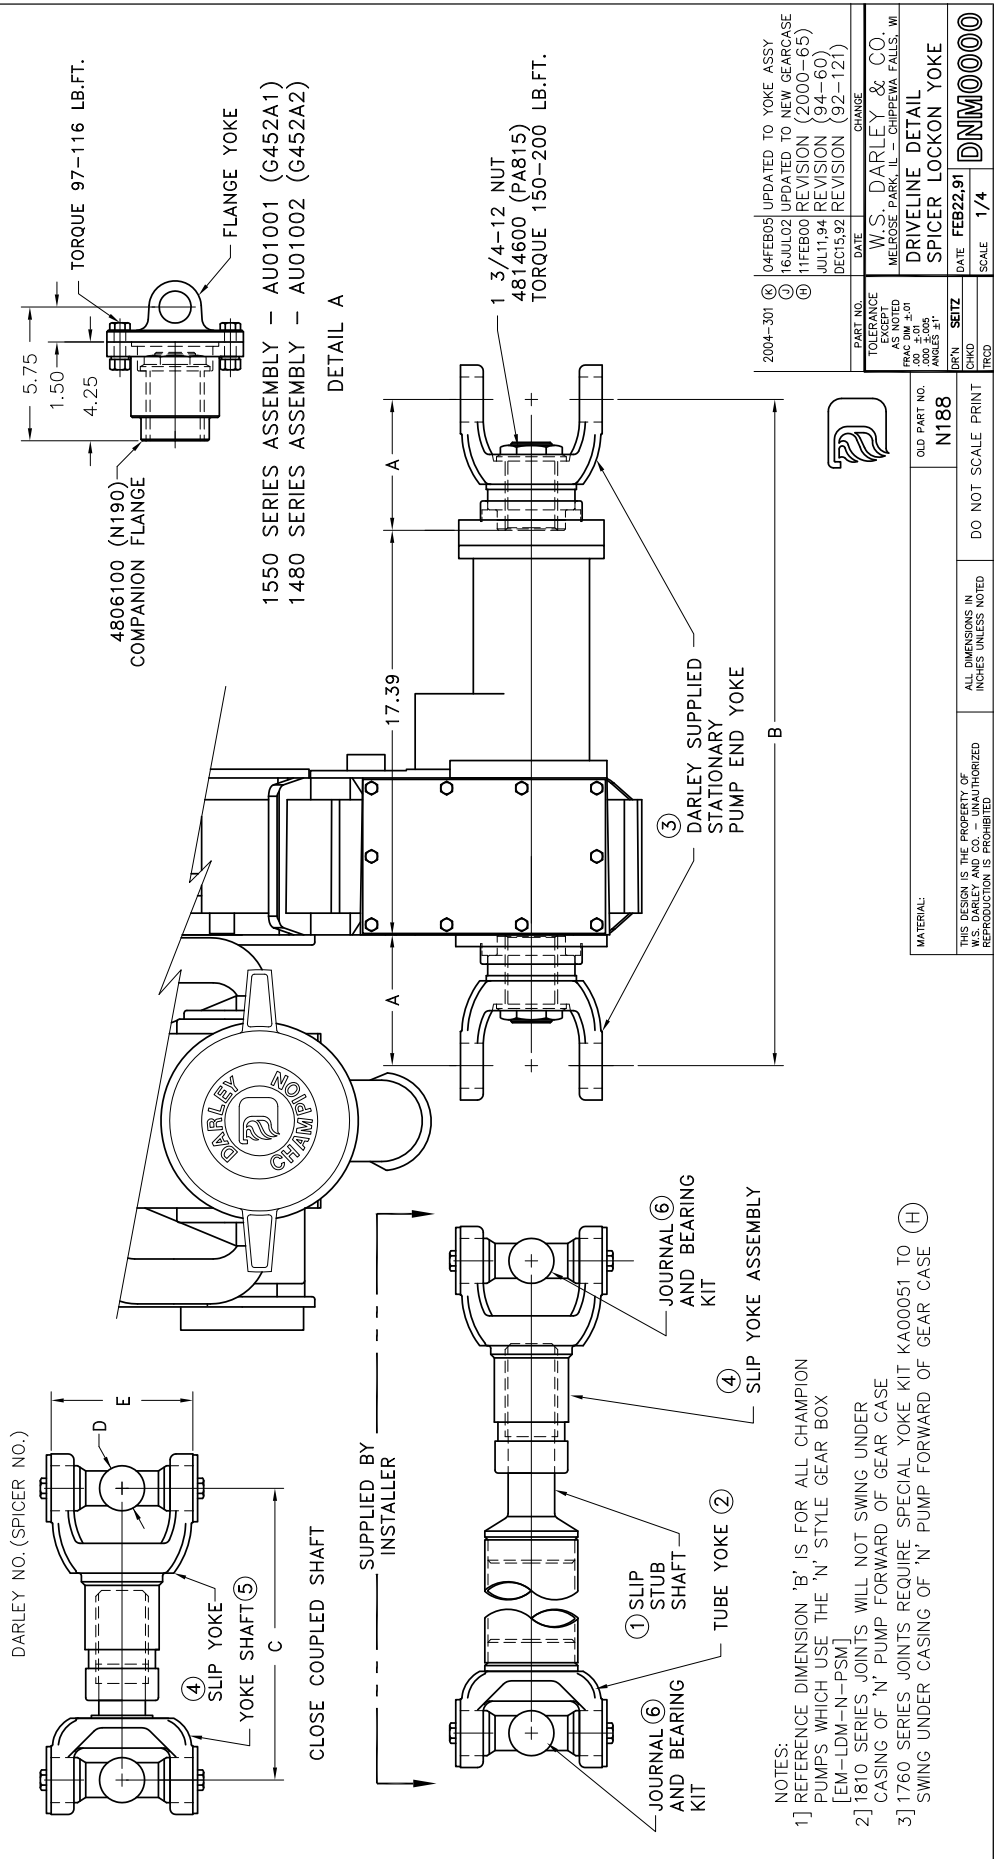

Mechanical Shaft Seal

This pump assembly incorporates high quality mechanical shaft seal(s) separating the pump housing components from atmosphere. Depending on the pump design, there may be one or two seals on each impeller shaft.

The seal size, design type, component materials, and housing configuration have been specifically designed for this pump application and rated operating parameters.


Mechanical Seal Basics

A mechanical seal is a device that houses two highly polished components (known as faces). One face rotates, the other is stationary. A secondary elastomer bellows seals the primary ring to the shaft. An o-ring or cup seal seals the mating ring in the housing. The polished seal faces of the primary and mating rings are pressed together by a spring mechanism to provide adequate force to affect a seal. The force acting between the seal faces increases in direct proportion to product pressure.

The elastomer bellows seal utilized in this pump has the following design features:

- Mechanical drive of the primary seal ring. The drive band's notch design eliminates overstressing the elastomer sealing bellows.
- Bellows design provides automatic compensation for shaft endplay, run out, and primary ring wear.
- Seal face contact pressure is controlled by a single, non-clogging coil spring. This coil spring has been custom welded per Darley specifications to eliminate high-speed spring distortion.

The seal housing is designed and ported to provide optimal water flow and pressure assuring proper cooling and flushing of the seal components.

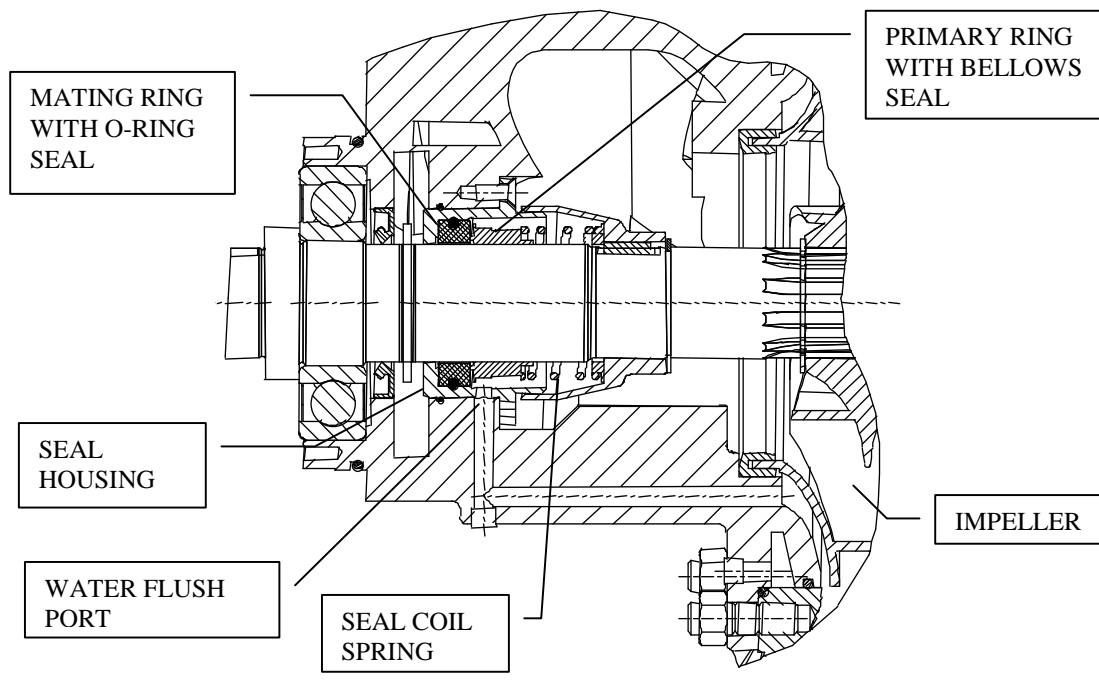

Operation and Maintenance

When operated within rated operating conditions of this pump, these seals will provide trouble free service for extended periods.

Properly selected and applied mechanical shaft seals are leak free and require no adjustment. Should the seal area develop a leak, investigate the cause as soon as possible. Seal failure, leakage, may be the result of; worn seal faces, leaking bellows, or damaged o-rings. These failures may be attributed to bearing failure, impeller blockage, impeller imbalance, seal housing contamination, operating beyond pump design rating, or dry running,

Mechanical shaft seal design relies on the sealed media, in this case, water, to cool and lubricate the sealing surfaces. Therefore, extended dry operation may cause overheating and scoring or damage to the sealing surfaces, resulting in excessive leakage or a much shortened seal life.

To maximize seal life, minimize operation at pump pressures higher than pump rating. While operating at pressures beyond rating will not immediately damage the seal, it will increase sealing surface wear rate.



CAUTION: DO NOT RUN THE PUMP DRY EXCEPT MOMENTARILY AND AT LOW SPEEDS



CAUTION: DO NOT USE THIS PUMP FOR HOSE TESTING



CAUTION: THE MECHANICAL SEAL SHOULD NOT BE RUN DRY, WHILE THE PUMP IS NOT ENTRAINED WITH WATER, FOR A PERIOD LONGER THAN 2 MINUTES. FAILURE TO FOLLOW THIS RECOMMENDATION WILL LEAD TO PREMATURE WEAR AND FAILURE OF YOUR MECHANICAL SHAFT SEAL.



DARLEY

INSTALLATION OF MECHANICAL FACE SEAL WITH O'RING


SPECIAL HANDLING

Study the engineering layout before installing the seal. This shaft seal is a precision product and should be handled and treated with care. Take special care to prevent scratches on the lapped faces of the primary and mating ring. Provide a very clean work area where the assembly will take place. Clean hands prior to assembly.


INSTRUCTION STEPS:

Instructions for Installing a Mechanical Shaft Seal

1. Inspect mating ring pocket in seal housing ensuring it is clean, free of chips, and nick free, to provide a proper sealing surface. Isopropyl alcohol may be used to clean the surfaces if required.

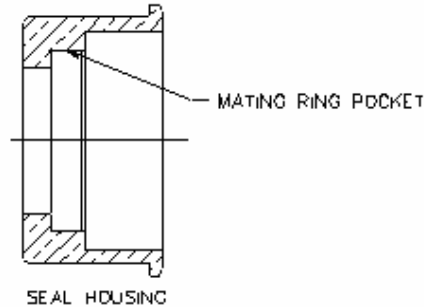




2. Inspect the pump shaft surface under the bellows, ensuring it is clean and nick free to provide a proper sealing surface. Isopropyl alcohol may be used to clean surface if required.

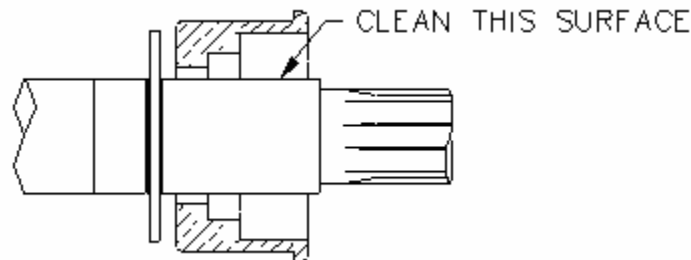

3. Lightly lubricate the o-ring on the mating ring with a single drop of P-80 water soluble rubber lubricant (do not over lubricate) and push it into the cavity using the recommended installation tool or other suitable plastic tube free of contaminants, firmly seating the mating ring square.

Note: The polished face of the mating ring must face out – away from the pump's gear case. Try to not touch the polished sealing face with your fingers; the oils from your fingerprint can cause the seal to leak. Remove any P-80 from the sealing face after installation.

The approximate size of a drop should be between the sizes of these two circles.

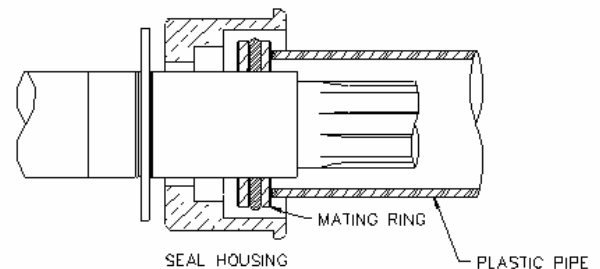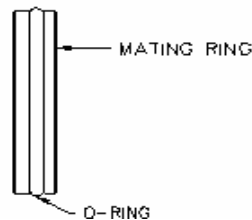


4. Clean the mating ring surface with isopropyl alcohol to remove any fingerprints and any other contaminants left on mating ring.


Note: Steps 5 – 9 need to all be completed with in 15 minutes or less.

5. Apply a small drop of P-80 rubber lubricant or water-soluble lubricant (not soapy water) to the inside diameter of the bellows assembly allowing it to be pushed easily into position.
6. Clean the polished sealing face of the primary ring with a clean lint free rag with isopropyl alcohol to remove all fingerprints and other contaminants.
7. Slide a seal save, similar to X6550, over the shaft splines to ensure that the seal is not damaged during installation. Place the primary ring and lubricated bellows assembly (without the spring) on the shaft, using a proper pusher - push the assembly into position so that the seal surfaces are in contact. Remove the seal save from the shaft.

The approximate size of a drop should be between the sizes of these two circles.

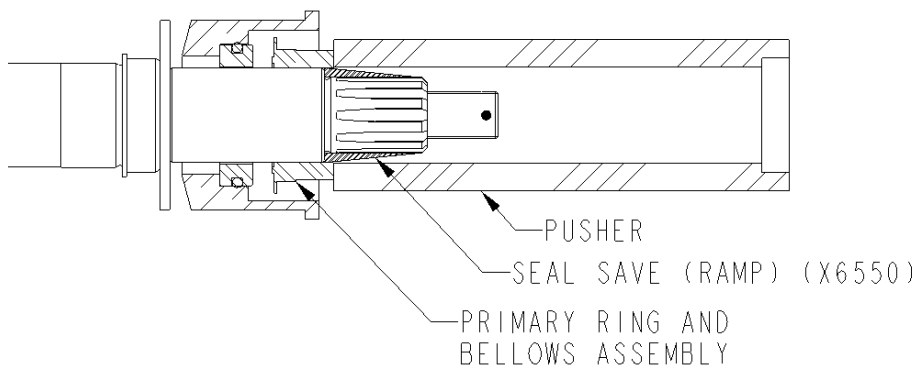

8. Put the spring in place, seated tight against the spring retainer on the primary ring.
Note: Some springs may be slightly tapered, so one end fits the seal better than the other. The end of the spring that best fits the seal should go towards the seal to ensure even spring pressure all the way around.
9. Slide impeller onto impeller shaft, engage the spring into the groove of the impeller hub and install impeller washer, impeller nut, and stainless steel cotter key.

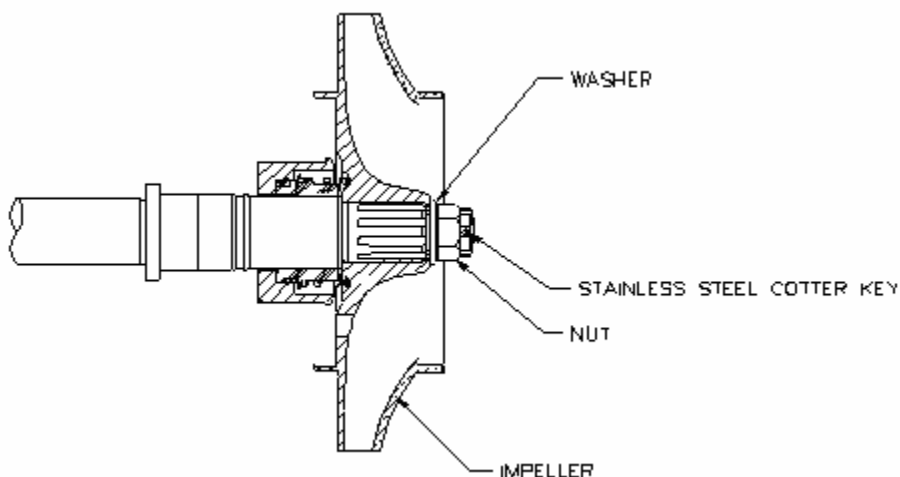

*** Reference pump configuration for individual mechanical seal instructions.*

*** Reference pump assembly drawings and pump assembly tips for further assembly.*

Note: If the seal leaks slightly after assembly, it may be necessary to run the pump for approximately 30 minutes at 50-60 psi to rinse out excess lubricant and other contaminants.

Once a mechanical seal has been installed, it is recommended that it not be reused.

If further information is needed, call **DARLEY** in Chippewa Falls, WI. at 800-634-7812 or 715-726-2650



W. S. DARLEY & CO.

DARLEY INJECTION TYPE STUFFING BOX ADJUSTMENT

▲ Prop 65 Warning: This product contains lead, a chemical known to the State of California to cause cancer, birth defects, and other reproductive harm. Wash hands after handling.


▲ Caution: Do not attempt to use anything but Darley injection packing. Using the wrong packing material in your pump may cause catastrophic failure of the pump shaft sealing components.

Only use W.S. Darley & Co.'s plastallic injection packing material. It is made of a special composition of shredded fibers, and a special bonding and lubricating compound.

It is important that the stuffing box is completely filled solid with packing and compressed firm during adjustment to prevent formation of voids and excessive leakage.

To pack the stuffing box when empty and assembled in the pump, remove the packing screw and nut assembly, and insert pellet form packing into the packing plunger guide. Replace the packing screw assembly and use a hand speed wrench to force the pellets into the gland. DO NOT USE A POWER TOOL! Repeat pellet additions while turning the impeller shaft by hand until resistance to turning is felt when the stuffing box is almost full. Continue turning packing screw by hand using a standard 6" long 9/16" end wrench until 4 lb. of force is felt at the end of the wrench. This is equivalent to 2 ft-lb or 24 in-lb torque. Continue turning until a few flakes of packing are extruded out the opening between the impeller shaft and the stuffing box hole. The gland is now ready for pressure testing or pumping.

After priming the pump with water, start the pump and raise the discharge pressure to 50 psi. Tighten the packing screw using a 6" long 9/16" end wrench until 4 lb. force is felt at the end of the wrench (24 in-lb torque). Continue operating the pump at 50 psi for 5 minutes to dissipate packing pressure against the shaft and permit cooling water to flow between the shaft and stuffing box hole. Make sure that water actually does come through before operating pump at any higher pressure. The normal drip rate may vary between 5 and 60 drops per minute.

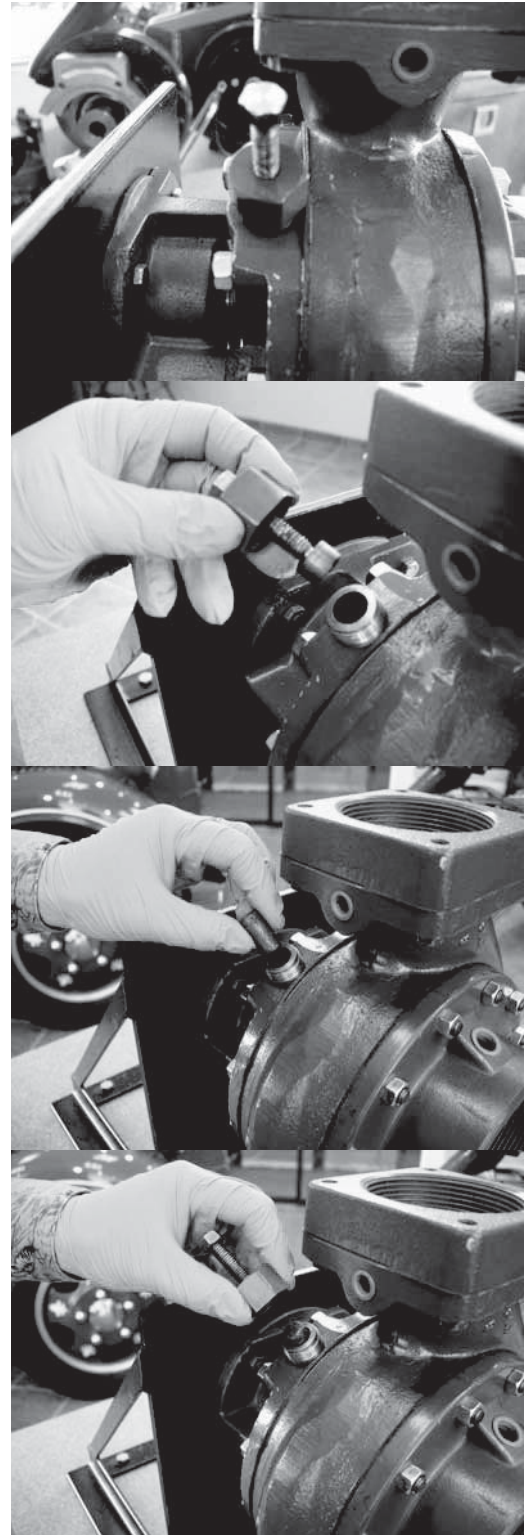

Operate the pump for 10 minutes at the highest normal operating pressure flowing sufficient water to prevent overheating. Do not run the pump blocked tight. Lower discharge pressure to 50 psi and repeat the packing screw tightening procedure outlined above.

The pump may now be operated for any time period required within its rated capacity. However, the drip rate should be monitored more frequently during the first few hours, and adjusted if necessary to achieve a stable flow rate. Several more adjustments may be required.



For a list of approximate quantity of packing pellets required by model (completely repacked), see below:

Model	Approximate # Packing Pellets
A	6
2BE	6
EM	15
H	8
JM	8
KD	10
KS	8
LD	15
LS	9
P	10
U2	5
U4	10

If further information is needed, call **W.S. DARLEY & CO.**
at Chippewa Falls, WI. at 800-634-7812 or 715-726-2650

SUMMARY OF THINGS TO REMEMBER

1. Always shift pump clutches with engine clutch disengaged.
2. Do not clash clutch gears when shifting.
3. Close booster valves, drain valves, cooling line and third stage discharge valve before attempting to prime the pump.
4. Always keep primer shut-off valve closed, except while priming.
5. Re-open and close primer valve to re-prime or eliminate trapped air from suction line.
6. Always drive a midship mounted split-shaft pump with truck transmission in the gear recommended by the chassis manufacturer.
7. Never run the pump without water in it except momentarily while priming.
8. Accelerate and retard speed of engine gradually.
9. Watch the engine temperature, and start the cooling water at the first signs of overheating.
10. Keep good gaskets in suction hoses, and handle carefully to avoid damage to coupling threads.
11. Air leakage into suction lines is the most frequent source of trouble when pumping from a suction lift (draft).
12. Always use a suction strainer when pumping from draft, and a hydrant strainer when pumping from a hydrant.
13. Foreign matter in impellers is a result of failure to use adequate strainers and is a common source of trouble.
14. Drain pump immediately after each run. This is especially critical in freezing conditions.
15. Do not run the pump long with discharge completely shut off.
16. Do not close a "Shutoff" nozzle when pumping with motor throttle wide open, unless relief valve or pressure regulator is set for the correct pressure.
17. Keep the pump gear case filled with oil to the level of the oil level plug/dipstick.
18. Check oil level in the pump transmission after every 25 hours of operation or 3 months, and changed it after every 50 hours of operation or 6 months.
19. In such equipped transmissions, once the oil is drained, remove the strainer screen oil sump fitting and thoroughly cleanse in a parts washer or with isopropyl alcohol, ensuring any debris is washed away.
20. If pump is equipped with a Darley plastallic (injection) packing shaft seal, check the drip rate frequently, and adjust according to the packing adjustment instruction, as required. The drip rate may vary between 5 and 60 drops per minute.
21. Work all suction and discharge valves often to ensure free and easy operation.

PUMP SHIFTING PROCEDURE

For trucks equipped with manual transmissions, the following shifting procedure should be followed for pump operation:

1. Set parking brake.
2. Disengage truck clutch to stop shaft rotation.
3. Move pump shift lever to PUMP position.
4. Move truck transmission shift lever to neutral position.
5. Engage truck clutch.
6. Prime the pump (see priming instructions).
7. Disengage the truck clutch.
8. Move truck transmission shift lever to direct drive position and lock in place with safety latch.
9. Engage truck clutch to begin pumping.

If the power pump shift is provided, the procedure is identical except green indicator light (if provided) will come on at step #3 to show pump gear has been engaged.

To return to road operation:

1. Disengage truck clutch to stop shaft rotation.
2. Move truck transmission shift lever to neutral position.
3. Move pump shift lever to ROAD position.

When the truck is equipped with an automatic transmission, a danger exists that if the operator forgets to move the pump shift lever to PUMP position, and at the same time place transmission selector lever in high gear before leaving cab, the engine will continue to run due to converter slip. Upon advancing the vernier throttle at the pump operators panel, the engine could overcome the parking brake and accidentally move the truck. To prevent this possibility, the following shifting procedure should be followed for pump operation:

1. Set parking brake.
2. Place automatic transmission shift selector in neutral.
3. Move pump shift lever to PUMP position. "Pump Engaged" light in cab should now come on.
4. Prime the pump (see Priming Instructions).
5. Move automatic transmission shift selector to direct drive position (See Automatic Transmission Instructions).
6. Lock automatic transmission shift selector in direct drive position with safety latch provided.
7. Check that the parking brake is fully engaged.
8. Depress foot accelerator and observe that speedometer registers MPH. If pump is not engaged, speedometer will not indicate MPH.
9. Listen for pump shift and sound of pump gears turning.
10. At pump operators position, observe that the green indicator light above vernier throttle control is on. **Do not** operate throttle unless light is on.
11. Observe discharge pressure gage on panel while advancing vernier throttle, to ensure that it is indicating pressure. If Pump is not engaged, no pressure will show.
12. Remember, the vernier throttle has a quick release emergency center button. Push it all the way in immediately, should the truck move.

To return to ROAD OPERATION:

1. Place the truck transmission selector lever in reverse position to stop forward rotation of transmission shaft.
2. Move transmission selector to neutral, and at the same time, move the pump shift lever from PUMP to the ROAD position.

OPERATION OF PUMP SHIFT WITH AUTOMATIC TRANSMISSION

The pump gear shift consists of a sliding clutch gear splined to the transmission shaft which can be moved forward to engage the pump clutch gear, or to the rear to engage the rear drive shaft connected to the truck drive axle.

The sliding clutch gear is moved either by direct mechanical linkage from a notched quadrant shift lever, or by an air power cylinder controlled by a selector valve. The shift lever or selector valve must be moved all the way and locked for either ROAD position to drive truck or PUMP position to pump.

MANUAL PUMP GEAR SHIFT PROCEDURE

With trucking parking brake set, the truck transmission shift selector must be in neutral position to stop rotation of truck transmission output shaft before shifting into either ROAD or PUMP gear to prevent clashing and damage to gear teeth. With a manual pump gear shift control, a butt tooth position of gears may be encountered preventing engagement and "Pump Engaged" light from coming on. If this occurs, move transmission shift selector momentarily into any forward gear position with engine idling, then return to neutral. Wait approximately 5 seconds until shaft stops turning. Moving the pump shift lever to PUMP position again should complete the pump shift and turn on the "Pump Engaged" light. Repeat this procedure if a butt tooth condition is again encountered. Pump priming should be completed before shift to PUMP position.

AIR POWER PUMP GEAR SHIFT PROCEDURE

With the air power pump gear shift control a butt tooth condition may also occur preventing engagement and "Pump Engaged" light from coming on. This can be easily overcome by momentarily placing truck transmission in any forward gear position with engine idling after the pump shift valve is placed in the PUMP position. Shaft rotation will complete the shift and turn on green "Pump Engaged" light. Transmission shift should be returned to neutral position after "Pump Engaged" light comes on for the pump priming period.

The above procedure insures that the pump shift is completed and the "Pump Engaged" light comes on. An alternate procedure in case of a butt tooth condition is simply to wait until the transmission is placed into pump drive gear position, when shaft rotation will immediately permit pump gears to mesh into full engagement.

The pump is usually operated with truck transmission in direct (high) gear such as D or 2-5. Overdrive may be required with very low speed engines.

When the truck is equipped with an automatic transmission, a danger exists that should the operator forget to move the pump shift valve to PUMP position, and at the same time place transmission selector in high gear before leaving cab, the engine will continue to run due to converter slip. If the operator advances the vernier throttle at the pump operators panel, the engine could overcome the parking brake and cause the truck to move. To prevent this possibility, the following shifting procedure should be followed for PUMP position:

1. Read and fully understand pump Operators Manual before proceeding.
2. Set parking brake and idle engine.
3. Place automatic transmission shift selector in neutral.
4. Move pump shift lever or valve to PUMP position. "Pump Engaged" green light in cab should now come on. If not, momentarily place truck transmission shift selector in a forward gear to complete pump shift, then return to neutral position. Green light will now be on.

5. Prime pump.
6. Move automatic transmission shift selector to direct drive position. "OK to Pump" green light in cab should now be on.
7. Lock automatic transmission shift selector in direct drive.
8. Listen for sound of pump gears turning. Speedometer will show MPH unless connected to the wheel.
9. At pump operators position, observe the green indicator warning light near vernier throttle control.
WARNING: DO NOT OPEN THROTTLE UNLESS LIGHT IS ON.
10. Advance throttle to provide a minimum of 900 rpm idle speed. Observe discharge pressure gage on panel while advancing vernier throttle to make sure it is indicating pressure. If pump is not engaged or the pump is not primed, no pressure will show.

The vernier throttle has a quick release emergency red center button. Push it all the way in to return the engine to idle if necessary in an emergency situation

To return to ROAD operation:

1. Throttle engine back to idle.
2. Place the truck transmission selector lever in neutral position. Wait approximately 5 seconds until drive shaft stops rotating.
3. Move pump shift lever or valve from PUMP to ROAD position. "Pump Engaged" green indicator light should be off. A butt tooth condition may require momentary engagement of transmission to complete the shift.

OPERATION OF PUMP SHIFT WITH MANUAL TRANSMISSION

The pump gear shift consists of a sliding clutch gear, splined to the transmission shaft which can be moved forward to engage the pump clutch gear, or to the rear to engage the rear drive shaft connected to the truck drive axle. A neutral position is half way between.

The sliding clutch gear is moved either by direct mechanical linkage from a notched quadrant shift lever, or by a vacuum or air power cylinder controlled by a selector switch. The shift lever must be moved all the way and locked for either ROAD position to drive truck or PUMP position to power pump.

The truck clutch must always be disengaged to stop rotation of truck transmission output shaft before shifting into either ROAD or PUMP gear to prevent clashing and damage to gear teeth. With the manual shift lever, a butt tooth position of gears may be encountered occasionally preventing engagement. If this occurs, move pump shift lever to neutral (half way) position, engage truck clutch momentarily, then disengage truck clutch and try pump shift again.

The pump is always operated with truck transmission in direct (high) gear, such as 4th on a 4 speed or 5th on 5 speed transmission.

The following shifting procedure should be followed for PUMP operation:

1. Set parking brake.
2. Disengage truck clutch.
3. Move pump shift lever (valve) to PUMP position. "PUMP ENGAGED" green light in cab should now come on.
4. Move truck transmission shift lever to neutral position.
5. Engage truck clutch.
6. Prime pump (See Priming Instructions).
7. Disengage truck clutch.
8. Move truck transmission shift lever to direct drive position and lock in place with safety latch provided.
9. Slowly engage truck clutch to begin pumping.

TO RETURN TO ROAD OPERATION


1. Disengage truck clutch to stop shaft rotation. Allow 10 seconds for shaft to stop rotating.
2. Move truck transmission shift lever to neutral position.
3. Move pump shift lever (valve) to ROAD position.

CAUTION

Follow the procedures step by step as indicated.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

REVISIONS			
SYM.	DATE	BY	REVISION

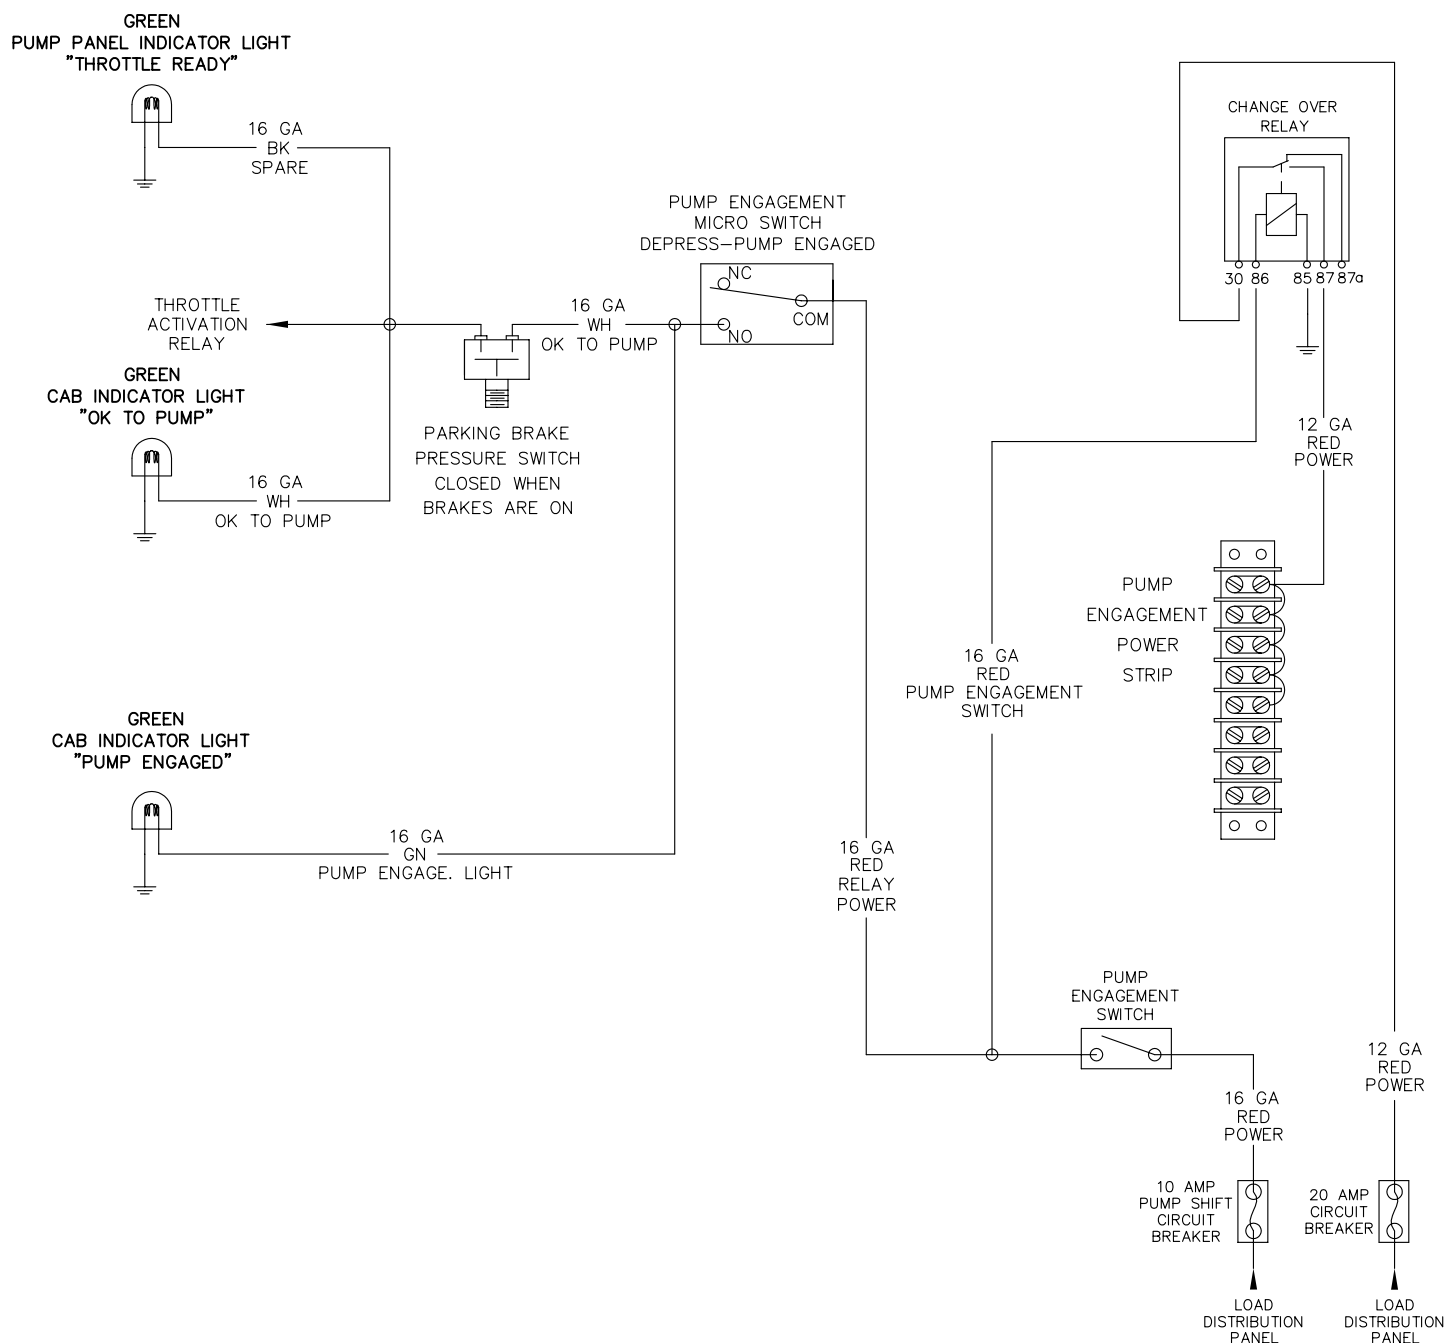


ELECTRICAL SCHEMATIC MANUAL TRANSMISSION PUMP ENGAGEMENT





W.S. Darley & Co.

APPARATUS DIVISION
920 KURTH ROAD
CHIPPEWA FALLS, WISCONSIN 54729
1-715-726-2645


DWG BY JSS	SCALE NONE	REV
DATE 7-23-02	JOB NO.	DWG. NO. DGS1202

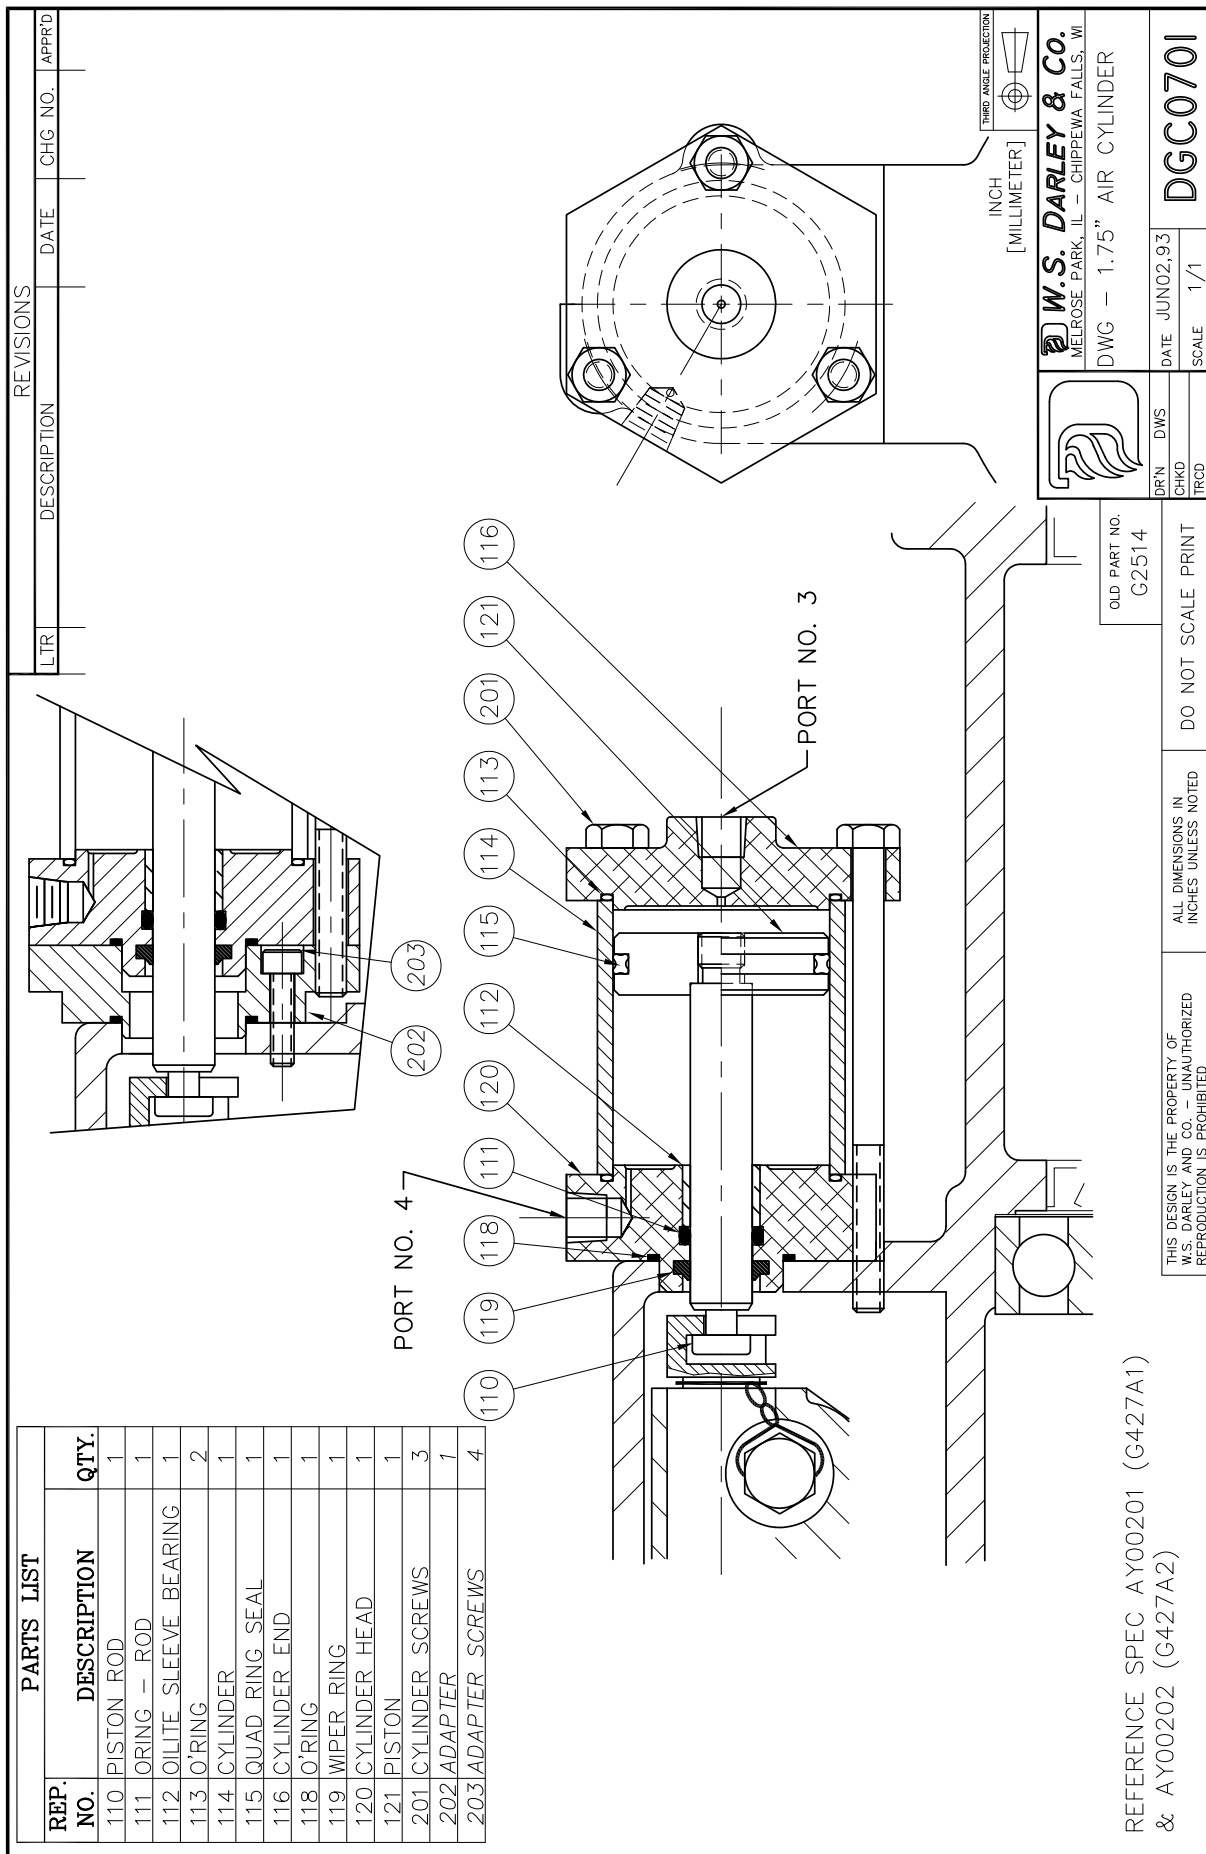

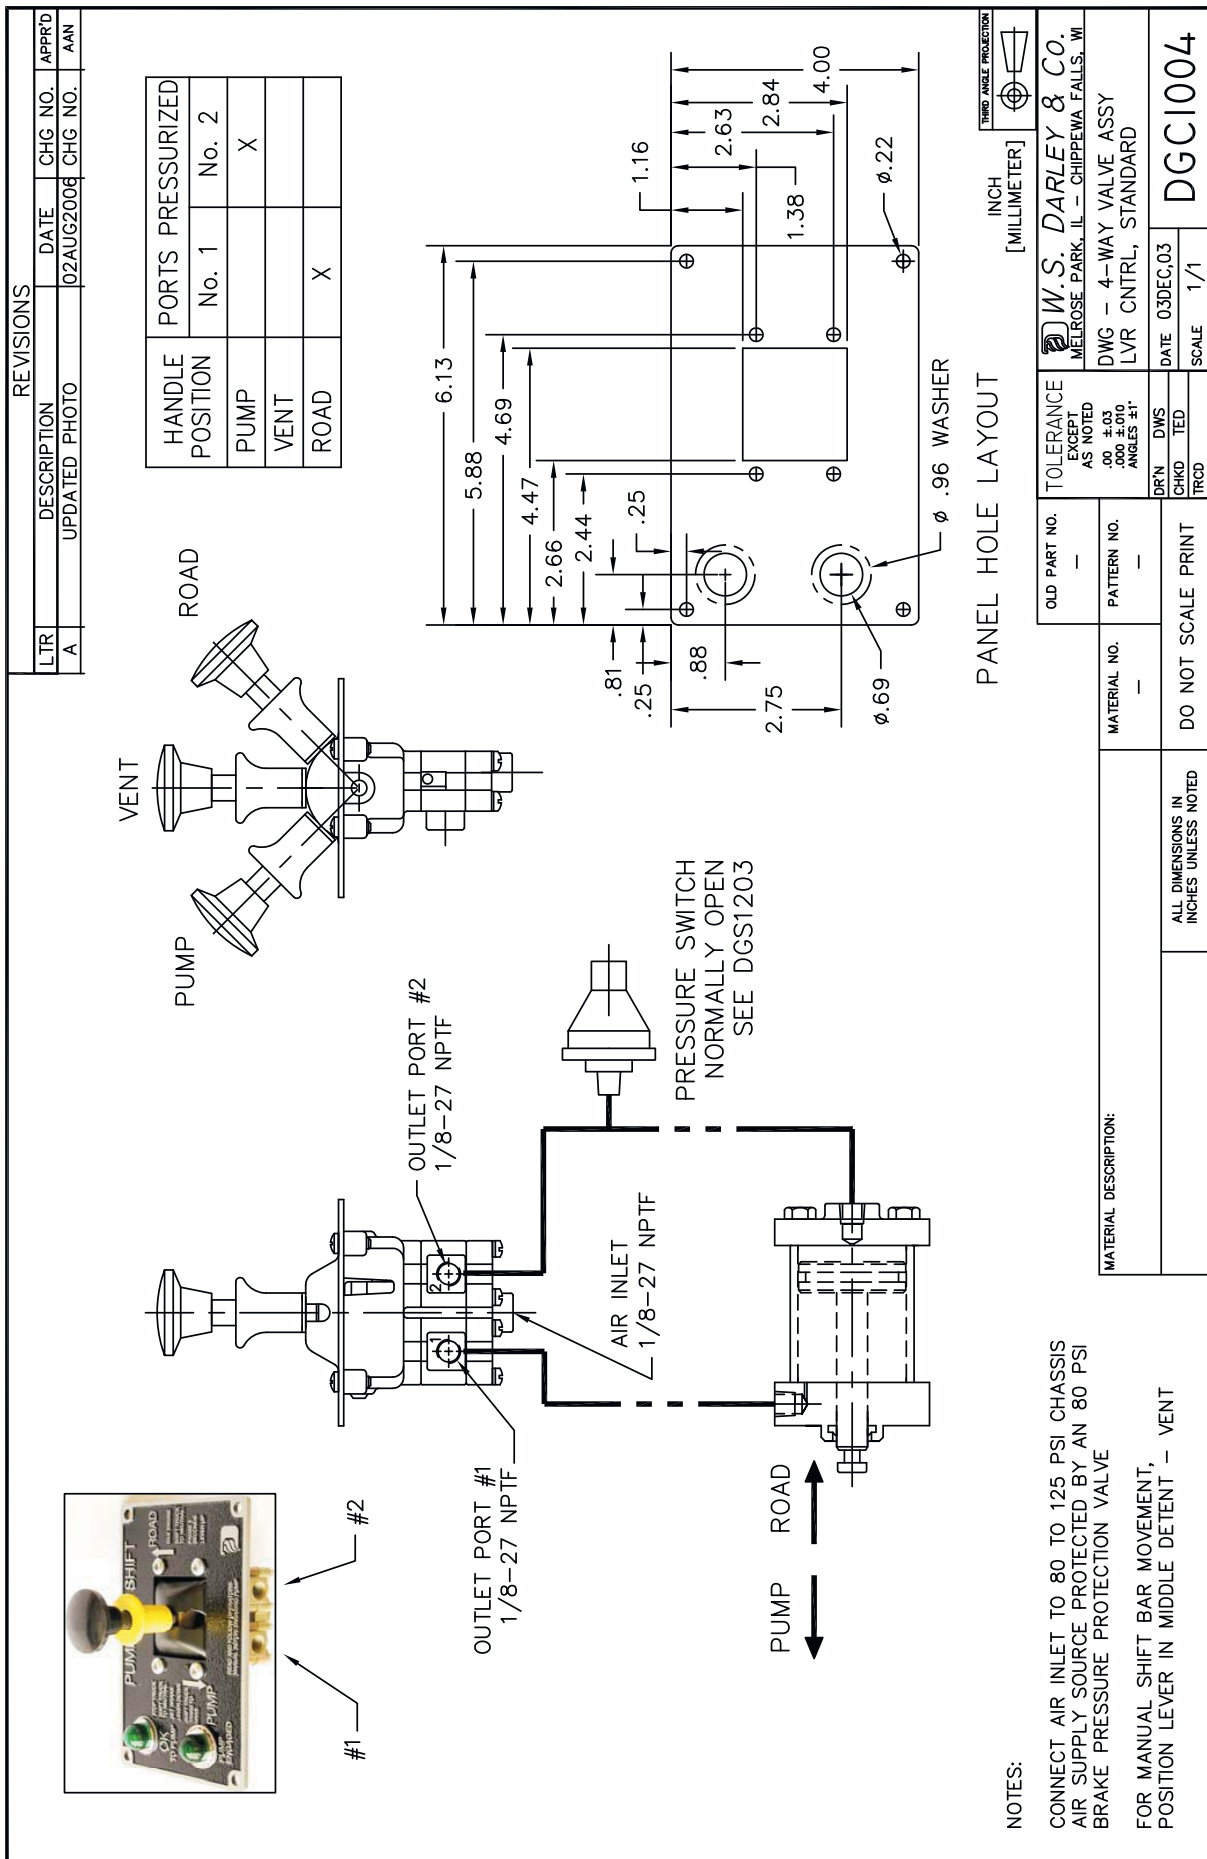

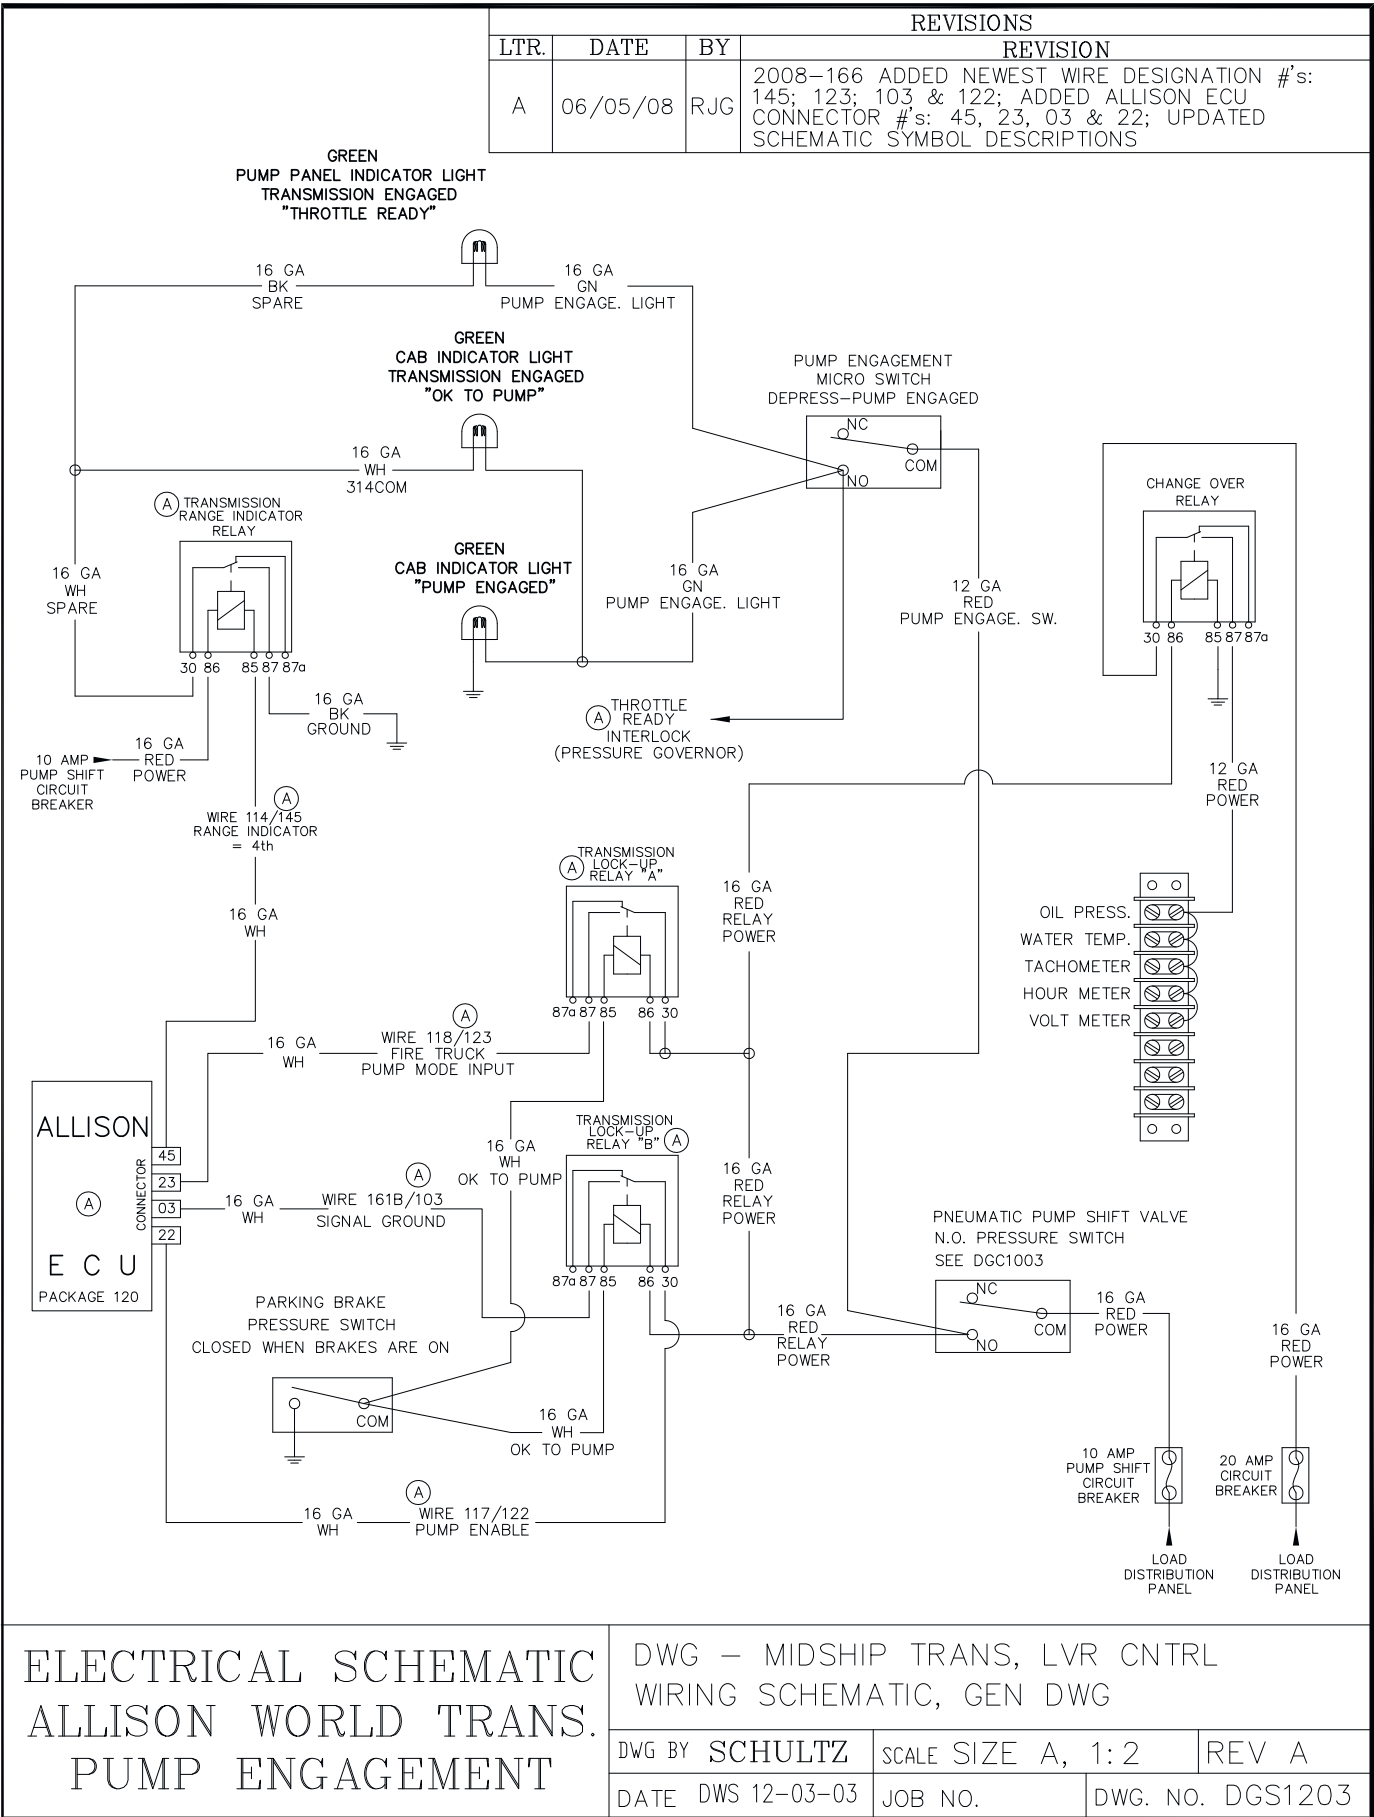



REVISIONS				
LTR	DESCRIPTION	DATE	CHG NO.	APPR'D

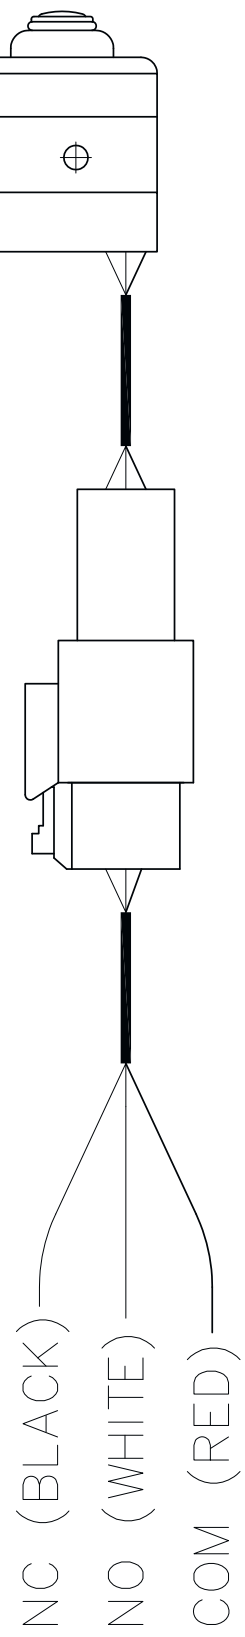

REMOVE SHARP EDGES

INCH
[MILLIMETER]



			 W.S. DARLEY & Co. MELROSE PARK, IL — CHIPPEWA FALLS, WI	
MATERIAL DESCRIPTION: —	MATERIAL NO. —	OLD PART NO. —	TOLERANCE EXCEPT AS NOTED .00 ±.03 .000 ±.010 ANGLES ±1°	
			DWG — MICROSWITCH, WIRE DESIGNATION	
			DATE 7/2/02 SCALE 1/1	
THIS DESIGN IS THE PROPERTY OF W.S. DARLEY AND CO. — UNAUTHORIZED REPRODUCTION IS PROHIBITED		DO NOT SCALE PRINT		DR'N JSS CHKD CKE TRCD
ALL DIMENSIONS IN INCHES UNLESS NOTED		DGSI602		

[illegible]

OPERATION OF OPTIONAL HIGH PRESSURE STAGE

The sliding gear clutch which drives the optional high pressure stage is operated by a shift lever marked “FOG” for pumping position, and “OUT” for disengaged position. The shift lever must be locked in one or the other of these positions before the pump can be started.

The high pressure stage clutch must not be shifted while the main pump is running.

When the main pump is in operation, it must always be stopped (engine clutch disengaged) for shifting of the high pressure stage clutch either in or out.


The high pressure stage is always primed by pressure from the main pump.

The high pressure stage has a small by-pass line with a valve to the booster tank. Open the by-pass valve when running with the high pressure stage discharge lines completely shut off.

HIGH PRESSURE BOOSTER PUMP DRAWING DLC0104

Rep. No.	Name of Part	Qty	Rep. No.	Name of Part	Qty
1	Inlet Pipe	1	26	Pipe Plug	1
2	Cotter Pin	1	27	Strainer Fitting	1
3	Impeller Pin	1	28	Inlet Tee	1
4	Flange O-ring	1	29	Close Nipple	1
5	Impeller Washer	1	30	Inlet Flange	1
6	Impeller Spacer	1	31	Seal Ring	1
7	Stuffing Box Head	1	32	Pump Casing	1
8	Pump Packing	10	33	Impeller	1
9	Water Slinger	1	34	Pump Casing Gasket	1
10	Impeller Shaft Oil Seal	1	35	Stuffing Box Gasket	1
11	Packing Cylinder	1	36	Idler Shaft Bearing	2
12	Gland Stud Piston	1	37	Shift Bar Oil Seal	1
13	Gland Nut	1	38	Gearcase Gasket	2
14	Packing Screw	1	39	Idler Shaft Spacer	1
15	Impeller Shaft Bearing	1	40	Idler Shaft	1
16	Impeller Shaft	1	41	Alignment Pin	2
17	Shift Collar	1	42	Idler Gear	1
18	Pump Drive Pinion	1	43	Gearcase Spacer	1
19	Gear Case	1	44	Idler Gear Key	1
20	Pinion Spacer	1	45	Oil Level & Fill plug	1
21	Impeller Shaft Bearing	1	46	Bearing Cap	1
22	Bearing Cap Gasket	2	47	Shift Bar O-ring	1
23	Bearing Cap	1	48	Shift Bar	1
24	Retaining Ring	2	49	Retaining Ring	2
25	Strainer Sleeve	1			

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

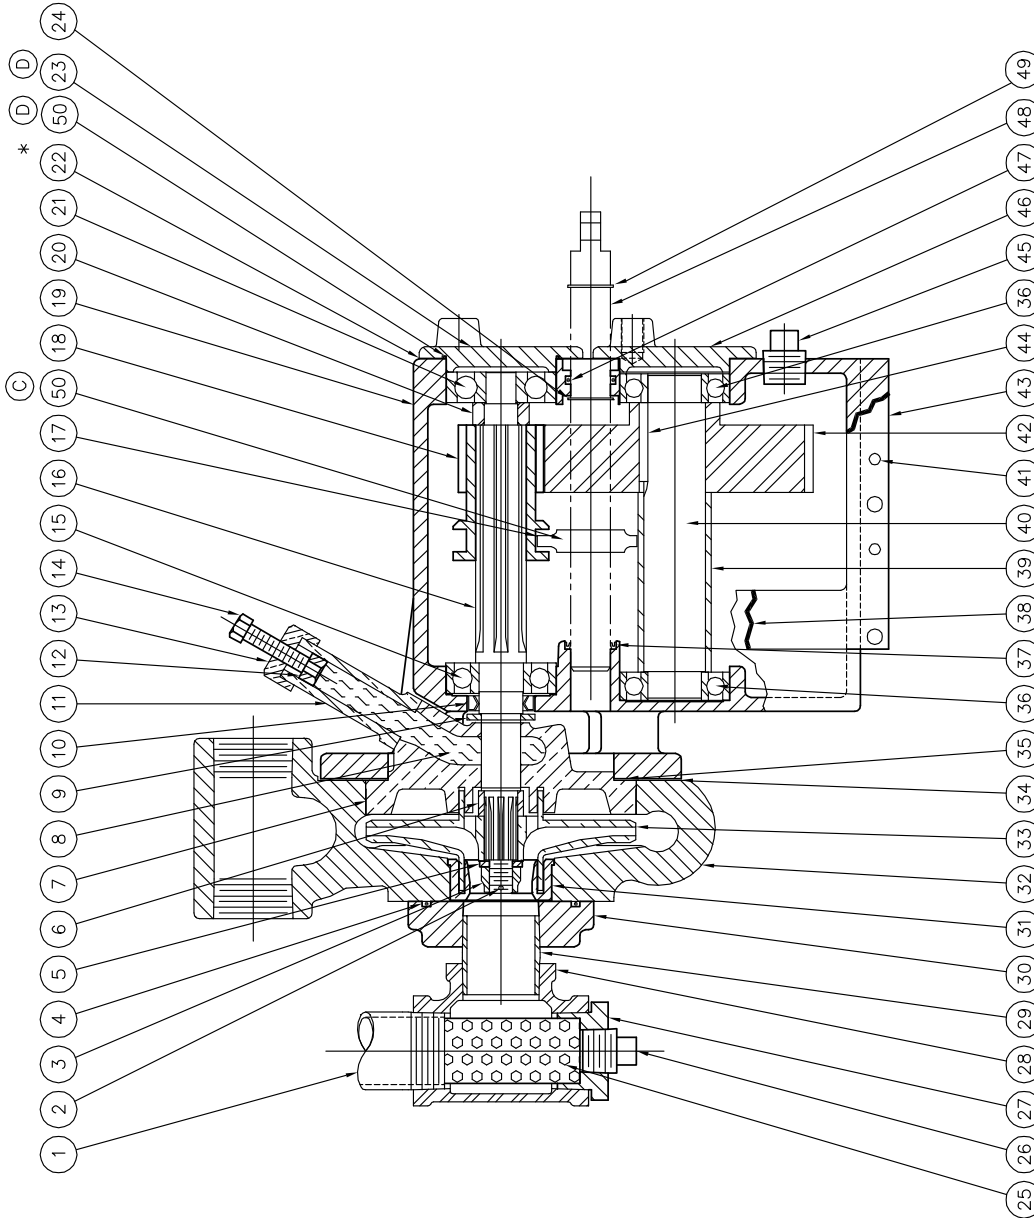

(D) REPL 2302600 W/ 2302604 AND 3601007 23SEP05 2005-285 CKE
 (C) 2002-134 SHCS ADDED 09SEP02 JSS
 * GASKET REMOVED 5/94
 (49) ADDED 3-23-90

TOLERANCE UNLESS NOTED AS SHOWN DECIMAL DIMS ±.01 FRACTIONAL DIMS ±.005 ANGLES ±1°		W.S. DARLEY & CO. MELROSE PARK, IL - CHIPPENAW FALLS, WI DWG - LDM SECOND STAGE CROSS SECTION PUMP ASSY	
OLD PART NO. L88	DATE AUG28.89	DFN S. LEE	SCALE 1/2
THIS DESIGN IS THE PROPERTY OF W.S. DARLEY AND CO. - UNAUTHORIZED REPRODUCTION IS PROHIBITED		DO NOT SCALE PRINT	
ALL DIMENSIONS IN INCHES UNLESS NOTED		DDC0104	

LDM SECOND STAGE PUMP**DRAWING NO. DLC0104**

Rep. No.	Name of Part	Qty
1	Inlet Pipe	1
2	Cotter Pin	1
3	Impeller Nut	1
4	Flange O-Ring	1
5	Impeller Washer	1
6	Impeller Spacer	1
7	Stuffing Box Head	1
8	Pump Packing	10
9	Water Slinger	1
10	Impeller Shaft Oil Seal	1
11	Packing Cylinder	1
12	Gland Stud Piston	1
13	Gland Nut	1
14	Packing Screws	1
15	Impeller Shaft bearings	1
16	Impeller Shaft	1
17	Shift Collar	1
18	Pump Drive Pinion	1
19	Gear Case	1
20	Pinion Spacer	1
21	Impeller Shaft bearing	1
22	Bearing Cap Gasket	2
23	Bering Cap	1
24	Retaining Ring	4
25	Strainer Sleeve	1
26	Pipe Plug	1
27	Strainer Fitting	1
28	Inlet Pipe	1
29	Close Nipple	1
30	Inlet Flange	1
31	Seal Ring	1
32	Pump Casing	1
33	Impeller	1
34	Pump Casing Gasket	1
35	Stuffing Box Gasket	1
36	Idler Shaft bearing	2
37	Shift Bar Oil Seal	1
38	Gearcase Gasket	2
39	Idler Shaft Spacer	1
40	Idler Shaft	1
41	Alignment Pin	2
42	Idler Gear	1
43	Gearcase Spacer	1
44	Idler Gear Key	1
45	Oil Level & Fill Plug	1
46	Bearing Cap	1
47	Shift Bar O-Ring	1
48	Shift Bar	1

WARNING: DO NOT USE THIS PUMP FOR HOSE TESTING

OPERATING THE ENGINE

After the pump has been primed, the engine speed should be increased gradually -- never jerk throttle wide open. Likewise, the engine speed should be decreased gradually when shutting down.

Watch the pump pressure gage and open throttle only enough to give the desired pressure. The pressure may rise high enough to burst the discharge hose, when using small nozzles, if the engine is given full throttle (except pumps equipped with pressure regulators set for desired pressure).

Never run engine at high speeds except when pump is primed and ready to discharge water.

COOLING THE ENGINE

NFPA 1901 requires that a supplementary heat exchanger cooling system be provided. On most models, this heat exchanger is an integral part of the pump, and the installation of two hoses from the engine cooling system to the pump is all that is required.

On some models an external heat exchanger must be used. In that case two hoses from the engine cooling system and two lines from the pump will run to the heat exchanger.

The cooling line should not be opened until pressure develops in the pump, and pump should never be operated under heavy loads prolonged without an adequate supply of cooling water flowing.

Coolant temperatures should never be allowed to exceed 200° F while pumping and 180° F is usually taken as a safe operating temperature.

Always shut off cooling line when through pumping.

SUCTION STRAINERS

A large suction strainer, which will prevent the passage of a body larger than the pump impeller ports, must always be used on the free end of the suction line when pumping from draft.

The small hydrant strainer must always be inserted in the suction manifold of pump, when pumping from hydrants and at all other times except when maximum capacity is required from draft.

Failure to use a strainer at all times when pumping will cause serious trouble by clogging the pump because, even in water mains, foreign matter is invariably present, and will be drawn into pump by the high velocity of the water entering.

SUCTION LINE

The suction line of a fire pump can be the source of more operating difficulties than all the rest of the pump when working with a suction lift. Faults in the suction line which cause trouble in operation are as follows:

AIR LEAKS:

A small amount of air, expanding in the vacuum of the suction line, displaces a considerable volume of water which subtracts from the capacity that the pump is able to deliver, making the priming difficult or causing the pump to lose its prime. Therefore, it is absolutely essential to keep the suction line and the suction side of pump casing air tight at all time when drafting water.

Air leakage into pump while operating is usually indicated by a rattling sound in pump casing, miniature explosions in stream issuing from the nozzle, or by losing of prime when operating at very low capacities.

The usual cause of leaky suction lines is carelessness in handling of suction hose. Bruising of hose threads by bumping against hard surfaces or sand in the coupling often prevents tightening of the joints up against the gaskets. The hose gaskets are often defective and are sometimes lost without being noticed by the operator.

INSUFFICIENT SUBMERGENCE:

The free end of suction hose must be submerged to a sufficient depth to prevent the entrance of air that may be sucked down from the surface of the water to a considerable depth when operating at large capacities.

Entrance of air into suction lines in this manner is indicated by a small whirlpool, or vortex, on the surface of the water over the end of the hose.

A minimum submergence of 4 times the hose diameter to the upper holes in suction strainer is recommended where full capacity of pump is required. Where sufficient submergence is not possible, a board or sheet of metal laid over end of suction line will keep air from entering.

SUCTION LINE ENTRANCE TOO CLOSE TO BOTTOM:

If the end of suction line is laid on the bottom of the source of supply, a part of the suction opening will be shut off; and if the bottom is soft, the hose will suck itself down into the earth closing more of the opening and loosening sand and mud to be carried into the pump.

The suction entrance should be suspended a foot or more above the bottom, or if this is not possible, it should be laid on a board or piece of sheet metal. A rope tied to the suction strainer is a convenient means of holding it off the bottom.

OBSTRUCTION OF SUCTION STRAINER BY FOREIGN MATTER:

The high velocity of water entering the suction line will carry loose foreign bodies in against the strainer from a considerable distance. Therefore, all weeds and refuse should be removed from close proximity of the suction entrance.

SUCTION LINE TOO SMALL OR TOO LONG:

The flow of water into the pump is opposed by the frictional resistance in the suction line. This friction loss must be added to the height of the pump above the water (static lift) to determine the "total lift" of the pump. When all of the vacuum in the pump (atmospheric pressure) is consumed in raising water through this total lift, then the limit of capacity has been reached. This capacity can be increased only by decreasing total lift. If the static lift cannot be reduced, then the friction loss must be reduced by using a shorter or larger suction hose.

The rated capacity of the pump is guaranteed for a static lift of 10 feet for ratings up to 1500 gpm, with 20 feet of recommended suction hose at 2000 feet. To increase the capacity without reducing the static lift, or to increase lift without sacrificing capacity, requires larger suction hose.

An excessively long suction line is a handicap to any pump, for besides reducing capacity through the added friction loss, it retards priming and it produces a detrimental effect known as "cavitation". This means a separation of the water column in the pump suction, or void spaces, produced by the inertia of the heavy mass of water in the line resisting sudden change in the velocity when the pump starts to deliver or when discharge valves are opened or closed. This phenomenon reduces

capacity further, and usually sets up a vibratory motion and “water hammer” as the water surges in and out of the void spaces.

When operating with a long suction line, the driving engine should be accelerated gradually, the discharge gates opened gradually, and the capacities of the pump should be held down to within the range of smooth performance.

AIR TRAP IN SUCTION LINE:

If the suction line is laid so that part of it is higher than any other part that is nearer to the pump, as when hose is laid over a high bridge rail, an air trap is formed at the highest part of the hose from which the air cannot be sucked out by the primer. This trapped air is expanded and carried into the pump with the first rush of water causing the pump to immediately lose its prime.

If suction line cannot be laid so that it slopes all the way from pump to water, it can still be primed easily by simply allowing the primer to continue to function until all the trapped air in the hose has been carried into the pump and picked up by the primer.

TESTING FOR AIR LEAKS

Tests for leakage should be made with the suction hose attached and capped, discharge gate open, and all other openings closed tightly.

Run electric priming pump with primer shut-off valve open, until 22" of Hg is shown on the gage. The vacuum should hold for no more than 10" of drop in 5 minutes before satisfactory performance of pump can be expected.

If excessive leakage of air occurs, the source of leaks can be located by shutting off primer motor, with vacuum at its highest point, and listening for the hiss of air.

In the absence of a vacuum gage, the vacuum in pump may be judged by closing suction opening with the flat of hand or a rubber pad.

Water or air pressure may be applied to pump casing to test for air leakage if more convenient. DO NOT pressurize with air beyond 10 PSI

SOURCE OF WATER SUPPLY

Water may be drafted from a pond, lake, stream, cistern, stock tank, or well; but whatever the source, the static lift must not exceed 20 feet from the center of the pump to the surface of the water and a lift not exceeding 10 feet is recommended. The source of supply should be reasonably clear and free from foreign matter. It is recommended that all water holes, which may be needed for fire protection, be deepened if necessary and kept free from weeds and refuse. In many fire protection areas, cisterns or reservoirs are built and allowed to fill up with rain water to be used in emergencies.

PUMPING IN COLD WEATHER

The first insurance against cold weather trouble is to keep fire apparatus stored in heated quarters. All water must be eliminated from pump casing and primer line between periods of operations.

When setting up for pumping, unnecessary delays should be avoided by having thoroughly trained pump operators. Be sure that primer and booster lines are kept closed until ready for use. Having discharge lines ready so that pump may be started as soon as it have become primed. Do not stop flow of water through the pump until ready to drain and return to the station.

Engine Coolant from the engine circulated through the heater jacket in pump casing prevents all ordinary freezing troubles.

WHEN FINISHED PUMPING

Drain water out of pump casing immediately. (Drain valve is located at lowest point in pump casing, and usually accessible from underneath operators panel.)

Don't forget to close all drain cocks after all water has been drained out. Trouble in priming will follow on the next run if this is forgotten.

Shut off cooling line to make pump ready for priming again.

If pump transmission is equipped with a transmission cooler it must be drained also. If the master drain is located below the cooler outlets it can be connected to the master drain, if not, two separate drains must be connected to the transmission cooler. **Failure to drain transmission cooler may result in water in the gearcase if water in the cooling coil freezes.**

If pump is equipped with a heat exchanger, drain heat exchanger using gravity and vacuum drain on all trucks as follows: Close all open lines and drain cocks. Open cooler valve and open air vent at top or drain cock at bottom of heat exchanger depending on model. With the pump air-tight, open primer with engine running for about a minute and then close primer. Drain pump of water which was deposited when heat exchanger and lines were being drained.

Pump not often used for fire service should be inspected and run periodically to ensure that they will be in readiness for an emergency.

PUMPING SALT WATER

The pump should be flushed out with fresh water immediately after pumping salt water to prevent excessive rusting. (Except pumps which are built of special materials, such as bronze, to resist the corrosive action of the brine.)

When measuring sea water with a Pitot Gage, capacities shown in Table No. 2 should be discounted approximately 1 1/2% to determine the correct capacity.

A centrifugal pump will show 3% higher pressure and require 3% more power when handling sea water than when handling fresh water if operated at the same speed and capacity.

TESTING OF EQUIPMENT FOR PRACTICE

It frequently happens that operators of fire apparatus, who are not thoroughly familiar with its operations, become confused under the stress of emergency and neglect some little detail that may cause trouble or delay in getting the equipment into operation. Therefore, we urge that practice tests be conducted repeatedly until operators are thoroughly trained. More than one person in the department should be a competent operator.

Practice should include pumping from low lifts, high lifts with short and long suction lines, with suction line elevated to form an air trap, and from hydrants, at large and small capacities.

It is important to note the effects of air leaks in hose, insufficient submergence and restriction of suction line. (Suction line can be restricted by placing a can or other strong closure around the suction strainer).

NEVER BREAK OR RESTRICT SUCTION OR ALLOW AIR TO ENTER SUCTION LINE WHILE ENGINE IS OPERATING WITH THROTTLE OPEN. This will release the load and allow engine to run away.

Do not allow personnel to hold a large nozzle while working at high pressures for serious accidents may result if hose breaks loose.

MEASURING PUMP PERFORMANCE

Pump performance is measured by the quantity of water it can deliver per minute against a certain pressure called "Total Head" or "Net Pump Pressure", as it is usually termed in fire pump testing.

The net pump pressure is the sum of the pump discharge pressure, as shown on the pressure gage with which the pump is regularly equipped, and the total suction lift converted to equivalent pounds per square inch. If pump is operating from a hydrant, the net pump pressure is the discharge pressure less the incoming pressure from hydrant measured at the suction entrance of pump.

Capacity of fire pump is measured in gallons per minute. The usual method of measurement is to determine the pressure of the jet of water leaving a given size of nozzle by means of a "Pitot Gage" from which the capacity is computed mathematically.

A Pitot Gage consists of a small tube adapted to a point directly into the hose nozzle from the center of the issuing stream, the other end of the tube being connected to an accurate pressure gage.

The nozzle jet drives straight into the Pitot tube and converts the velocity of the jet to pressure which is an accurate measure of velocity of the water as it leaves the nozzle. The tip of the Pitot tube should be one-half the diameter of the nozzle away from nozzle tip while taking reading. Table No. 2 gives nozzle capacities for various Pitot Gage readings.

If a Pilot gage is not available approximate pump capacities can be determined by reference to Table No.3

ACCEPTANCE TESTS

Acceptance tests require continuous tests of three hours duration: 2 hours at 100% rated capacity and 150 PSI net pump pressure; one-half hour at 70% capacity and 200 PSI; one-half hour at 50% capacity and 250 PSI; and a spurt test at 100% capacity and 165 PSI.

Table No. 1 shows recommended set-ups and gage readings for rating tests.

To adjust nozzle pressure for the correct capacity, while maintaining the correct pump pressure, it is necessary to make simultaneous adjustments of engine throttle and the discharge gate valve, partially closing the latter until just the right discharge resistance is built up.

ENGINES

A fire pump imposes heavy loads on the engine that drives it, sometimes absorbing all of the power the engine is capable of delivering at full throttle. Continuous pumping gives the engine no time to rest. Therefore, a new engine and pump unit must be thoroughly broken-in before it is required to deliver prolonged maximum pump performance.

We recommend a minimum break in period of 20 hours at light pumping loads, with occasional spurt tests and interruptions. Temperature and lubrication should be checked during this period.

Engine manufacturers' power ratings usually show maximum performance of a selected, factory adjusted engine, operating without fan, generator, muffler or other accessories, and corrected for "ideal" conditions, i.e. sea level barometer (29.92" of mercury) 60°F and high humidity. Therefore, the actual power delivered by an average truck mounted engine is considerably lower than the manufacturers' rating, and allowances must be made in predicting pump performance.

EFFECTS OF ATMOSPHERIC CONDITIONS ON ENGINE AND PUMP PERFORMANCE

Each one inch of drop in Barometric pressure or each 1000 feet of elevation of the pumping site reduces engine power approximately 3 1/2% for engines not equipped with a turbo charger.

Each 12° rise in temperature above 60° F of carburetor intake air reduces engine power approximately 1%.

Lowering of humidity reduces power slightly.

Each one inch drop in Barometric pressure or each 1000 feet of elevation reduces the maximum possible static lift of a pump approximately one foot.

Temperature of the water supply affects the attainable suction lift of a pump. The effect is slight at low water temperatures but becomes increasingly detrimental as the temperature rises.

A 10° rise from 70°F will subtract about 1/2 foot from the maximum attainable suction lift, while an equal rise from 100°F will reduce the lift at least 1 1/2 feet.

Temperature is an important consideration when pumping from a test pit where the water is heated by recirculation.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

DEFINITIONS

HEAD OF WATER -- vertical depth of water measured in feet or in pressure per unit or area. In hydraulics, head always represents pressure and it is expressed interchangeably in feet of water or pounds per square inch and sometimes in inches of depth of mercury.

STATIC HEAD -- the pressure that is exerted by a stationary column of water of a given height or depth.

TOTAL HEAD OR TOTAL DYNAMIC HEAD -- the maximum height above the source of supply to which the pump would elevate the water plus all the resistance to flow in the pipe or hose line.

DISCHARGE HEAD -- the pressure measured at the discharge outlet of a pump.

SUCTION HEAD -- the positive pressure measured at the suction entrance of a pump (when pumping from an elevated tank or hydrant).

VELOCITY HEAD -- the equivalent pressure represented by fluid in motion as measured by means of a Pitot Gage.

STATIC LIFT -- the vertical height of the center of the pump above the source of supply (when pump from draft).

TOTAL SUCTION LIFT -- the static lift plus the friction in suction line plus entrance losses.

NET PUMP PRESSURE -- the total dynamic head of the pump.

EFFECTIVE NOZZLE PRESSURE -- the pump discharge pressure minus hose friction plus or minus the difference in elevation above or below pump.

WATER HORSEPOWER - the theoretical power required to deliver a given quantity of water per minute against a given head.

BRAKE HORSEPOWER -- Actual power as delivered by a motor or engine to a driven machine.

PUMP EFFICIENCY -- The quotient of the water horsepower divided by brake horsepower required to produce it.

WATER HAMMER -- a series of shock waves produced in a pipeline or pump by a sudden change in water velocity. A sudden change in flow velocity can result from rapid closure of valves. A pressure wave is set up which travels back and forth in the water column at extremely high speed producing rapid vibrations that may be violent and destructive if the water column is long.

THE MAXIMUM THEORETICAL LIFT of a pump is 34 feet, which is the pressure of the atmosphere at sea level. The maximum practical total lift at sea level is 20 to 25 feet (depending on the type and condition of the pump) and this decreases with drops in barometric pressure.

OPERATING CHARACTERISTICS OF PUMPS

CENTRIFUGAL PUMPS: A centrifugal pump develops pressure by centrifugal force of the liquid rotating in the impeller wheel. The pressure developed depends upon the peripheral speed of the impeller (increasing as the square of the speed) and it remains fairly constant over a wide range of capacities up to the maximum output of the pump, if speed remains constant.

If the discharge outlet of a centrifugal pump is entirely shut off, with speed kept constant, there is a small rise in pressure, the water churns in the pump casing and the power drops to a low value. If the discharge is opened wide, with little resistance to flow the pressure drops while the capacity and power both increase to their maximum.

A centrifugal pump is an extremely simple mechanism mechanically, but rather complex hydraulically; in that many factors enter into the design of the impeller and water ways which will affect the pump's efficiency.

DISPLACEMENT PUMPS: Rotary and piston pumps are termed "Positive Displacement" pumps because each revolution displaces or discharge (theoretically) an exact amount of liquid, regardless of the resistance. The capacity is, therefore, proportional to the number of revolutions of the pump per minute and independent of the discharge pressure except as it is reduced by "slip" (leakage past the pistons or rotors). For a given speed the power is directly proportional to the head. If the discharge is completely shut off, the pressure, power, and torque climb indefinitely until the drive power is stalled or breakage occurs.

Slip is the greatest factor affecting efficiency of a displacement pump, and this factor is greatly influenced by the condition of and wears on the working parts.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

CONVERSION FACTORS

One pound per square inch	=	2.31 feet of water
	=	2.04 inches of mercury
	=	27.7 inches of water
One foot of water	=	0.43 pounds per square inch
One inch of mercury	=	1.13 feet of water
	=	0.49 pounds per square inch
One cubic foot of water	=	62.4 pounds
	=	7.5 gallons
One gallon of water	=	231 cubic inches
	=	0.13 cubic feet
	=	8.34 pounds
	=	3.8 liters
One Imperial Gallon	=	1.2 U.S. gallons
Atmospheric Pressure (Sea Level)	=	14.8 pounds per square inch
	=	29.9 inches of mercury
	=	34 feet of water

TABLE NO. 1
NFPA 1901 TEST

Class A							
TEST No.	GPM	Recom- mended Nozzles	Min. Nozzle Press. PSI	Min. Disch. Press. PSI	Min. Net Pump Press. PSI	Disch. Lines	Suction Hose
250 GPM Fire Pump							
1	250	(1), 1”	72	143	150	(1), 50'	20’ of 3”
2	175	(1), 7/8”	62	194	200		
3	125	(1), 3/4”	56	244	250		
4	250	(1), 1”	72	158	165		
350 GPM Fire Pump							
1	350	(1), 1-1/4”	58	144	150	(1), 50'	20’ of 4”
2	245	(1), 1”	69	195	200		
3	175	(1), 7/8”	62	245	250		
4	350	(1), 1-1/4”	58	159	165		
500 GPM Fire Pump							
1	500	(1), 1-1/2"	57	143	150	(1), 50'	20' of 4"
2	350	(1), 1-1/4"	58	194	200		
3	250	(1), 1"	72	245	250		
4	500	(1), 1-1/2"	57	158	165		
750 GPM Fire Pump							
1	750	(1), 1-3/4" or (2), 1-1/4"	68 66	142	150	(2), 50'	20' of 4-1/2"
2	525	(1), 1-1/2"	62	193	200	or	
3	375	(1), 1-1/4"	66	244	250	(2), 100'	
4	750	(1), 1-3/4" or (2), 1-1/4"	68 66	157	165	Siamesed	
1000 GPM Fire Pump							
1	1000	(1), 2" or (2), 1-1/2"	71 57	142	150	(2), 50'	20' of 5"
2	700	(1), 1-3/4" or (2), 1-1/4"	60 58	193	200	or	
3	500	(1), 1-1/2"	57	244	250	(3), 100'	
4	1000	(1), 2" or (2), 1-1/2"	71 57	157	165	Siamesed	

Min. discharge pressures listed above are for pumps operating with full 10' static suction lift. These pressures must be increased by 1 PSI for each 2.3 ft. less than 10' of lift.

TABLE NO. 1
NFPA 1901 TEST

Class A							
TEST No.	GPM	Recom- mended Nozzles	Min. Nozzle Press. PSI	Min. Disch. Press. PSI	Min. Net Pump Press. PSI	Disch. Lines	Suction Hose
1250 GPM Fire Pump							
1	1250	(1), 2-1/4" or (2), 1-1/2"	69 88	143	150	(3), 50'	20' of 6"
2	875	(1), 2" or (2), 1-3/8"	55 61	194	200	or	
3	625	(1), 1-1/2" 2-1/4"	88 69	245	250	(3), 100'	
4	1250	or (2), 1-1/2"	88	158	165	and (1), 50'	
						Siamesed	
1500 GPM Fire Pump							
1	1500	(2), 1-3/4" or (3), 1-1/2"	68 57	142	150	(3), 50'	20' of
2	1050	(1), 2" or (2), 1-1/2"	78 62	194	200	or	6" Min
3	750	(1), 1-3/4" or (2), 1-1/4"	68 66	245	250	(3), 100' and (1), 50'	or (2) 20' of
4	1500	(2), 1-3/4" or (3), 1-1/2"	68 57	157	165	Siamesed	6" Max

Min. discharge pressures listed above are for pumps operating with full 10' static suction lift. These pressures must be increased by 1 PSI for each 2.3 ft. less than 10' of lift.

TABLE NO. 1
NFPA 1901 TEST

Class A							
TEST No.	GPM	Recom- mended Nozzles	Min. Nozzle Press. PSI	Min. Disch. Press. PSI	Min. Net Pump Press. PSI	Disch. Lines	Suction Hose
1750 GPM Fire Pump							
1	1750	(2), 2" or (3), 1-1/2" (2), 1-5/8" or	55 76 61	143	150	(4), 50'	(2) 20' of 6"
2	1225	(2), 1-1/2" or (3), 1-1/4"	84 79	194	200	or	
3	875	(1), 2" or (2), 1-3/8"	55 61	245	250	(4), 100'	
4	1750	(2), 2" or (3), 1-1/2"	55 76	158	165		
2000 GPM Fire Pump							
1	2000	(2), 2" or (4), 1-1/2" (2), 1-3/4"	71 57 60	147	150	(4), 50'	(2) 20' of 6"
2	1400	or (3), 1-1/2" (1), 2"	49 71	199	200	or	
3	1000	or (2), 1-1/2" (2), 2"	57 71	249	250	(4), 100'	
4	2000	or (4), 1-1/2"	57	163	165		
2250 GPM Fire Pump							
1	2250	(2), 2-1/4"	56	144	150	(2 Groups) (3), 100'	20' of 8"
2	1575	(2), 1-3/4"	76	196	200	Siamesed	
3	1125	(2), 1-1/2"	72	246	250		
4	2250	(2), 2-1/4"	56	153	165		

Min. discharge pressures listed above are for pumps operating with full 10' static suction lift. These pressures must be increased by 1 PSI for each 2.3 ft. less than 10' of lift.

TABLE NO. 1
NFPA 1901 TEST

Class A							
TEST No.	GPM	Recom- mended Nozzles	Min. Nozzle Press. PSI	Min. Disch. Press. PSI	Min. Net Pump Press. PSI	Disch. Lines	Suction Hose
2500 GPM Fire Pump							
1	2500	(2), 2-1/4"	69	144	150	(2 Groups) (3), 100'	20' of 8"
2	1750	(2), 2"	55	195	200	Siamesed	
3	1250	(2), 1-1/2"	88	246	250		
4	2500	(2), 2-1/4"	69	159	165		
3000 GPM Fire Pump							
1	3000	(2), 2-1/2"	65	146	150	(2 Groups) (3), 100'	(2) 20' of 8"
2	2100	(2), 2"	78	196	200	Siamesed	
3	1500	(2), 1-3/4"	68	247	250		
4	3000	(2), 2-1/2"	65	161	165		
3000 GPM Industrial Fire Pump							
1	3000	(2), 2-1/2"	65	96	100	(2 Groups) (3), 100'	(2) 20' of 8"
2	2100	(2), 2"	78	146	150	Siamesed	
3	1500	(2), 1-3/4"	68	197	200		
3500 GPM Industrial Fire Pump							
1	3500	(2), 2-1/2" and (1), 2-1/4"	45 44	95	100	(2 Groups) (3), 100' Siamesed	(2) 20' of 8"
2	2450	(2), 2-1/4"	67	146	150	&	
3	1750	(2), 2"	55	197	200	(2)-50' Siamesed	

Min. discharge pressures listed above are for pumps operating with full 10' static suction lift. These pressures must be increased by 1 PSI for each 2.3 ft. less than 10' of lift.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

TABLE NO. 2
DISCHARGE FROM SMOOTH BORE NOZZLE
Pressures measured by Pitot gage.

Nozzle Pressure PSI	1/4	3/8	1/2	5/8	3/4	7/8	1	1 1/8	1 1/4	1 3/8	1 1/2	1 5/8	1 3/4	2	2 1/4	2 1/2
GALLONS PER MINUTE DELIVERED																
5	4	9	16	26	37	50	66	84	103	125	149	175	203	266	337	415
6	4	10	18	28	41	55	72	92	113	137	163	192	223	292	369	455
7	4	11	19	30	44	59	78	99	122	148	176	207	241	315	399	491
8	5	11	21	32	47	64	84	106	131	158	188	222	257	336	427	525
9	5	12	22	34	50	67	89	112	139	168	200	235	273	357	452	557
10	6	13	23	36	53	71	93	118	146	177	211	248	288	376	477	587
12	6	15	25	40	58	78	102	130	160	194	231	271	315	412	522	643
14	7	15	27	43	63	84	110	140	173	210	249	293	340	445	564	695
16	7	16	29	46	67	90	118	150	185	224	267	313	364	475	603	743
18	7	17	31	49	71	95	125	159	196	237	283	332	386	504	640	788
20	8	18	33	51	75	101	132	167	206	250	298	350	407	532	674	830
22	8	19	34	54	79	105	139	175	216	263	313	367	427	557	707	871
24	8	20	36	56	82	110	145	183	226	275	327	384	446	582	739	909
26	9	21	37	59	85	115	151	191	235	286	340	400	464	606	769	947
28	9	21	39	61	89	119	157	198	244	297	353	415	481	629	799	982
30	10	22	40	63	92	123	162	205	253	307	365	429	498	651	826	1017
32	10	23	41	65	95	127	167	212	261	317	377	443	514	673	854	1050
34	11	23	43	67	98	131	172	218	269	327	389	457	530	693	880	1082
36	11	24	44	69	100	135	177	224	277	336	400	470	546	713	905	1114
38	11	25	45	71	103	138	182	231	285	345	411	483	561	733	930	1144
40	11	26	46	73	106	142	187	237	292	354	422	496	575	752	954	1174
42	11	26	47	74	109	146	192	243	299	363	432	508	589	770	978	1203
44	12	27	49	76	111	149	196	248	306	372	442	520	603	788	1000	1231
46	12	28	50	78	114	152	200	254	313	380	452	531	617	806	1021	1259
48	12	28	51	80	116	156	205	259	320	388	462	543	630	824	1043	1286
50	13	29	52	81	118	159	209	265	326	396	472	554	643	841	1065	1313
52	13	29	53	83	121	162	213	270	333	404	481	565	656	857	1087	1339
54	13	30	54	84	123	165	217	275	339	412	490	576	668	873	1108	1364
56	13	30	56	86	125	168	221	280	345	419	499	586	680	889	1129	1389
58	13	31	56	87	128	171	225	285	351	426	508	596	692	905	1149	1414
60	14	31	57	89	130	174	229	290	357	434	517	607	704	920	1168	1437
62	14	32	58	90	132	177	233	295	363	441	525	617	716	936	1187	1462
64	14	32	59	92	134	180	237	299	369	448	533	627	727	951	1206	1485
66	14	33	60	93	136	182	240	304	375	455	542	636	738	965	1224	1508
68	14	33	60	95	138	185	244	308	381	462	550	646	750	980	1242	1531
70	15	34	61	96	140	188	247	313	386	469	558	655	761	994	1260	1553
72	15	34	62	97	142	191	251	318	391	475	566	665	771	1008	1278	1575
74	15	35	63	99	144	193	254	322	397	482	574	674	782	1023	1296	1597
76	15	35	64	100	146	196	258	326	402	488	582	683	792	1036	1313	1618
78	15	36	65	101	148	198	261	330	407	494	589	692	803	1050	1330	1639

TABLE NO. 2
DISCHARGE FROM SMOOTH BORE NOZZLE
Pressures measured by Pitot gage.

Nozzle Pressure PSI	GALLONS PER MINUTE DELIVERED															
	1/4	3/8	1/2	5/8	3/4	7/8	1	1 1/8	1 1/4	1 3/8	1 1/2	1 5/8	1 3/4	2	2 1/4	2 1/2
80	16	36	66	103	150	201	264	335	413	500	596	700	813	1063	1347	1660
82	16	37	66	104	152	204	268	339	418	507	604	709	823	1076	1364	1681
84	16	37	67	105	154	206	271	343	423	513	611	718	833	1089	1380	1701
86	16	37	68	107	155	208	274	347	428	519	618	726	843	1102	1396	1721
88	16	38	69	108	157	211	277	351	433	525	626	735	853	1115	1412	1741
90	17	39	70	109	159	213	280	355	438	531	633	743	862	1128	1429	1761
92	17	39	70	110	161	215	283	359	443	537	640	751	872	1140	1445	1780
94	17	39	71	111	162	218	286	363	447	543	647	759	881	1152	1460	1800
96	17	40	72	113	164	220	289	367	452	549	654	767	890	1164	1476	1819
98	17	40	73	114	166	223	292	370	456	554	660	775	900	1176	1491	1838
100	18	41	73	115	168	225	295	374	461	560	667	783	909	1189	1506	1856
105	18	42	75	118	172	230	303	383	473	574	683	803	932	1218	1542	1902
110	19	43	77	121	176	236	310	392	484	588	699	822	954	1247	1579	1947
115	19	43	79	123	180	241	317	401	495	600	715	840	975	1275	1615	1991
120	19	44	80	126	183	246	324	410	505	613	730	858	996	1303	1649	2033
125	20	45	82	129	187	251	331	418	516	626	745	876	1016	1329	1683	2075
130	20	46	84	131	191	256	337	427	526	638	760	893	1036	1356	1717	2116
135	21	47	85	134	195	262	343	435	536	650	775	910	1056	1382	1750	2157
140	21	48	87	136	198	266	350	443	546	662	789	927	1076	1407	1780	2196
145	21	49	88	139	202	271	356	450	556	674	803	944	1095	1432	1812	2235
150	22	50	90	141	205	275	362	458	565	686	817	960	1114	1456	1843	2273

TABLE NO. 3
Approximate Discharge Flow From Different Nozzles
At the end of Fifty Feet of Average, 2 1/2"
Rubber Lined Fire Hose, for Various
Pump Pressures with Discharge
Valve Wide Open

PUMP PRESSURE LBS	SIZE OF		NOZZLE &		GALLONS PER		MINUTE
	3/4	7/8	1	1 1/8	1 1/4	1 3/8	1 1/2
30	90	119	153	187	217	250	282
40	103	137	177	216	253	290	327
50	115	153	198	242	284	325	367
60	126	168	216	265	311	357	402
70	136	182	234	287	337	385	435
80	145	194	250	308	361	414	465
90	154	206	265	325	383	437	492
100	162	217	280	343	405	462	520
110	171	228	295	360	425	485	549
120	179	239	307	377	444	510	572
130	186	249	318	392	462	530	596
140	193	258	330	407	480	549	618
150	200	267	341	421	497	567	
175	215	288	374	455	538		
200	230	309	395	486			
225	243	328	420				
250	257	345					

This table is offered as an aide in testing pump performance where facilities for accurate measurement of capacity are not available. The capacities given above are conservative, and will not vary more than 5% from actual capacities with any of the standard hose that might be used.

TABLE NO. 4

**Pump or Hydrant Pressure required to give
Effective Nozzle Pressure through various
Lengths of Rubber Lined Hose.**

Size of Hose		1	1 1/2				2	2 1/2					3	
Size of Nozzle		1/4	3/8	1/2	5/8	5/8	3/4	3/4	7/8	1	1 1/4	1 1/2	1 1/4	1 1/2
Nozzle Press PSI	Length of Hose Feet	PUMP OR HYDRANT PRESSURE - PSI												
40	100	45	43	48	60	42	50	44	46	51	64	88	51	62
	200	49	46	56	79	43	60	47	52	60	86	130	59	78
	400	58	51	73	118	46	79	53	62	79	129	212	75	110
	600	67	57	89	158	50	99	59	74	97	172		92	143
	800	76	62	106	196	53	119	65	85	116	215		108	176
	1000	85	68	122	235	56	138	72	96	134	258		124	208
	1500	108	72	142		64	187	87	118	181			165	
	2000	130	96	204		72	226	103	151	227			205	
60	100	67	64	72	89	63	73	65	69	75	95	132	76	92
	200	74	68	84	117	65	86	70	78	89	126	196	88	115
	400	87	76	107	173	69	112	79	94	116	188		111	161
	600	101	85	131	231	74	138	88	111	143	250		135	208
	800	114	93	153		79	164	98	127	170			158	
	1000	127	101	178		83	190	107	143	197			182	
	1500	161	122	237		95	155	130	184	264				
	2000	195	142			106		153	225					
80	100	88	85	96	117	83	99	87	92	99	126	175	101	103
	200	97	91	112	154	86	117	93	103	115	167		116	154
	400	115	102	143	228	92	154	105	125	148	249		147	
	600	132	112	174		98	191	117	147	181			178	
	800	150	123	206		104	228	129	167	214			209	
	1000	167	134	238		110		141	191	247				
	1500	211	161			125		171	245					
	2000	254	188			140		201						
100	100	111	107	120	146	104	123	108	115	125	157		126	152
	200	122	113	139	192	108	145	116	128	150	209		146	190
	400	143	127	177	284	115	190	130	154	200			184	
	600	165	140	217		123	235	145	180	250			223	
	800	186	154	256		131		159	206					
	1000	208	167			138		174	232					
	1500	262	200			157		211						
	2000		234			175		253						

TABLE NO. 5
REACH OF FIRE STREAMS

Size of Nozzle	1/4"	3/8"	1/2"	5/8"	3/4"	7/8"	1"	1-1/4"	1-1/2"
---------------------------	-------------	-------------	-------------	-------------	-------------	-------------	-----------	---------------	---------------

NOZZLE

PRESSURE EFFECTIVE VERTICAL REACH - Feet

40	30	35	40	50	59	62	64	65	69
60	35	40	45	60	74	77	79	84	87
80	38	42	48	65	81	85	89	94	96
100	40	44	50	68	84	89	94	100	102

NOZZLE

PRESSURE MAXIMUM VERTICAL REACH - Feet

40	60	65	70	75	78	79	80	80	80
60	70	75	85	95	105	106	108	110	110
80	78	83	95	105	117	125	132	140	140
100	80	88	100	110	122	135	145	155	155

NOZZLE

PRESSURE EFFECTIVE HORIZONTAL REACH - Feet

40	20	25	30	40	44	50	55	62	66
60	25	32	37	50	54	61	67	75	80
80	28	35	40	57	62	70	76	84	88
100	30	37	42	60	66	76	84	93	95

NOZZLE

PRESSURE MAXIMUM HORIZONTAL REACH - Feet

40	65	80	90	100	108	120	125	138	140
60	80	95	95	120	127	142	156	176	183
80	90	105	105	135	143	160	175	201	210
100	95	110	110	140	153	180	205	215	223

TABLE NO. 6
Friction Loss in Fire Hose
 Loss in PSI per 100 Feet of Hose

SIZE HOSE	LINEN HOSE			BEST RUBER LINED HOSE							
G.P.M.	1 1/2	2	2 1/2	3/4	1	1 1/2	2	2 1/2	3	3 1/2	(2)-2 1/2
10	1.0			13.5	3.5	0.5	.1				
15	2.2			29.0	7.2	1.0	0.3				
20	3.6			50.0	12.3	1.7	0.4				
25	5.5			75.0	18.5	2.6	0.6				
30	8.0	1.9		105.0	26.0	3.6	0.9				
40	13.0	3.2		180.0	44.0	6.1	1.5				
50	20.0	4.9	1.6		67.0	9.3	2.3				
60	28.0	7.0	2.2		96.0	13.5	3.3				
70	37.0	9.0	3.1		131.0	17.0	4.3				
80	47.0	11.5	3.8		171.0	23.0	5.6				
90	59.0	14.5	5.0		217.0	29.0	7.0				
100	72.0	17.5	5.9		268.0	33.0	8.4				
120		25.0	8.3		386.0	47.0	11.7				
140		34.0	11.0			62.0	16.0	5.2	2.0	0.9	1.4
160		43.0	14.0			78.0	20.0	6.6	2.6	1.2	1.9
180		53.0	17.7			97.0	25.0	8.3	3.2	1.5	2.3
200		63.0	21.5			121.0	30.6	10.1	3.9	1.8	2.8
220						146.0		12.0	4.6	2.1	3.3
240						173.0		14.1	5.4	2.5	3.9
260						204.0		16.4	6.3	2.9	4.5
280						237.0		18.7	7.2	3.3	5.2
300						272.0		21.2	8.2	3.7	5.9
320								23.8	9.3	4.2	6.6
340								26.9	10.5	4.7	7.4
360								30.0	11.5	5.2	8.3
380								33.0	12.8	5.8	9.2
400								36.2	14.1	6.3	10.1
425								40.8	15.7	7.0	11.3
450								45.2	17.5	7.9	12.5
475								50.0	19.3	8.7	13.8
500								55.0	21.2	9.5	15.2
525									23.2	10.5	16.6
550									25.2	11.4	18.1
575									27.5	12.4	19.6
600									29.9	13.4	21.2
650									34.5	15.5	24.8
700									39.5	17.7	28.3
750									45.0	20.1	32.2
800									50.5	22.7	36.2
850									56.5	25.4	40.7
900									63.0	28.2	45.2
1000									76.5	34.3	55.0

Losses in rough walled, rubber hose may be 50% higher than values given above.

TABLE NO. 7
Friction Loss in 15-year-old Steel Pipe
 Loss in PSI per 100 Feet of Pipe

PIPE SIZE G.P.M.	1/8	1/4	3/8	1/2	3/4	1	1 1/4	1 1/2	2	2 1/2	3	4	6	8
1	52.0	12.0	2.8	0.9										
2		45.0	10.0	3.2	4.0									
5			55.0	18.0	4.5	1.4	0.4							
10				64.0	16.0	5.0	1.3	0.6						
15				135.0	34.0	11.0	2.7	1.3	0.5					
20					59.0	18.0	4.7	2.2	0.8					
25					89.0	27.0	7.1	3.4	1.2					
30					125.0	39.0	10.0	4.7	1.7	0.6				
35						51.0	13.0	6.3	2.2	0.7				
40						66.0	17.0	8.0	2.9	0.9				
45						82.0	21.0	10.0	3.6	1.2				
50						99.0	26.0	12.0	4.3	1.4	0.6			
60						140.0	38.0	17.0	6.1	2.0	0.8			
70							49.0	23.0	8.0	2.7	1.1			
80							63.0	29.0	10.0	3.4	1.5			
90							78.0	36.0	13.0	4.3	1.8			
100							96.0	44.0	15.0	5.1	2.2	0.5		
125							144.0	66.0	24.0	7.8	3.3	0.8		
150								93.0	33.0	11.0	4.6	1.1		
175								125.0	44.0	15.0	6.1	1.5		
200									56.0	19.0	7.8	1.9		
250									84.0	28.0	12.0	2.9		
300									114.0	40.0	16.0	4.0	0.6	
350										53.0	22.0	5.4	0.8	
400										68.0	28.0	6.9	1.0	
450										84.0	35.0	8.6	1.2	
500										102.0	42.0	10.0	1.4	0.4
600											60.0	15.0	2.1	0.6
800												25.0	3.5	1
1000												37.0	5.2	1.3
1500													11.0	2.7
2000													19.0	4.7
2500													29.0	7.1
3000														10

TABLE NO. 8
Resistance of Fittings
Equivalent Lengths of Straight Pipe - Feet

PIPE SIZE	1/2	3/4	1	1 1/4	1 1/2	2	2 1/2	3	4	5	6	8
Gate Valve	0.4	0.6	0.8	1.1	1.4	1.8	2.2	2.8	4.1	5.3	6.7	9.4
Global Valve	3.0	4.5	6.0	8.5	10.5	14.0	17.0	22.0	32.0	42.0	53.0	75.0
Angle Valve	1.4	2.0	2.7	3.8	4.8	6.3	7.9	10.5	14.5	18.5	23.0	33.0
Std. Elbow	1.1	1.5	2.0	2.8	3.5	4.7	5.8	7.5	11.0	14.0	18.0	24.0
45 Elbow	0.6	0.8	1.0	1.4	1.6	2.1	2.5	3.1	4.2	5.2	6.3	8.5
Long Sweep EI Str Run Tee	0.5	0.8	1.0	1.4	1.7	2.3	2.8	3.7	5.3	7.0	9.0	12.5
Std. Tee Thru Side Outlet	2.1	2.9	3.9	5.5	6.9	9.1	11.6	14.8	21.0	27.0	34.0	49.0
Sudden Enlargement or contraction	1.8	2.5	3.2	4.2	5.0	6.5	7.5	9.5	13.0	16.0	19.0	25.0
Entrance to Pipe	1.0	1.3	1.6	2.2	2.6	3.3	3.9	4.9	6.5	8.2	10.0	13.0

TABLE NO. 9
To Convert Pounds per Square Inch to
Feet Elevation of Water

2.308ft head = 1.0 psi
1ft head = .433psi

Feet	5	10	15	20	25	30	35	40	45	50	60	70	80	90
Pounds	2.2	4.3	6.5	8.7	11	13	15	17	20	22	26	30	35	39
Feet	100	120	130	140	150	160	170	180	190	200	220	240	260	280
Pounds	43	52	56	61	65	69	74	78	82	87	95	104	113	121
Feet	300	320	340	360	380	400	425	450	475	500	525	550	600	700
Pounds	130	139	147	156	165	173	184	195	206	217	227	238	260	303

Table NO. 10
American National Fire Hose Connection Screw Thread - NH

Size of Hose	4-Mar	1	1 1/2	2 1/2	3	3 1/2	4	4 1/2	5	6	8
Thr's per inch	8	8	9	7.5	6	6	4	4	4	4	4
Thread Designation	0.75-8 NH	1-8 NH	1.5-9 NH	2.5-7.5 NH	3-6 NH	3.5-6 NH	4-4 NH	4.5-4 NH	5-4 NH	6-4 NH	8-4 NH
Max. O.D. Male	1.375	1.375	1.99	3.0686	3.6239	4.2439	5.0109	5.7609	6.26	7.025	9.05

Ref. NFPA 1963

Underwriters Nozzle Tip Thread: 2.1875 O.D. - 12 threads per inch.

IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650

W.S. DARLEY & CO.

OPERATING INSTRUCTIONS - ELECTRIC PRIMING PUMP

The Darley electric primer will develop up to 25 in. Hg. in an air tight pumping system.

The Primer is activated by a combination spring return on-off valve and electric switch. Pulling the valve out opens the valve and closes the electrical circuit to start the motor.

Before the pump can be primed, booster line valves, drain valves, cooling line valve, and all other openings into the pump must be closed and absolutely air tight. The discharge side of the pump is sealed by a check valve, therefore the main discharge valves need not be closed.

When operating from draft, suction hose connections must be tight and free of air leaks.

Make certain the suction hose strainer is properly submerged and free of foreign material.

The main pump drive should remain disengaged until priming is complete to prevent possible damage to impeller seal rings by running "dry".

Pull the primer shutoff valve all the way out to start priming and hold open until water discharges from primer pump exhaust port. Push valve all the way in to shut off primer motor and seal tight.



CAUTION: FOR PRIMING UP TO 10' OF LIFT:

If water does not discharge from the primer exhaust within about 30 seconds (45 seconds with 2 – 20' lengths of hose) stop the primer pump, check for air leaks and make sure primer pump is receiving lubricant from its reservoir, if one is present. **MAX PRIMER OPERATION TIME = 90 seconds every 5 minutes. DO NOT EXCEED 90 SECONDS OF PRIMER OPERATION.**



CAUTION: FOR PRIMING 10' OF LIFT AND HIGHER:

If water does not discharge from the primer exhaust within 90 seconds stop the primer pump, check for air leaks and make sure primer pump is receiving lubricant from its reservoir, if one is present. **DO NOT EXCEED 90 SECONDS OF PRIMER OPERATION.**



CAUTION: The primer pump and motor will begin to generate heat as soon as operation begins. Extended run times (up to 90 seconds) and repeating priming cycles consecutively or within short time periods may lead to premature failure of the primer pump assembly: such failures include but are not limited to: overheating of the motor, seizure of the rotor, and cracking of primer vanes. To avoid this, after your first priming attempt, thoroughly inspect the pump system for air leaks, check that the primer is

receiving lubricant from its reservoir if such is present, and resolve the issue before attempting re-prime.

Engage "Pump" shift to start pumping water.

When pumping from hydrants, the primer is not needed and must be kept closed.

It may be necessary to use the primer momentarily when pumping from a booster tank when the suction head is insufficient to force all the air out of the pump.

LUBRICATING SYSTEM - ELECTRIC PRIMING PUMPS WITH FLUID RESERVOIR

The electric motor rotary van primer pump creates a high vacuum by continuous lubrication of rotor and vanes. Therefore the primer lubricant supply tanks (4 quarts) should be kept full at all times. Recommended primer system lubricant is Darley PRIME GREEN. PRIME GREEN is an environmentally safe, non-toxic, biodegradable lubricant. Its use assures proper primer vane lubricant while minimizing environmental effects.

After the main pump is drained, run the primer motor to drain primer lines and re-lubricate the primer pump.

The vent hole on the lubricant tank cap should be kept open at all times to prevent siphoning lubricant from the tank after the pump is stopped. Do not increase the size of the hole.

Locate the lubricant tank where it may be conveniently inspected and filled.

Should water appear in the lubricant supply tank, the primer valve is leaking. Check and replace valve plug seal o-ring if necessary.



ELECTRIC PRIMING PUMPS WITHOUT FLUID RESERVOIR

The fluidless electric-motor rotary-vane primer pump creates a high vacuum by using a special material for the vanes and an initial factory applied lubricant film. This film must be present in order for the primer to operate properly and to provide maximum life for the primer components.


This film should not wash away completely if the pump is used to pump clean water. If the priming pump is disassembled for any reason, all internal surfaces of the housing and end caps must be cleaned and coated completely with Dow Corning #111 Silicone valve lubricant prior to operating the primer. If a degradation of performance is noticed, performance may be restored by re-applying the film in this manner. It is recommended to service the primer annually to clean and re-apply the silicone film to the inside of the primer housing and end caps. Do not apply grease to the rotor slots, or the sides of the vanes.

After the main pump is drained, run the primer motor to drain primer lines.


NO.	DESCRIPTION	PART NO.	QTY.
1	ASSEMBLY - PRIMER, MOTOR	425105	1
2	BEARING - OILITE, 0.625 ID	176023	2
3	COUPLING - 844093	240450	1
4	CYLINDER - VACUUM PUMP	102800	1
5	HEAD - CYLINDER, INBOARD	200904	1
6	HEAD - CYLINDER, OUTBOARD	200800	1
7	PISTON - 313-18 X 1.00, SST	540810	4
8	KEY - 50, 0.19 X 0.42 GR2	340225	1
9	KEY - WOODRUFF, 606	340220	1
10	MOTOR - PRIMER, 24V	422500	1
11	MUT - MET., 313-15, SST	540302	2
12	O-RING - 3.50 X 3.69 X 0.09	360101	2
13	OIL SEAL - 0.625 ID X 1.128 OD	360055	1
14	TUBE FITTING - 5/16, 25 X .19	350021	1
15	STRAP - GROUND, 12V PRIMER	260516	1
16	WASHER - FLAT, 5/16, STEEL	440160	4
17	WASHER - LOCK, 0.313 ID	340302	2
18	WASHER - LOCK, 0.313 ID	340302	2
19	WASHER - LOCK, 0.313 ID	340302	2

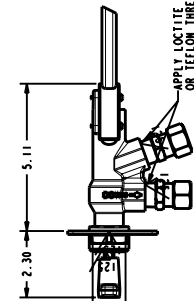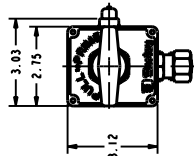


NOTE:
- FOR CROSS SECTION AND EXPLODED VIEW DRAWING
- SEE DRAWING DVC0203
- ALSO, WHEN REPLACING THE OLD VERSION OF THIS VALVE WITH
IT TO THE EXISTING PANEL.

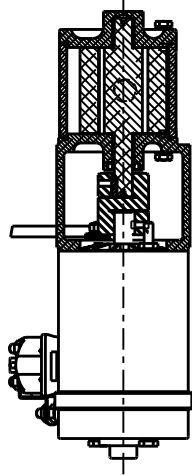

SECTION A-A
SCALE 1/2

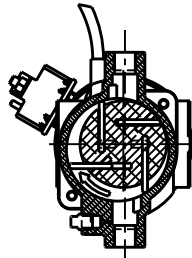

SECTION B-B

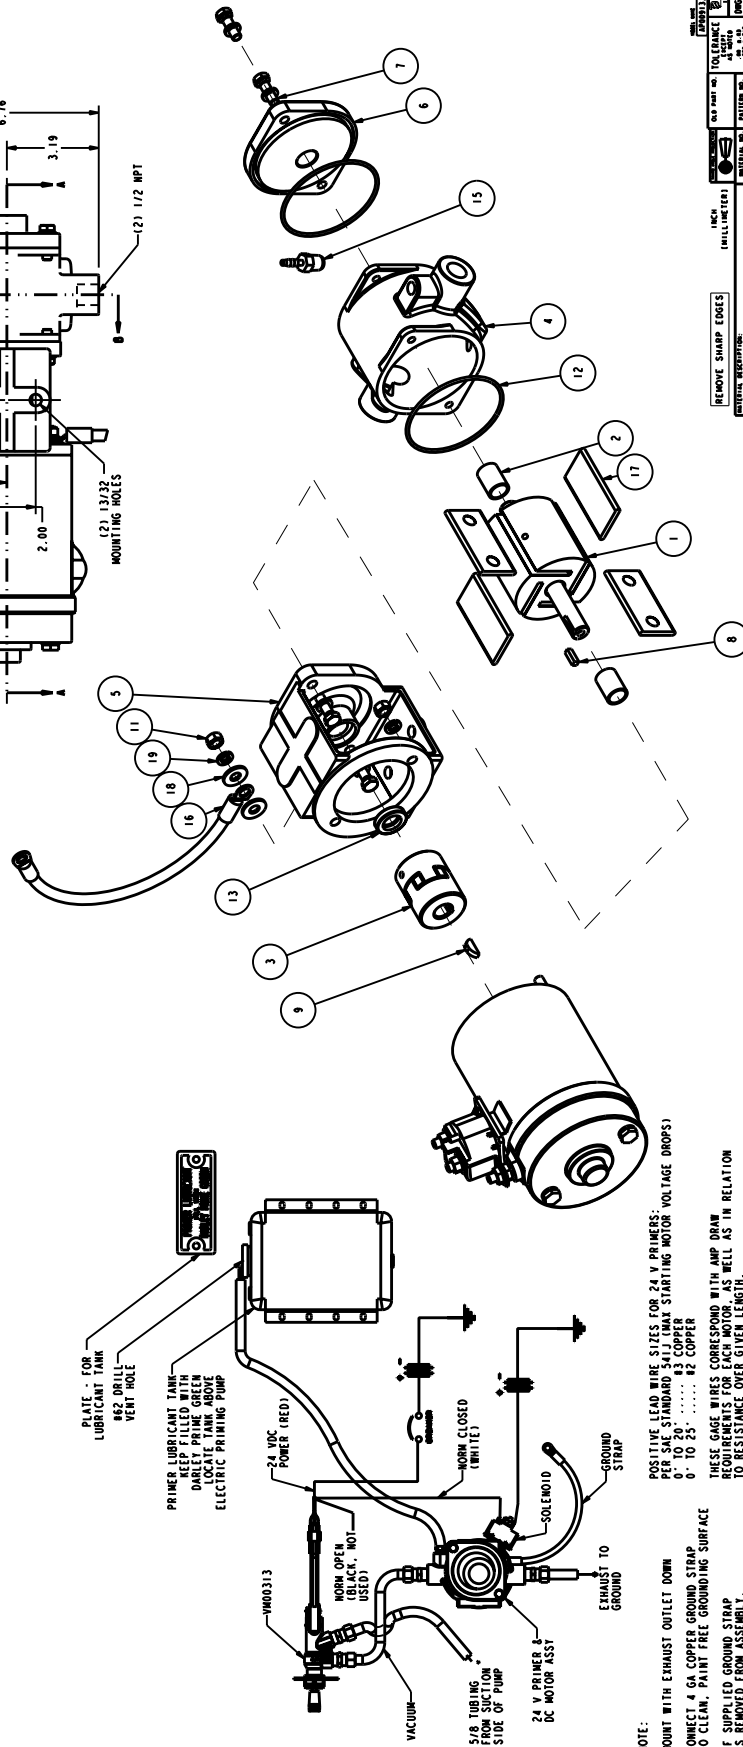

NOTE:
MOUNT WITH EXHAUST OUTLET DOWN
CONNECT 4 GA COPPER GROUND STRAP
TO CLEAN, PAINT FREE GROUNDING SURFACE
IF SUPPLIED GROUND STRAP
RETAINING CYLINDER HEAD ADAPTER
TO 90 IN. LB.
POSITIVE LEAD WIRE SIZES FOR 24 V PRIMERS:
PER SAE STANDARD 541J (MAX STARTING MOTOR VOLTAGE DROPS)
0 TO 20 #3 COPPER
0 TO 25 #2 COPPER
THESE GAGE WIRES CORRESPOND WITH AMP DRAW
REQUIREMENTS FOR EACH MOTOR, AS WELL AS IN RELATION
24 V = 140 AMP

WEIGHT : 27 LB (12.1 KG)

REV.	DESCRIPTION	DATE	BY	CHK.
1	INITIAL RELEASE	12 SEP 2008	111	112
2	REWORK - 1/2" DIA	12 SEP 2008	111	112
3	REWORK - 1/2" DIA	12 SEP 2008	111	112
4	REWORK - 1/2" DIA	12 SEP 2008	111	112
5	REWORK - 1/2" DIA	12 SEP 2008	111	112
6	REWORK - 1/2" DIA	12 SEP 2008	111	112
7	REWORK - 1/2" DIA	12 SEP 2008	111	112
8	REWORK - 1/2" DIA	12 SEP 2008	111	112
9	REWORK - 1/2" DIA	12 SEP 2008	111	112
10	REWORK - 1/2" DIA	12 SEP 2008	111	112
11	REWORK - 1/2" DIA	12 SEP 2008	111	112
12	REWORK - 1/2" DIA	12 SEP 2008	111	112
13	REWORK - 1/2" DIA	12 SEP 2008	111	112
14	REWORK - 1/2" DIA	12 SEP 2008	111	112
15	REWORK - 1/2" DIA	12 SEP 2008	111	112
16	REWORK - 1/2" DIA	12 SEP 2008	111	112
17	REWORK - 1/2" DIA	12 SEP 2008	111	112
18	REWORK - 1/2" DIA	12 SEP 2008	111	112
19	REWORK - 1/2" DIA	12 SEP 2008	111	112

REWORK - 1/2" DIA

W.S. DARLEY & CO.

OPERATING INSTRUCTIONS - ELECTRIC PRIMING PUMP

PUSH BUTTON ELECTRIC ACTUATED VALVE

The Darley electric primer will develop up to 25 in. Hg. in an air tight pumping system.

The Primer is activated by a push button, 0.8 second cycle time, electric-actuated valve. This valve has three wires: ground (black), +12 or +24 VDC constant power (red), and +12 or +24 VDC energizing power (white). The valve has two internal micro-switches that cut the power to the valve when it is either fully closed or fully open. The push button is a simple SPST switch, that bypasses the red (constant power) wire with the white wire and energizes the valve to the open position when it is pushed; and cuts power to the white wire and resumes power to the red wire, closing the valve when it is released. When the button is pushed, the circuit for the primer motor is also completed, priming will begin instantaneously, and likewise when the button is released, the primer motor will shut off instantaneously.

Before the pump can be primed, booster line valves, drain valves, cooling line valve, and all other openings into the pump must be closed and absolutely air tight. The discharge side of the pump is sealed by a check valve; therefore the main discharge valves need not be closed.

When operating from draft, suction hose connections must be tight and free of air leaks.

Make certain the suction hose strainer is properly submerged and free of foreign material.

The main pump drive should remain disengaged until priming is complete to prevent possible damage to impeller seal rings by running "dry".

Push the primer/valve activation button, located on your control panel, and hold until water discharges from primer pump exhaust port.

If water does not discharge from primer exhaust within about 30 seconds (45 seconds with 2-20' lengths) stop primer pump, check for air leaks and make sure primer pump is receiving lubricant from its reservoir.

NOTE: Do not run the primer for more than one minute; it will burn up the motor, if prime is not reached within one minute, repeat the steps above.

Engage "Pump" shift to start pumping water.

When pumping from hydrants, the primer is not needed and must be kept closed.

It may be necessary to use the primer momentarily when pumping from a booster tank when the suction head is insufficient to force all the air out of the pump.

LUBRICATING SYSTEM - ELECTRIC PRIMING PUMPS WITH FLUID RESERVOIR

The electric motor rotary van primer pump creates a high vacuum by continuous lubrication of rotor and vanes. Therefore the primer lubricant supply tanks (4 quarts) should be kept full at all times. Recommended primer system lubricant is Darley PRIME GREEN. PRIME GREEN is an environmentally safe, non-toxic, biodegradable lubricant. Its use assures proper primer vane lubricant while minimizing environmental effects.

After the main pump is drained, run the primer motor to drain primer lines and re-lubricate the primer pump.

The vent hole on the lubricant tank cap should be kept open at all times to prevent siphoning lubricant from the tank after the pump is stopped. Do not increase the size of the hole.

Locate the lubricant tank where it may be conveniently inspected and filled.

Should water appear in the lubricant supply tank, the primer valve is leaking. Check and replace valve plug seal o-ring if necessary.

ELECTRIC PRIMING PUMPS WITHOUT FLUID RESERVOIR

The fluidless electric-motor rotary-vane primer pump creates a high vacuum by using a special material for the vanes and an initial factory applied lubricant film. This film must be present in order for the primer to operate properly and to provide maximum life for the primer components.

This film will not wash away completely if the pump is used to pump water. If the priming pump is disassembled for any reason, all internal surfaces of the housing and end caps must be coated completely with Dow Corning #111 Silicone valve lubricant prior to operating the primer. If after several years, a degradation of performance is noticed, performance may be restored by re-applying the film in this manner.

After the main pump is drained, run the primer motor to drain primer lines.

REVISIONS			
LTR	DESCRIPTION	DATE	CHG NO. APPR'D

SUPPLIED BY KZCO

White: Switched 12 VDC (+) = Relay Energized "OPEN"
 0 VDC = Relay De-energized "CLOSE"

Black: Constant 12 VDC (-)

Red: Constant 12 VDC (+)

CUSTOMER SUPPLIED

2-POSITION SPST Switch

ON OFF

12 VOLTS DC

.50 NPT FE

(1.88)

(6.43)

(7.04)


(4.00)

(2.05)

(2.18)

INCH
[MILLIMETER]





REMOVE SHARP EDGES		THIRD ANGLE PROJECTION		OLD PART NO.		TOLERANCE EXCEPT AS NOTED		MODEL NAME		MDL CREATED		SHEET	
KZCO 84D23-10D20-PO1		MATERIAL NO.		PATTERN NO.		.00 ±.03 .000 ±.010 ANGLES ±1°		5209401		11/13/08		1/2	
ALL DIMENSIONS IN INCHES UNLESS NOTED		DO NOT SCALE PRINT		-		DR 'N RJG CHKD DWS TRCD		W.S. Darley & Co. ITASCA, IL - CHIPPEWA FALLS, WI		VALVE - ACTUATED, 12VDC, .50NPT FE KZCO 84D23-10D20-PO1		DATE 13-Nov-08 SCALE 1/4	
THIS DESIGN IS THE PROPERTY OF W.S. DARLEY AND CO. - UNAUTHORIZED REPRODUCTION IS PROHIBITED												5209401	

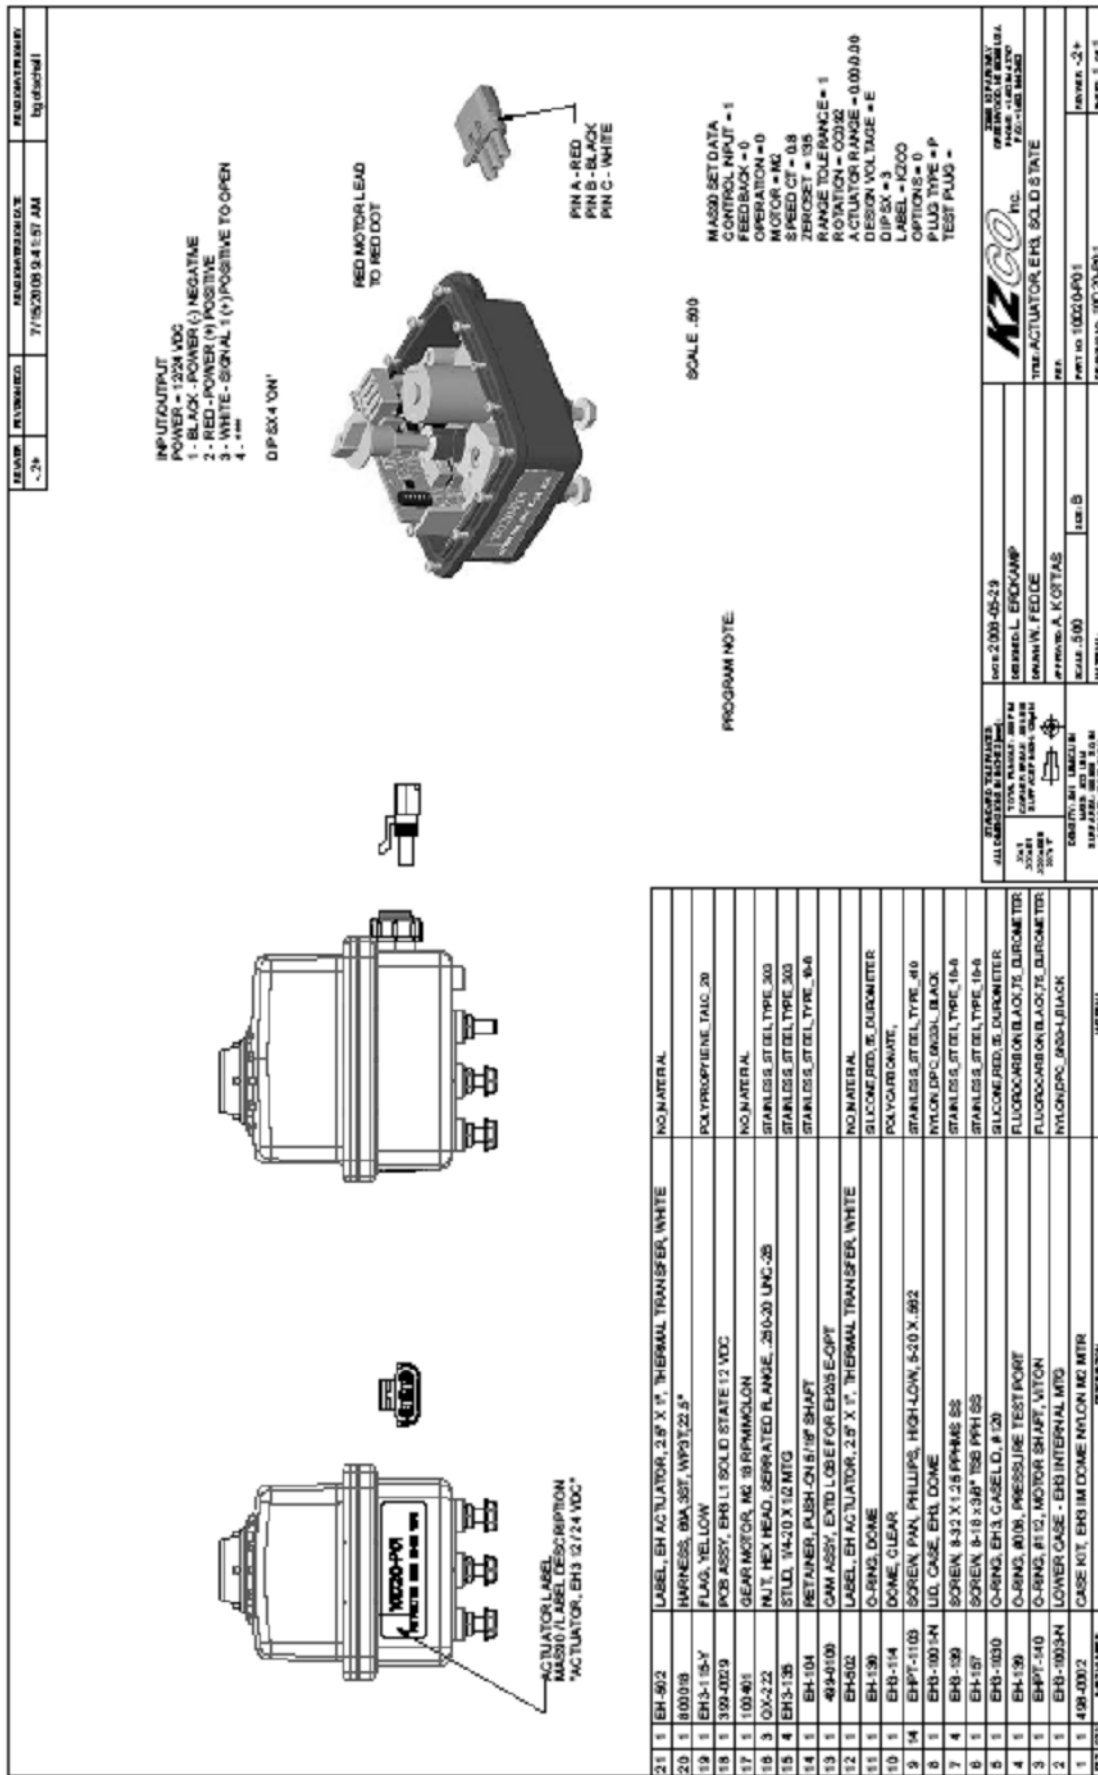

REVISIONS

LTR	DESCRIPTION	DATE	CHG NO.	APPR'D

60AD WIRING Standard On/Off applications, SPST Switch 24 VDC

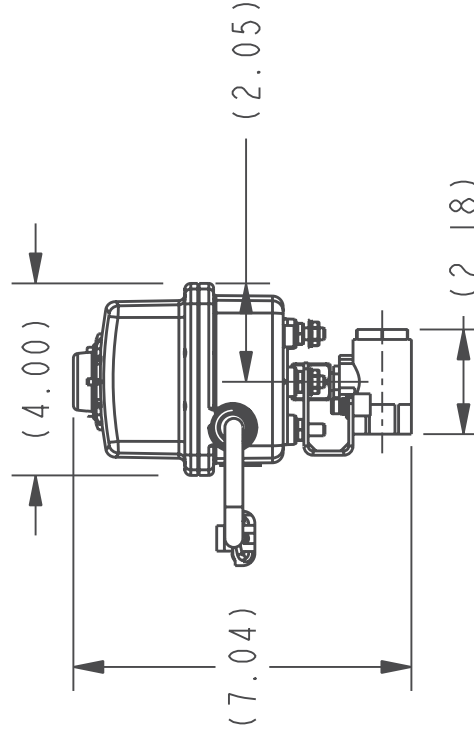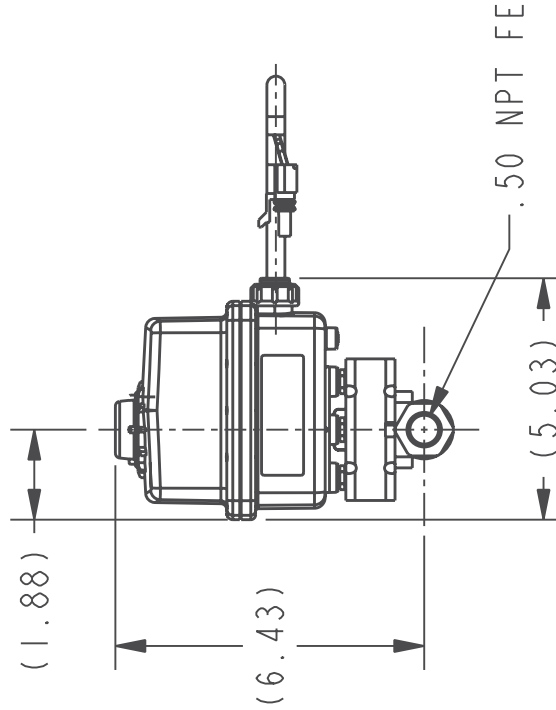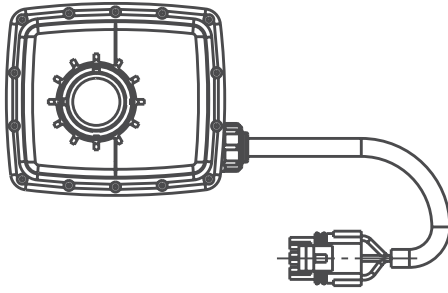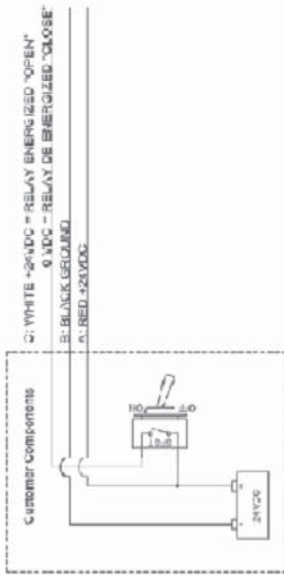

REMOVE SHARP EDGES

INCH
[MILLIMETER]



OLD PART NO.

TOLERANCE
EXCEPT
AS NOTED

MODEL NAME 5209402 MDL CREATED 11/13/08 SHEET 1/3 A

MATERIAL DESCRIPTION:
KZCO 84D23-60AD-M

MATERIAL NO.

PATTERN NO.

W.S. Darley & Co.
ITASCA, IL - CHIPPEWA FALLS, WI
VALVE - ACTUATED, 24VDC, .50NPT FE
KZCO 84D23-60AD-M

THIS DESIGN IS THE PROPERTY OF
W.S. DARLEY AND CO. - UNAUTHORIZED
REPRODUCTION IS PROHIBITED


ALL DIMENSIONS IN
INCHES UNLESS NOTED

DO NOT SCALE PRINT

DATE 13-Nov-08
SCALE 1/4

5209402


CREATED: 06/20/2008 8:10:00 AM REV: VER 04 REL: Revision LOCATION: Fox Food Engineering's Branch man

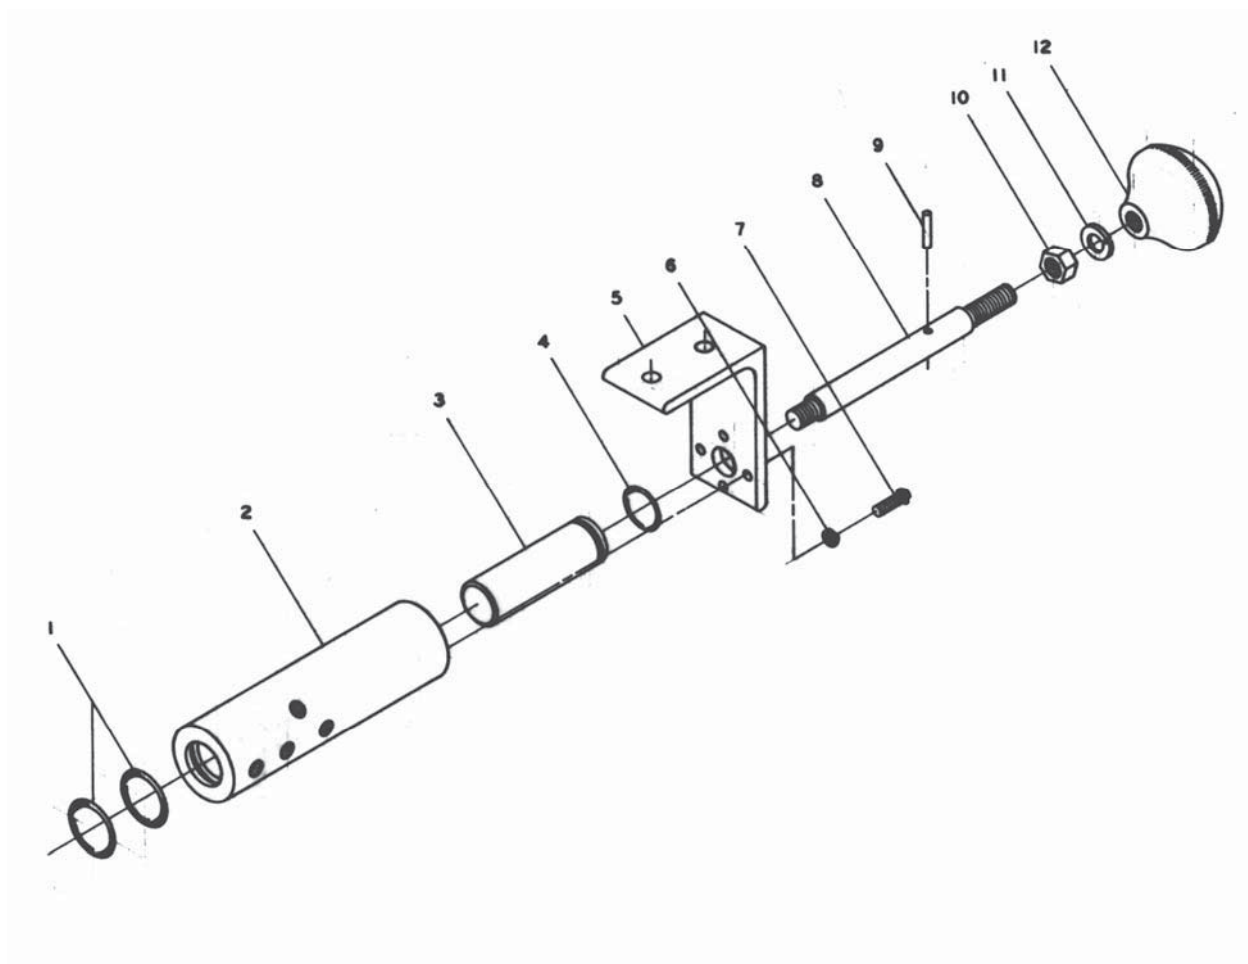

PARTS LIST FOR MULTIPLE DRAIN VALVE

DRAWING NO. DGC0112

Rep. No.	Name of Part	Qty	Rep. No.	Name of Part	Qty
1	O-ring – Body	2	7	Round Head Cap Screw	4
2	Drain Valve Body	1	8	Drain Valve Stem	1
3	Drain Valve Plug	1	9	Pin	1
4	O-ring – Plug	1	10	Hex Nut	1
5	Drain Valve Mounting Bracket	1	11	Lock Washer	1
6	Lock Washer	4	12	Knob	1

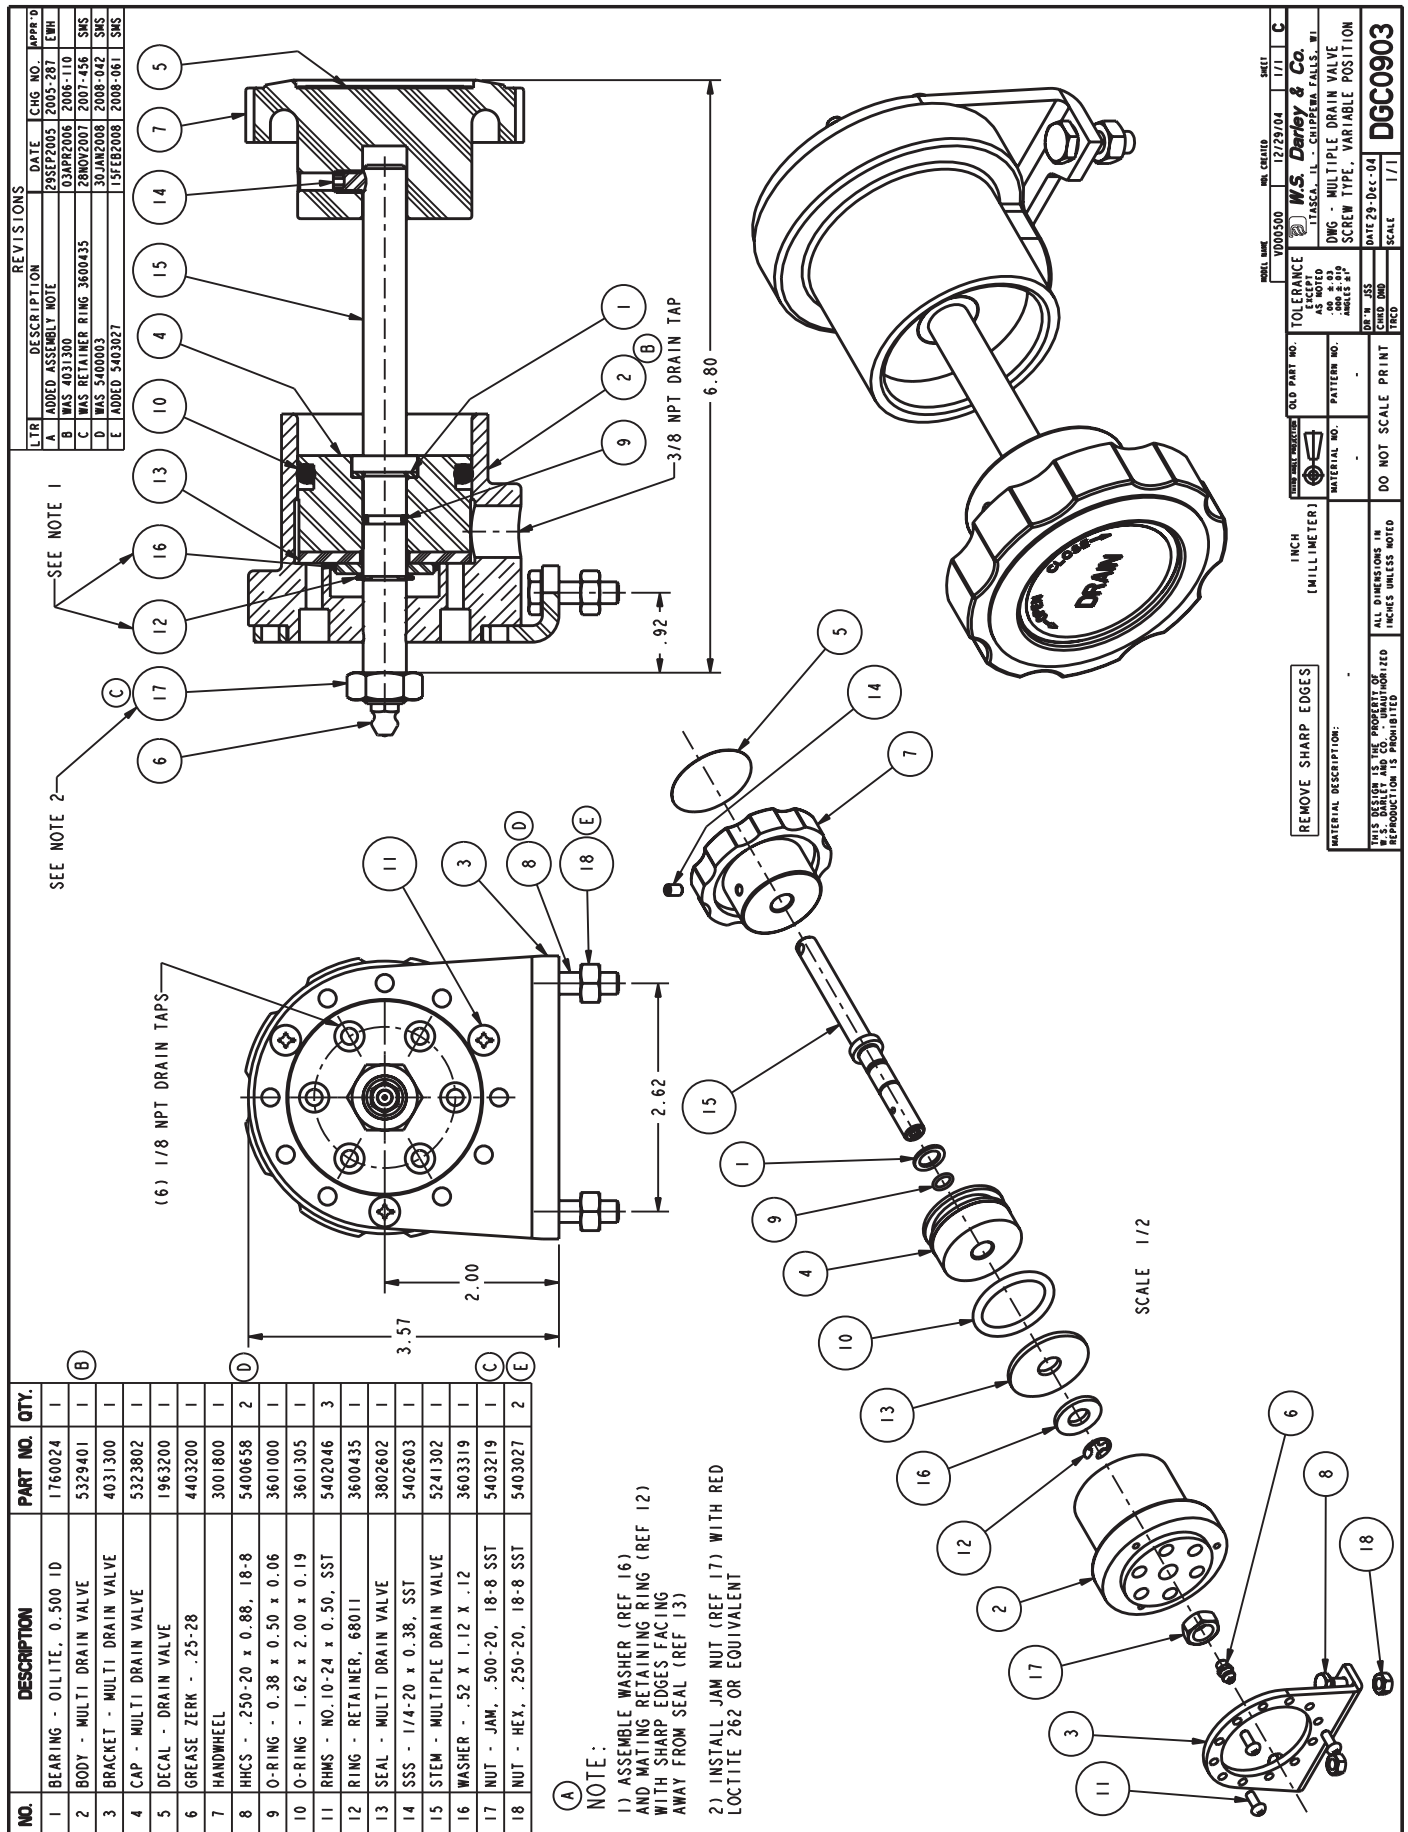

BALL VALVE QUARTER TURN - SELF LOCKING

The Darley Ball Valve is a quarter turn, all bronze valve designed for the fire service.

The ball is cast bronze, precision machined *stainless steel ball* for long trouble free service. It is easily serviced in the field.

The lever is self locking and easily adjusted, even under extreme high pressure.

TO DISASSEMBLE AND REPAIR THE BALL VALVE ILLUSTRATION DGC0100

TOOLS REQUIRED:

- 3/16" Allen Wrench
- 1-1/8" Wrench
- 3/4" & 1" Wrench
- Vise Grips or Pliers

1. Remove cap nut (20) and adjusting nut (16).
2. Lever Assembly (11) pulls straight up. Watch for 2 cam balls (12).
3. Unbolt and remove clutch ring (9), clutch sleeve (8), valve stem (7), spring (14), and valve stem washer (15). Check clutch ring (9) and sleeve (8) for scoring or excessive wear. Check o-ring (26). Replace if necessary.
4. Remove nipple (2). Check Quad Ring (25). Replace if necessary.
5. Unscrew ball guide screw (6). Check o-ring (23). Replace if necessary.
6. Remove valve ball (3). Check for scratches, corrosion, and wear. Replace if necessary.
7. Remove seat assembly (4). Check condition of rubber seat. Replace seat assembly if necessary.


REASSEMBLY OF BALL VALVE ILLUSTRATION DGC0100

1. Position ball (3) in body so ball guide screw (6) engages bottom of ball as it is screwed into position.
2. Put valve stem (7) into position. Make certain stem engages slot on top of ball.
3. Slip washer (15), spring (14), and clutch sleeve (8) over the stem. Place clutch ring (9) over the sleeve and secure with the four (4) 1/4" NC x 5/8" socket head cap screws.
4. Set the two cam balls (12) into the V grooves in the clutch sleeve (8) and drop lever assembly over them. Tighten the adjusting nut (16) so that approximately 1/8" play is left at the end of a 6" lever. Over tightening this nut will make the clutch lock inoperative. Lock adjusting nut (16) with cap nut (20). Recheck this adjustment after valve is placed in service.
5. Place seat assembly (4), seat o-ring (5), and quad ring (25) into position.
6. Secure nipple (2) to valve body with eight (8) 1/4" NC x 5/8" socket head cap screws.

**If more information is needed, call W.S. DARLEY & CO. at
Chippewa Falls, WI at 800-634-7812 or 715-726-2650**

LETTER	CHANGE NO.	DATE
(A)	96-53	5/15/96

REP. NO.	NAME OF PART	QTY.
1	DISCHARGE VALVE BODY	1
2	VALVE NIPPLE	1
3	VALVE BALL	1
4	VALVE SEAT	1
5	O'RING	1
6	BALL GUIDE SCREW	1
7	VALVE STEM	1
8	CLUTCH SLEEVE	1
9	CLUTCH RING	1
10	LEVER CAM	1
11	FRONT MOUNT LEVER	1
12	CAM BALL	2
13	VALVE PIN	2
14	VALVE SPRING	1
15	VALVE STEM WASHER	1
16	ADJUSTING NUT	1
17	SPRING PIN-STL (A)	1
19	CONTROL LEVER BALL	1
20	CAP NUT	1
23	O'RING	1
25	QUAD RING	1
26	O'RING	1
27	O'RING	1
28	SOCKET HEAD CAP SCREW	4
29	SOCKET HEAD CAP SCREW	8

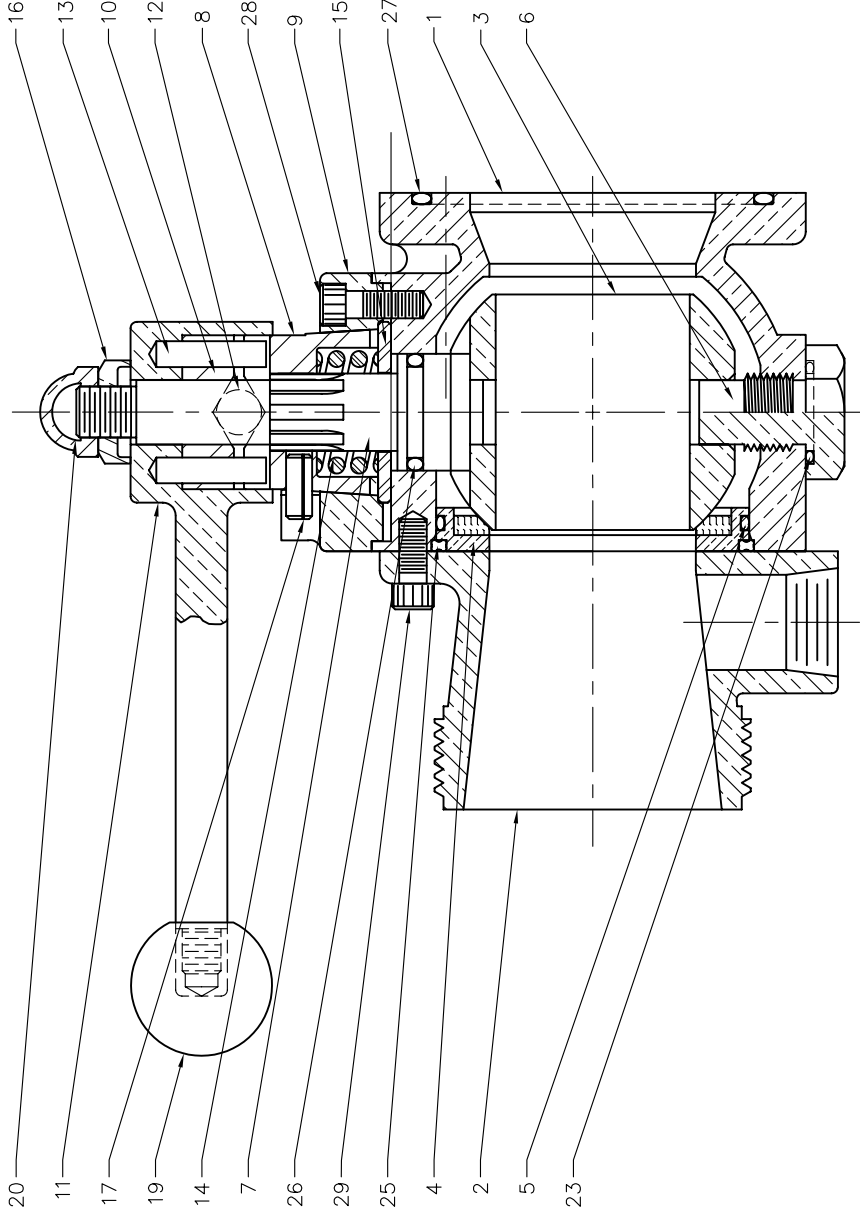

INCH
[MILLIMETER]

TOLERANCE

EXCEPT AS NOTED

FRACTIONS
 .005 ± .001
 DECIMALS
 .000 ± .001
 ANGLES ±1°

W.S. DARLEY & Co.
 MELROSE PARK, IL - CHIPPEWA FALLS, WI

DWG - BALL VALVE ASSEMBLY
 CROSS SECTION
 DATE NOV12.65
 SCALE 1/1

OLD PART NO.

G1200

THIS DESIGN IS THE PROPERTY OF W.S. DARLEY & CO. ANY REPRODUCTION IS PROHIBITED

DO NOT SCALE PRINT

ALL DIMENSIONS IN INCHES UNLESS NOTED

DO NOT SCALE PRINT

DRN

JCM

DATE NOV12.65

CHKD

TRCDLMH

5/96

DGC0100

REMOTE CONTROL SUCTION RELIEF VALVE DRAWING DGC0115

The suction relief valve bypasses water from the pump suction extension to the ground at a set pressure, preventing excessive rise of supply pressure when relay hose lines are shut off.

Turning pressure setting hand wheel (14) clockwise raises the relief pressure, and counterclockwise lowers it.

The self cleaning fine mesh strainer will prevent entry of solids that could cause the relief valve to malfunction. Open the strainer flush valve to remove small accumulations. This is accomplished by turning the strainer flush valve knob (6) counterclockwise 2 to 3 full turns. Strainer trapped debris will be flushed to the ground. Pump supply pressure should be 50-100 PSI when performing this procedure.

TO SET SUCTION RELIEF VALVE

1. Connect a discharge line from an auxiliary pump to the pump suction containing the suction relief valve. The auxiliary pump must be able to supply a pressure greater than the desired pressure setting of the suction relief valve.
2. Close all other discharge and suction valves.
3. Increase auxiliary pump engine throttle setting until pressure gage indicates the pressure that suction relief valve is open.
4. If suction relief valve opens to bypass excessive pressure, slowly turn hand wheel (14) clockwise until valve closes.
5. If suction relief valve does not open, turn hand wheel (14) counterclockwise until valve opens and begins bypassing water. Continue to turn hand wheel (14) counterclockwise 2 more complete turns. Now slowly turn hand wheel clockwise until valve closes and stops bypassing water.

The suction relief valve will now prevent damage to the pump from a pressure surge (water hammer) which is the result of rapid closing or opening of relay line valves.

Should a higher or lower relief pressure be desired, repeat the above procedure.

CAUTION: With all discharge valves closed, the water in auxiliary pump casing will heat up rapidly. Avoid damage by allowing a very low flow of water to discharge when pump is running.

REMOTE CONTROL SUCTION RELIEF VALVE WITH MECHANICAL SHUTOFF DRAWING DGC0115

MAINTENANCE

Open the relief valve strainer flush valve (6) during every operation at 50-100 PSI supply pressure to insure against foreign material blocking the screen.

The relief valve, pilot unit, and strainer assemblies should be taken apart for inspection and cleaning at least annually, or as often as found necessary to insure trouble free performance.

To disassemble pilot head, first turn hand wheel (14) counterclockwise to remove spring compression. Remove the four 1/4" screws holding regulator spring housing (18). Lift out diaphragm (23) and pilot valve (51) assembly. Clean and make certain 3/32" diameter orifice hole is free of obstruction.

When reassembling pilot head, turn hand wheel (14) a few times clockwise to compress spring before tightening four screws holding spring housing. This will properly center valve seat and diaphragm.

The valve piston (40) and spring (44) chamber should be inspected and cleaned.

Replace diaphragm and o-rings if damaged or deteriorated.

Apply a thin coating of waterproof grease lubricant: to spring housing counterbore that guides pilot valve (51) and ball (52), to end of tension screw (17), and between piston (40) and center post


Self cleaning strainer (63) can be removed for inspection or replacement by alternately turning valve knob (6) and stop nut (7) counterclockwise until stem is free for removal. To avoid discharging water through opening created by stem (62) removal, pump should be completely shut down before stem (62) is removed. Inspect and clean screen (63) if required. Check quad ring (64) for damage or deterioration. Reverse procedure to reassemble valve. Use care when initially inserting screen into body to avoid damaging quad ring (64) or valve seat.

To replace flush valve seat (69), remove stem/screen assembly. Disconnect tubing lines attached to (61) body half, unscrew (61) body half from (70) body half. Replace (69) valve seat. Reverse procedure to reassemble valve.

SUCTION RELIEF VALVE PARTS LIST DRAWING DGC0115

REP NO.	DESCRIPTION	REP NO.	DESCRIPTION
3	Decal - RV Flush	41	Relief Valve Body
4	Panel Nut	42	O-ring Flange
5	Socket Set Screw	43	Spring Centering Plug
6	Flush Valve Knob	44	Spring
7	Stop Nut	45	O-ring Body Flange
11	Panel Valve Nut	46	O-ring Piston
12	Decal - Pressure Hi-Lo	50	O-ring, Bleed Port
13	Trim Plate	51	Pilot Valve
14	Hand wheel	52	Ball
16	Socket Set Screw	53	Pilot Valve Body
17	Spring Tension Screw	61	Body Half, Flush Valve
18	Spring Housing	62	Stem
19	Spring Retainer	63	Screen
20	Regulator Spring	64	Quad Ring
21	Pilot Valve Nut	66	O-ring Valve Seat
22	Housing Pilot Ring	67	Valve Seat Ring
23	Diaphragm	68	O-ring Flush Valve Body
37	O-ring, Relief Valve Head	69	Flush Valve Seat
38	Relief Valve Head	70	Body Half, Flush Valve
40	Relief Valve Piston	84	Flange
		86	Lock Washer Internal

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

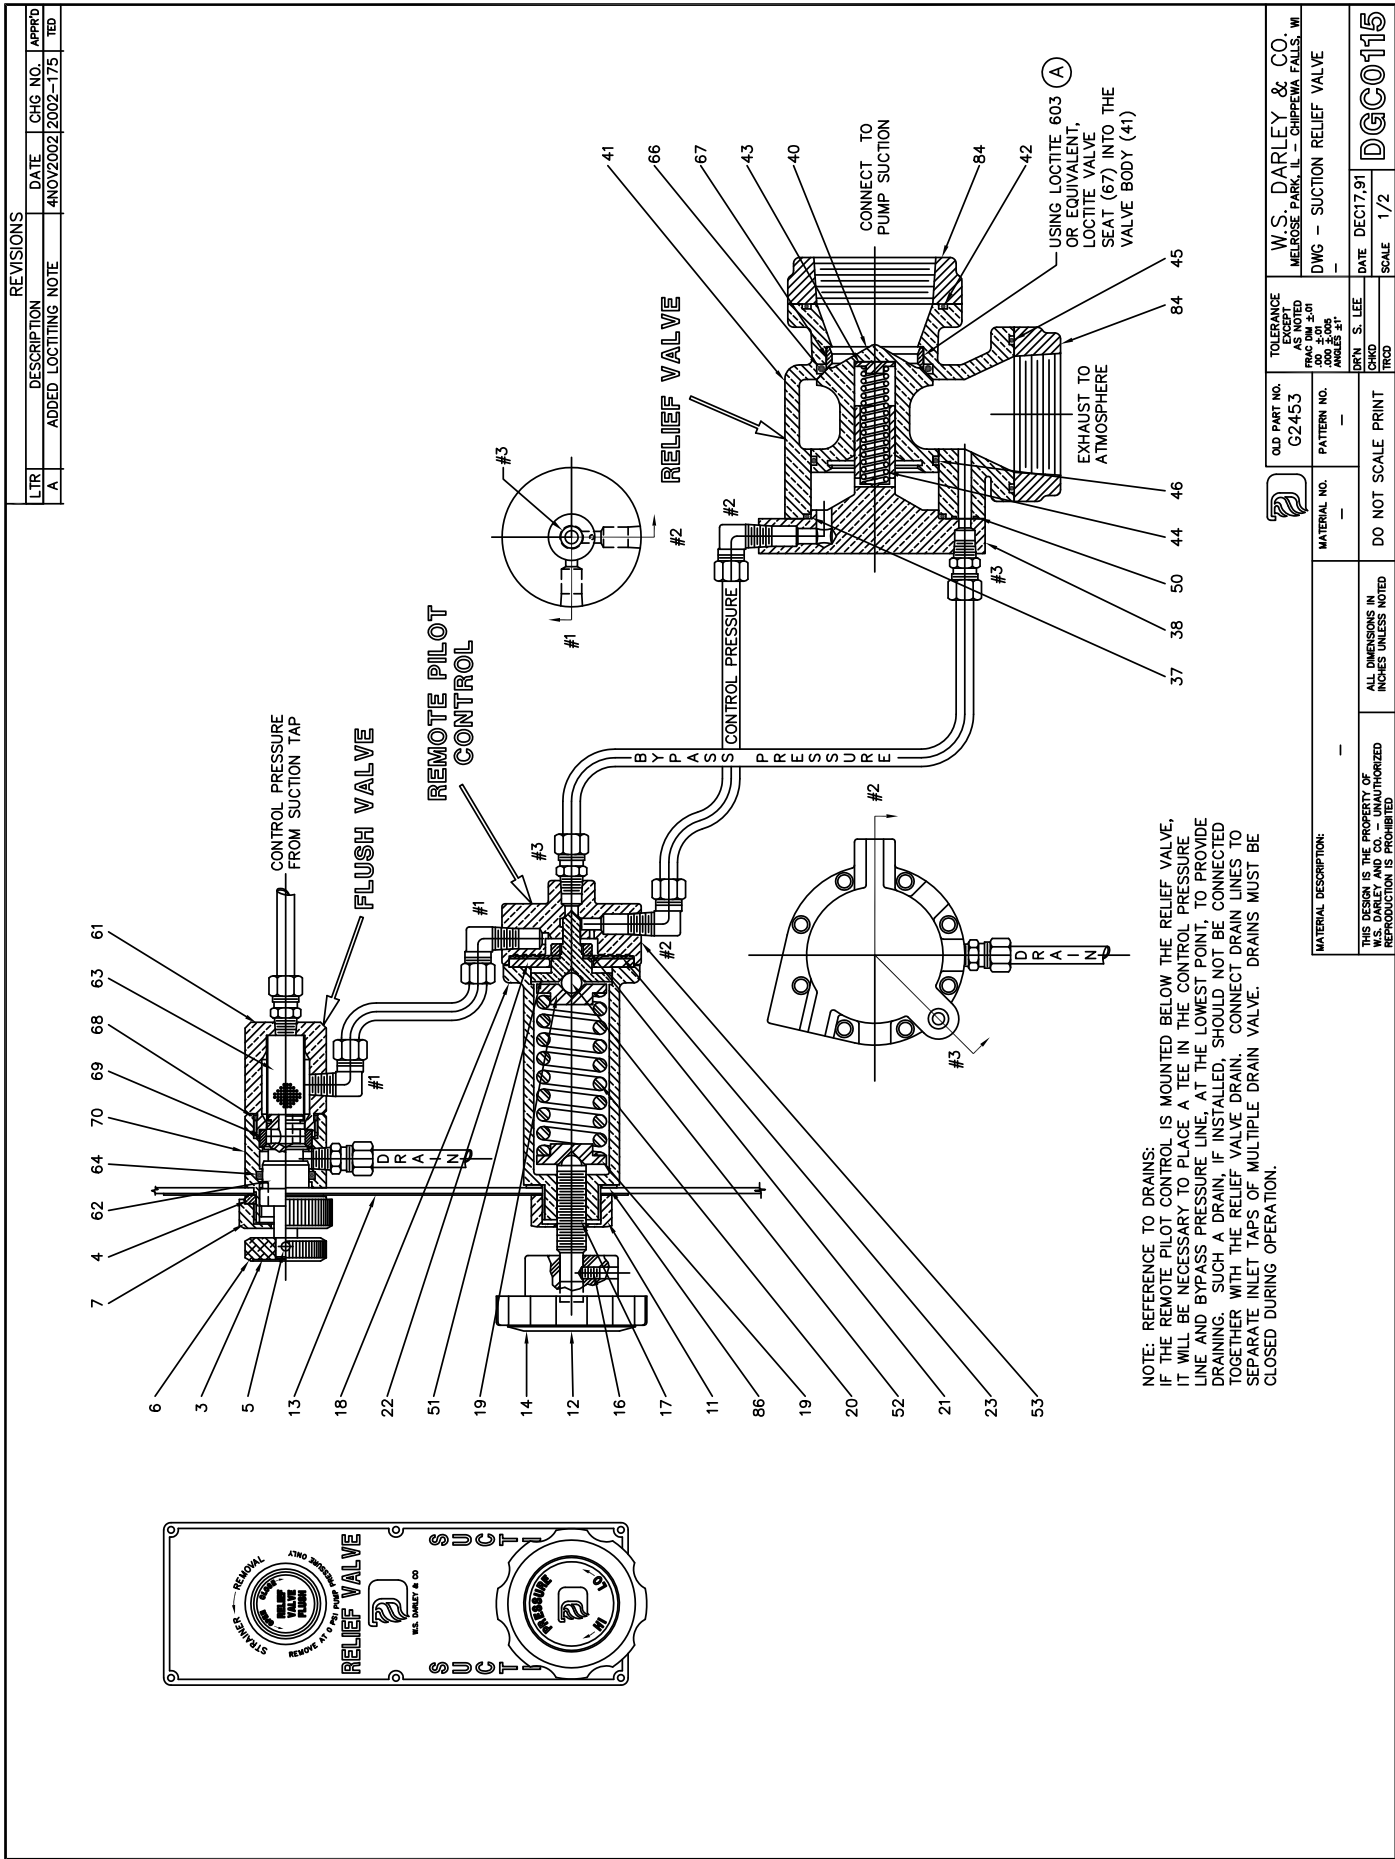

W.S. DARLEY & CO.

REMOTE CONTROL PRESSURE RELIEF VALVE WITH MECHANICAL SHUTOFF

Refer to Drawing DGC0141

The relief valve bypasses water from the pump discharge manifold to the suction chamber at a set pump pressure, preventing excessive rise of discharge pressure when hose lines are shut off.

Turning pressure setting hand wheel (14) clockwise raises the relief pressure, and counter clockwise lowers it.

The self-cleaning fine mesh strainer will prevent the entry of solids that could cause the relief valve to malfunction. Open the strainer flush valve to remove small accumulations. This is accomplished by turning the strainer flush valve knob (6) counter clockwise 2 to 3 full turns. Strainer trapped debris will be flushed to the ground. Pump supply pressure should be 50-100 PSI when performing this procedure.

TO SET RELIEF VALVE

- 1.** Turn four-way valve OFF.
- 2.** Open at least one discharge valve and increase engine throttle setting until pressure gage indicates the pressure at which relief valve is to open.
- 3.** Turn four-way valve ON.
- 4.** If gage reading drops below pressure set in step 2, turn hand wheel (14) clockwise until pressure returns to set point.
- 5.** If gage reading does not drop, turn hand wheel (14) counter clockwise until pressure drops 5 to 10 PSI below set point. Then slowly turn hand wheel clockwise until pressure returns to pressure set in step 2.

The relief valve will now prevent the discharge pressure from rising above that for which it is set, and requires no further attention.

Should a higher or lower relief pressure be desired, repeat above procedure.

CAUTION

With all discharge valves closed, water in the auxiliary pump casing will heat up rapidly. To avoid possible damage, allow a very small stream of water to discharge when the pump is running.

**REMOTE CONTROL PRESSURE RELIEF VALVE WITH MECHANICAL SHUTOFF
MAINTENANCE
DRAWING DGC0141**

Open the relief valve strainer flush valve (6) during every operation at 50-100 PSI supply pressure to insure foreign material is not blocking the screen.

The 3/32" diameter metering orifice and diaphragm chamber at (21) may be back-flushed if necessary while the pump is delivering water by opening the pilot head drain and placing valve handle (9) midway between ON and OFF position.

The relief valve, pilot unit, and strainer assemblies should be taken apart for inspection and cleaning at least annually, or as often as found necessary to insure trouble free performance.

To disassemble pilot head, first turn hand wheel (14) counter clockwise to remove spring compression. Remove the four 1/4" screws holding regulator spring housing (18). Lift out diaphragm (23) and pilot valve (51) assembly. Clean and make certain 3/32" diameter orifice hole is free of obstruction.

When reassembling pilot head, turn hand wheel (14) a few times clockwise to compress spring before tightening four screws holding spring housing. This will properly center valve seat and diaphragm.

The valve piston (40) and spring (44) chamber should be inspected and cleaned.

Replace diaphragm and o-rings if damaged or deteriorated.

Apply a thin coating of waterproof grease lubricant: to spring housing counterbore that guides the pilot valve (51) and ball (52), to end of tension screw (17), and between piston (40) and center post.


Self-cleaning strainer (63) can be removed for inspection or replacement by alternately turning valve knob (6) and stop nut (7) counter clockwise until stem is free for removal. To avoid discharging water through opening created by stem (62) removal, pump should be completely shut down before stem (62) is removed. Inspect and clean screen (63) if required. Check quad ring (64) for damage or deterioration. Reverse procedure to reassemble valve. Use care when initially inserting screen into body to avoid damaging quad ring (64) or valve seat.

To replace flush valve seat (69), remove stem/screen assembly, disconnect tubing lines attached to (61) body half and unscrew (61) body half from (70) body half. Replace (69) valve seat. Reverse procedure to reassemble valve.

All Darley relief valves can be provided with a micro switch and either one or two pilot lights to indicate when the valve is open or closed.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

AGE	SEX	COMPONENT	POST AGE
1	F	1-1000 - 1-1000 - 1-1000	1
2	F	1-1000 - 1-1000 - 1-1000	2
3	F	1-1000 - 1-1000 - 1-1000	3
4	F	1-1000 - 1-1000 - 1-1000	4
5	F	1-1000 - 1-1000 - 1-1000	5
6	F	1-1000 - 1-1000 - 1-1000	6
7	F	1-1000 - 1-1000 - 1-1000	7
8	F	1-1000 - 1-1000 - 1-1000	8
9	F	1-1000 - 1-1000 - 1-1000	9
10	F	1-1000 - 1-1000 - 1-1000	10
11	F	1-1000 - 1-1000 - 1-1000	11
12	F	1-1000 - 1-1000 - 1-1000	12
13	F	1-1000 - 1-1000 - 1-1000	13
14	F	1-1000 - 1-1000 - 1-1000	14
15	F	1-1000 - 1-1000 - 1-1000	15
16	F	1-1000 - 1-1000 - 1-1000	16
17	F	1-1000 - 1-1000 - 1-1000	17
18	F	1-1000 - 1-1000 - 1-1000	18
19	F	1-1000 - 1-1000 - 1-1000	19
20	F	1-1000 - 1-1000 - 1-1000	20
21	F	1-1000 - 1-1000 - 1-1000	21
22	F	1-1000 - 1-1000 - 1-1000	22
23	F	1-1000 - 1-1000 - 1-1000	23
24	F	1-1000 - 1-1000 - 1-1000	24
25	F	1-1000 - 1-1000 - 1-1000	25
26	F	1-1000 - 1-1000 - 1-1000	26
27	F	1-1000 - 1-1000 - 1-1000	27
28	F	1-1000 - 1-1000 - 1-1000	28
29	F	1-1000 - 1-1000 - 1-1000	29
30	F	1-1000 - 1-1000 - 1-1000	30
31	F	1-1000 - 1-1000 - 1-1000	31
32	F	1-1000 - 1-1000 - 1-1000	32
33	F	1-1000 - 1-1000 - 1-1000	33
34	F	1-1000 - 1-1000 - 1-1000	34
35	F	1-1000 - 1-1000 - 1-1000	35
36	F	1-1000 - 1-1000 - 1-1000	36
37	F	1-1000 - 1-1000 - 1-1000	37
38	F	1-1000 - 1-1000 - 1-1000	38
39	F	1-1000 - 1-1000 - 1-1000	39
40	F	1-1000 - 1-1000 - 1-1000	40
41	F	1-1000 - 1-1000 - 1-1000	41
42	F	1-1000 - 1-1000 - 1-1000	42
43	F	1-1000 - 1-1000 - 1-1000	43
44	F	1-1000 - 1-1000 - 1-1000	44
45	F	1-1000 - 1-1000 - 1-1000	45
46	F	1-1000 - 1-1000 - 1-1000	46
47	F	1-1000 - 1-1000 - 1-1000	47
48	F	1-1000 - 1-1000 - 1-1000	48
49	F	1-1000 - 1-1000 - 1-1000	49
50	F	1-1000 - 1-1000 - 1-1000	50
51	F	1-1000 - 1-1000 - 1-1000	51
52	F	1-1000 - 1-1000 - 1-1000	52
53	F	1-1000 - 1-1000 - 1-1000	53
54	F	1-1000 - 1-1000 - 1-1000	54
55	F	1-1000 - 1-1000 - 1-1000	55
56	F	1-1000 - 1-1000 - 1-1000	56
57	F	1-1000 - 1-1000 - 1-1000	57
58	F	1-1000 - 1-1000 - 1-1000	58
59	F	1-1000 - 1-1000 - 1-1000	59
60	F	1-1000 - 1-1000 - 1-1000	60
61	F	1-1000 - 1-1000 - 1-1000	61
62	F	1-1000 - 1-1000 - 1-1000	62
63	F	1-1000 - 1-1000 - 1-1000	63
64	F	1-1000 - 1-1000 - 1-1000	64
65	F	1-1000 - 1-1000 - 1-1000	65
66	F	1-1000 - 1-1000 - 1-1000	66
67	F	1-1000 - 1-1000 - 1-1000	67
68	F	1-1000 - 1-1000 - 1-1000	68
69	F	1-1000 - 1-1000 - 1-1000	69
70	F	1-1000 - 1-1000 - 1-1000	70
71	F	1-1000 - 1-1000 - 1-1000	71
72	F	1-1000 - 1-1000 - 1-1000	72
73	F	1-1000 - 1-1000 - 1-1000	73
74	F	1-1000 - 1-1000 - 1-1000	74
75	F	1-1000 - 1-1000 - 1-1000	75
76	F	1-1000 - 1-1000 - 1-1000	76
77	F	1-1000 - 1-1000 - 1-1000	77
78	F	1-1000 - 1-1000 - 1-1000	78
79	F	1-1000 - 1-1000 - 1-1000	79
80	F	1-1000 - 1-1000 - 1-1000	80
81	F	1-1000 - 1-1000 - 1-1000	81
82	F	1-1000 - 1-1000 - 1-1000	82
83	F	1-1000 - 1-1000 - 1-1000	83
84	F	1-1000 - 1-1000 - 1-1000	84
85	F	1-1000 - 1-1000 - 1-1000	85
86	F	1-1000 - 1-1000 - 1-1000	86
87	F	1-1000 - 1-1000 - 1-1000	87
88	F	1-1000 - 1-1000 - 1-1000	88
89	F	1-1000 - 1-1000 - 1-1000	89
90	F	1-1000 - 1-1000 - 1-1000	90
91	F	1-1000 - 1-1000 - 1-1000	91
92	F	1-1000 - 1-1000 - 1-1000	92
93	F	1-1000 - 1-1000 - 1-1000	93
94	F	1-1000 - 1-1000 - 1-1000	94
95	F	1-1000 - 1-1000 - 1-1000	95

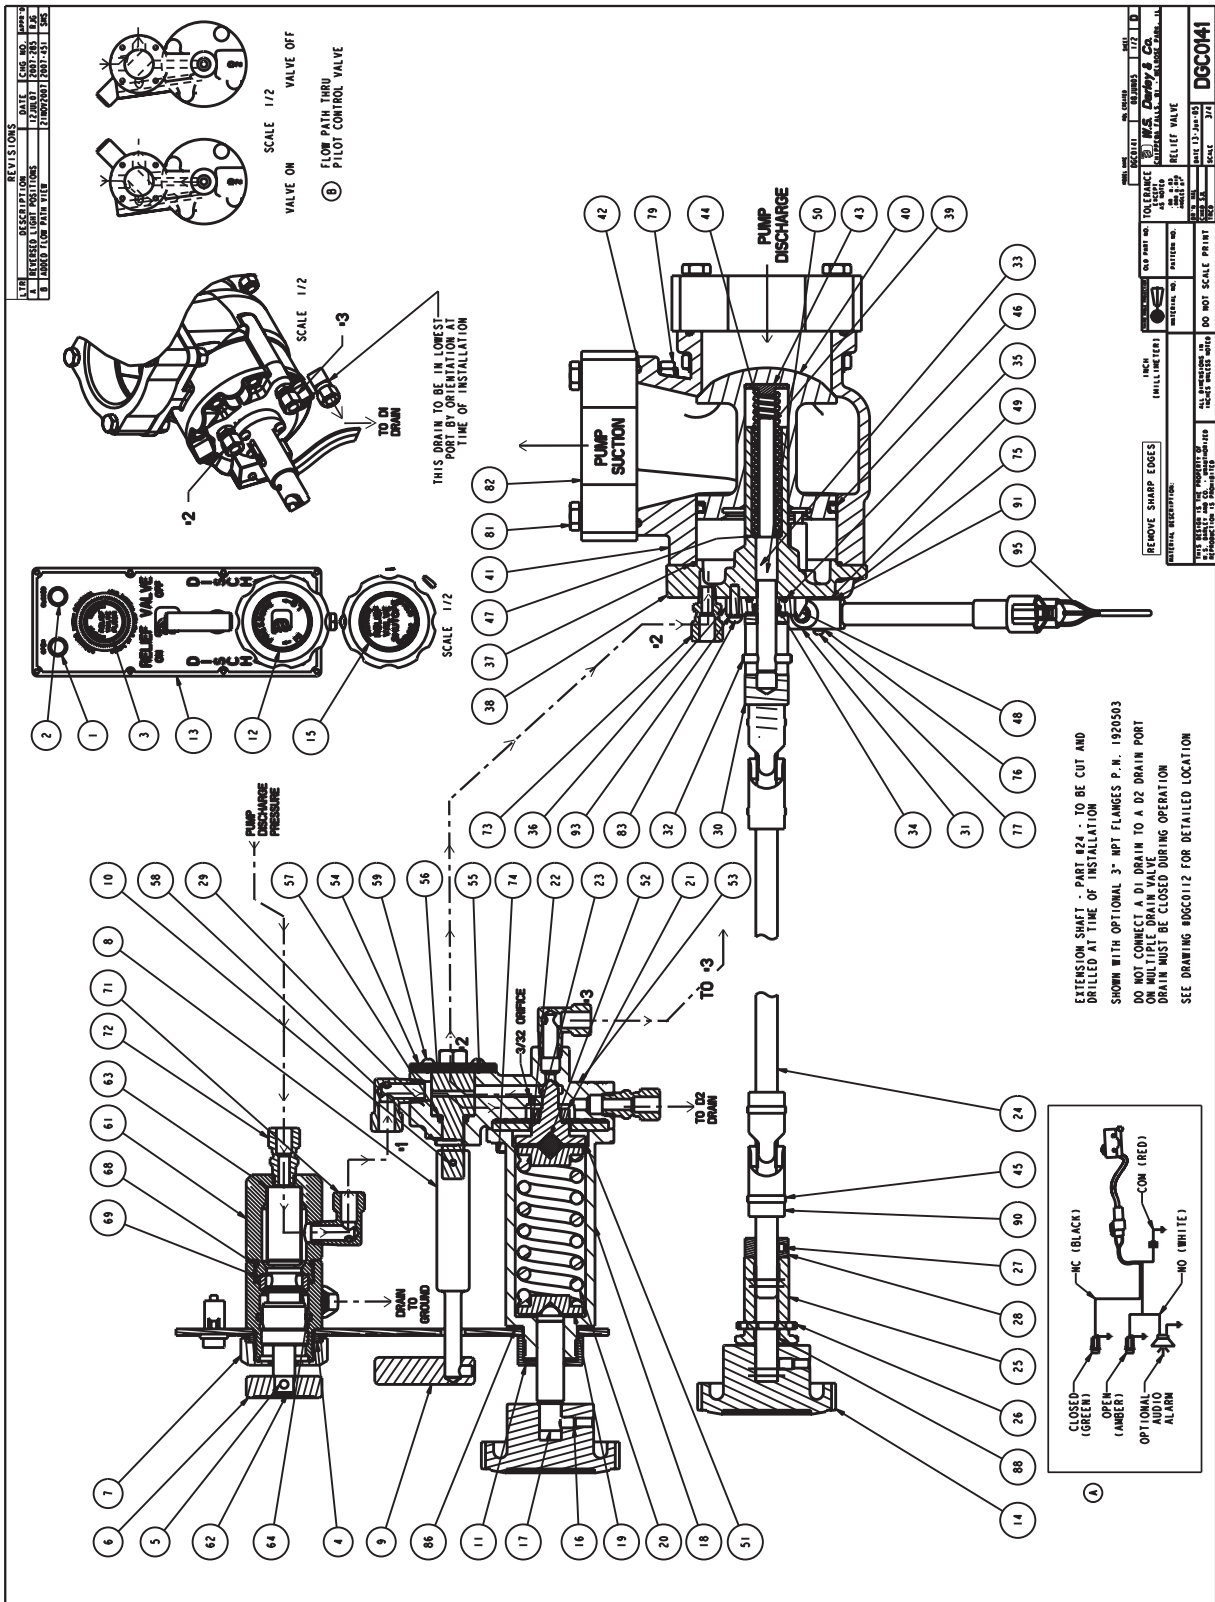

W.S. DARLEY & CO.

Relief Valve Alarm Installation Instruction

This Alarm is designed to concentrate audible sound in the operator zone only. For optimum Performance, position alarm sound opening so it is facing the operator at a distance of 24 - 36 inches.

Mount unit in 1.12 diameter panel hole. If panel is thicker than .09 inches, invert nut.

Do not mount with sound opening in an upward position. Do not obstruct opening.

Connect to 12 VDC only.

Two (2) wires are required to complete the circuit. The alarm is sensitive to polarity and will not operate if connected with polarity reversed.

Relief Valve Alarm Installation Instructions


THIS ALARM IS DESIGNED TO CONCENTRATE AUDIBLE SOUND IN THE OPERATOR ZONE ONLY. FOR OPTIMUM PERFORMANCE, POSITION ALARM SOUND OPENING SO IT IS FACING THE OPERATOR AT A DISTANCE OF 24-36 INCHES.

MOUNT UNIT IN 1.12 DIAMETER PANEL HOLE. IF PANEL IS THICKER THAN .09 IN., INVERT NUT.

DO NOT MOUNT WITH SOUND OPENING IN AN UPWARD POSITION. DO NOT OBSTRUCT OPENING.

CONNECT TO 12 VDC ONLY.

TWO (2) WIRES ARE REQUIRED TO COMPLETE THE CIRCUIT. THE ALARM IS SENSITIVE TO POLARITY AND WILL NOT OPERATE IF CONNECTED WITH POLARITY REVERSED.

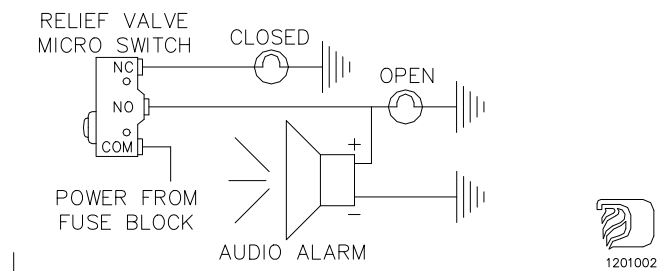

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**

W.S. DARLEY & CO.

SWITCHING DIESEL TACHOMETER

1. CAUTION: Disconnect the battery during installation. Tighten nuts on back clamp only slightly more than you can tighten them with our fingers. Six inch pounds of torque is sufficient. Over tightening may result in damage to the instrument and may void your warranty!
2. Location: The tachometer should be located at least 18" from a magnetic compass. Some interference (erratic operation) may be noticed on the tachometer during radio transmission. This will neither damage a Faria tachometer nor affect accuracy when not transmitting.
3. Be certain to use insulated wire not less than 18 gauge that is approved for marine use. It is recommended that insulated wire terminals, preferably ring type, be used on all connections to the tachometer except for the light which requires a 1/4" female blade terminal.
4. The tach sender, DK-3 or equivalent, must be used in conjunction with the tachometer. One DK-3 sender will operate two tachometers. Mount the sender to the pump at the mechanical tachometer drive take-off using the correct drive tip (supplied with DK-3) to properly engage the sender.
5. Using a small screwdriver, SLIGHTLY depress and turn the selector switch on the back of the tachometer to match the tachometer drive take-off (see label on side of tachometer).
DEPRESSING THE SWITCH TOO HARD MAY CAUSE DAMAGE TO THE TACHOMETER.
Be sure the selector switch has locked into the detent at the correct position by slightly rotating the switch back and forth with the screwdriver. (PTO Pump tach ratio = 1/2, Midship Pump tach ratio = 1/1).
6. Cut a 3-3/8" diameter hole in the dash and mount the tach with back clamp supplied.
7. Connect a wire to the tach stud marked "BAT" (battery) and secure with nut and lockwasher. Connect opposite end of the 12 VDC circuit that is activated by the ignition switch.
8. Connect a wire to the tach stud marked "SIGNAL" and secure with a nut and lockwasher. Connect the opposite end to the gray wire of the diesel tachometer sender. Connect the black wire of the diesel tachometer sender to the engine ground.
9. Connect a wire to the tach stud marked "GND" (ground) and secure with a nut and lockwasher. Connect opposite end to the electrical ground.
10. Connect the blade terminal adjacent to the twist-out light assembly to the positive "+" side of the vehicle's instrument lighting circuit. No separate ground is required for lighting.
11. Reconnect the battery.
12. NOTE: To change light bulb, twist black socket assembly one-eighth (1/8) turn counter clockwise until it pops out. Bulb pulls straight out of socket assembly. It is a GE #158 instrument lamp.

**IF FURTHER INFORMATION IS NEEDED, CALL W.S. DARLEY & CO. AT
CHIPPEWA FALLS, WI. AT 800-634-7812 or 715-726-2650**



96-115/9/19/96		ADDED PLATE LMH	
PART NO.		DATE	CHANGE
TOLERANCE AS NOTED EXCEPT		W.S. DARLEY & CO. MELROSE PARK, IL - CHIPPewa FALLS, WI	
FRAC DIM $\pm .01$ DEC DIM $\pm .005$ ANGLES $\pm 1^\circ$		DWG - BIRELY VALVE ASSY MANUAL CONTROLLED	
Q.		DR#N DWS	DATE SEP25,91
	CHKO	SCALE	1/2
	TRCD	DGD0104	


THIS DESIGN IS THE PROPERTY OF
W.S. DARLEY AND CO. - UNAUTHORIZED
REPRODUCTION IS PROHIBITED

ALL DIMENSIONS IN
INCHES UNLESS NOTED

DO NOT SCALE PRINT

DATE	SEP25,91
SCALE	1/2

DGD0104

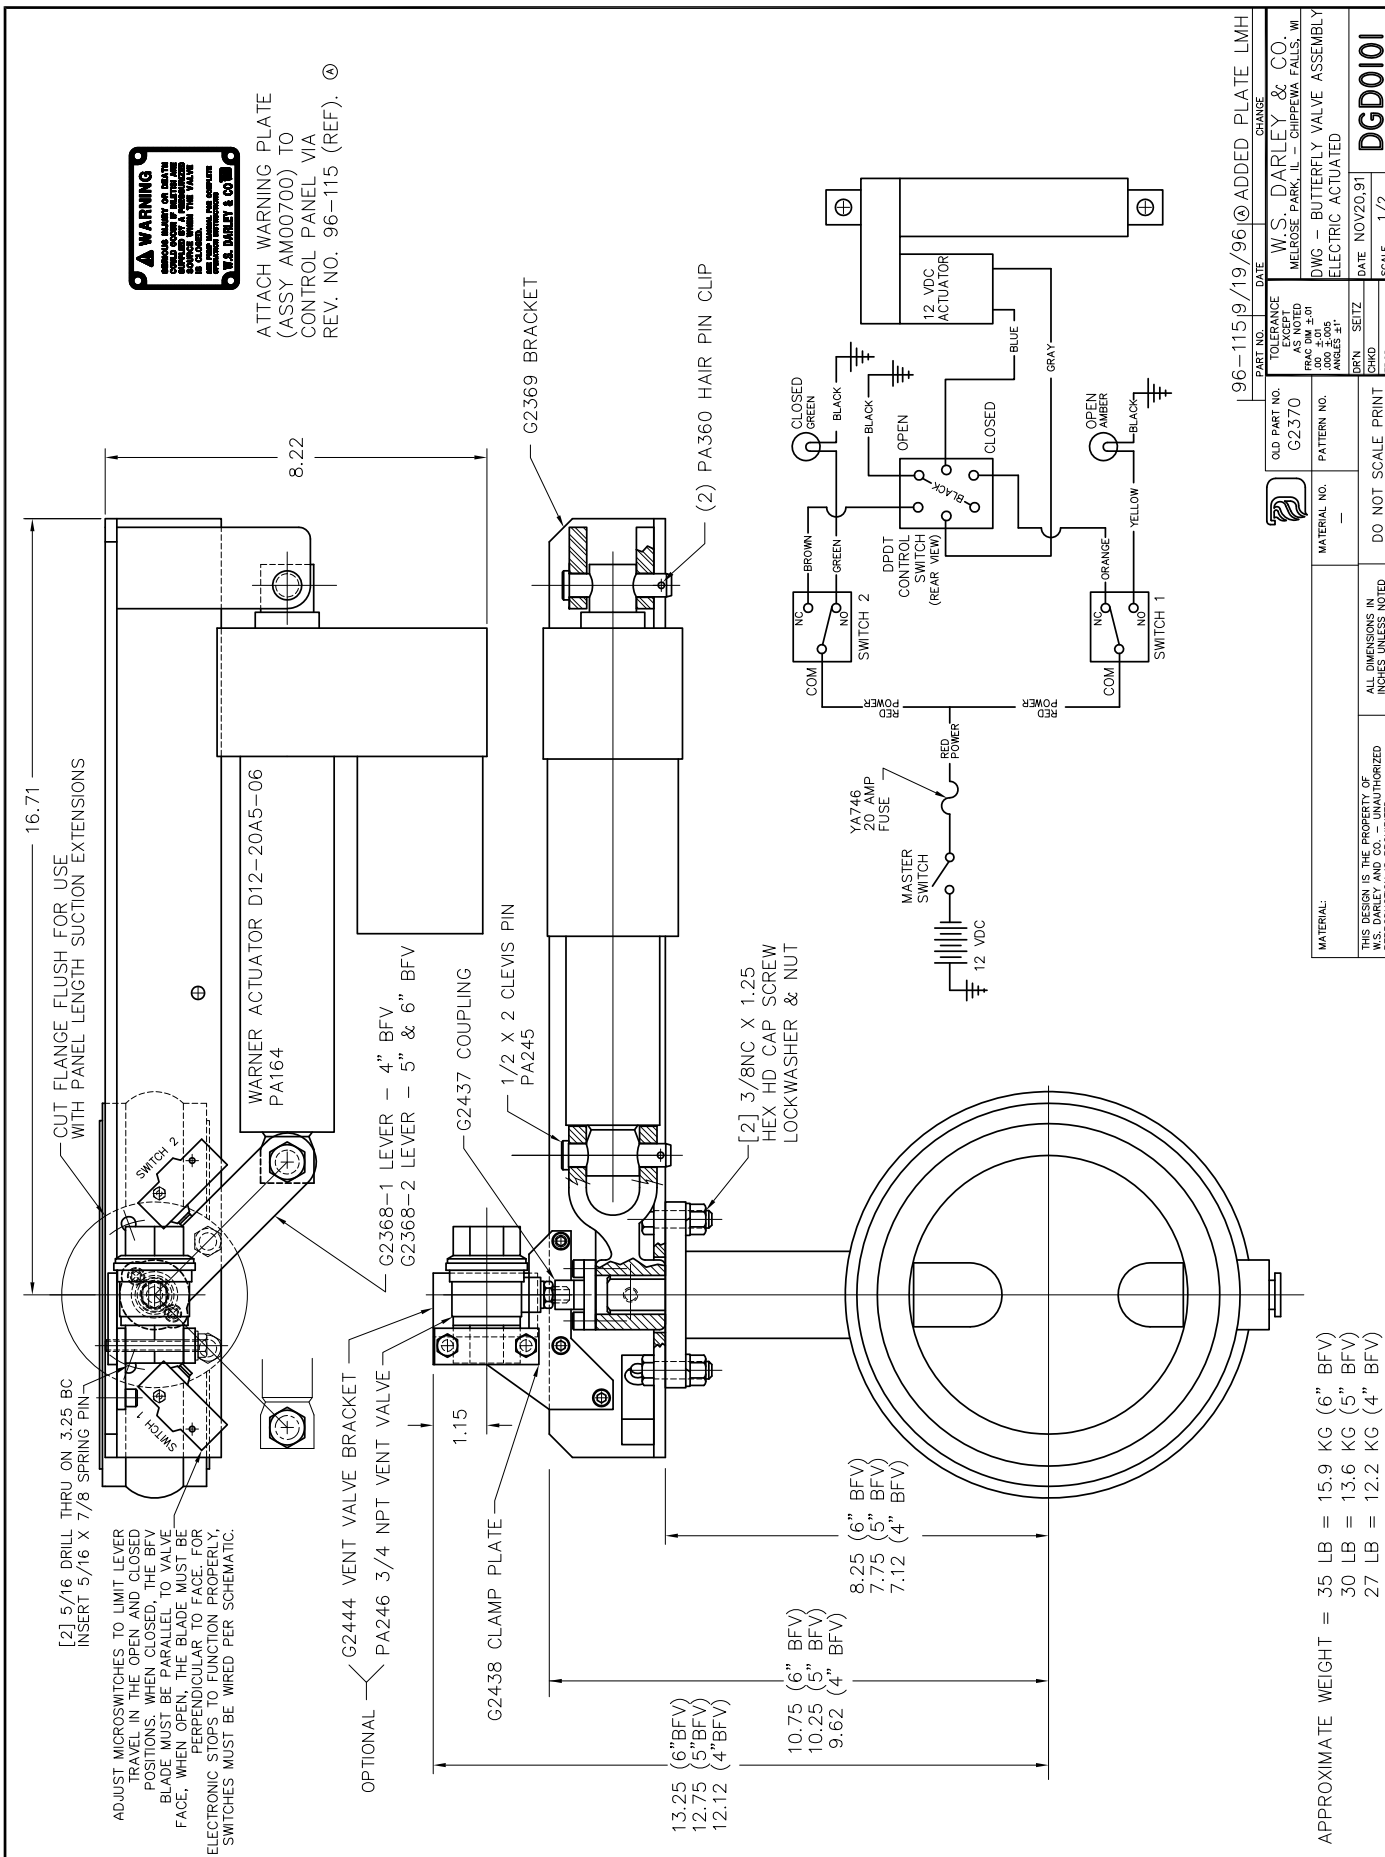


INLET RELIEF VALVE INFORMATION: (A)



ACTUAL PRESSURE RANGE IS 90PSI – 300PSI
THERE MAY BE SOME DIMINISH IN FLOW AT HIGHER
PRESSURE SETTINGS. (SETTINGS BELOW 200 PSI
RECOMMENDED FOR MOST APPLICATIONS).
RELIEF VALVE IS FACTORY SET AT 125 PSI AND
WHEN PRESET AT 125 PSI, THE PRESSURE RELIEF
VALVE SHALL NOT ALLOW A PRESSURE RISE GREATER
THAN 60 PSI AT THE DEVICE INLET WHILE FLOWING A
MINIMUM OF 150 GPM.
THIS VALVE IS NFPA 2009 1901 COMPLIANT PER SECTION
16.6.6.3

ADJUSTMENT INSTRUCTIONS (IF REQUIRED): (A)

ADJUST CENTER HEX COUNTERSUNK HEX HEAD PRESSURE
ADJUSTING BOLT WITH A 1/4" ALLEN WRENCH, 9/16" OR
14 MM SOCKET.
TO SET AT THE DESIRED RELIEF PRESSURE, ADJUST THE ADJUSTING
BOLT HEAD SO THE TOP OF THE BOLT HEAD IS EVEN WITH
THE DESIRED PRESSURE.

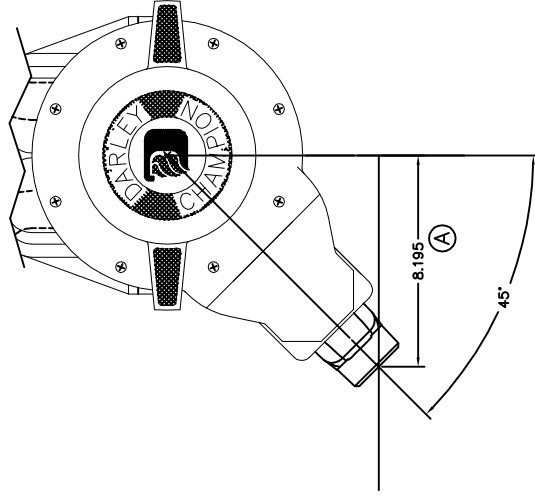

NOTE:
SUCTION NIPPLE WILL BE ROTATED
45° OFF CENTER WHEN MOUNTED.

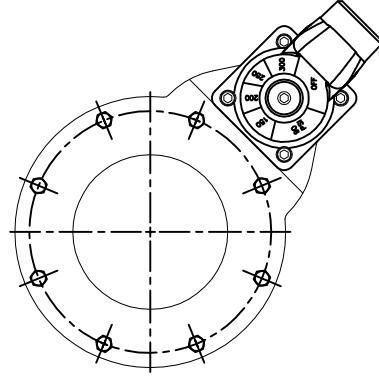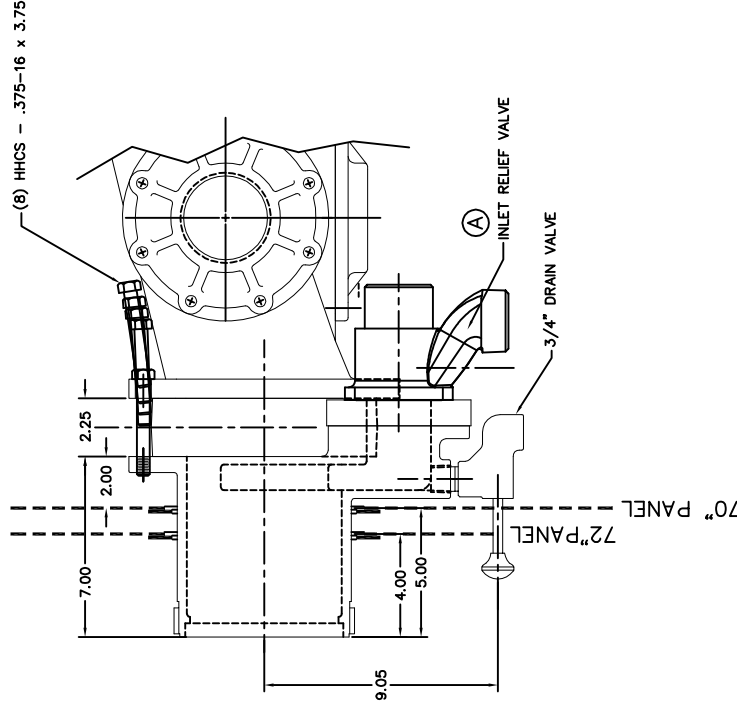

**TYPICAL SUCTION EXTENSION CONFIGURATION
FOR EM, LDM, N, & S PUMP**

EXTENSION AND NIPPLE
ARE THE SAME FOR 70 & 72"
ASSEMBLIES WITH AND
WITHOUT BUTTERFLY VALVES.
IF BFV IS NOT REQUIRED, THEN
KC00300 ASSY W/2.25 THICK SPACER IS USED.
USE 1962503 STAINLESS STEEL PANEL TRIM RING



MATERIAL: PATTERN NO.

THIS DESIGN IS THE PROPERTY OF
W.S. DARLEY & CO. UNAUTHORIZED
REPRODUCTION IS PROHIBITED


ALL DIMENSIONS IN
INCHES UNLESS NOTED

DO NOT SCALE PRINT

UPDATED DRAWING TO REFLECT USE OF
8.20 WAS 5.22, UPDATED INFO AND
ADJUSTMENT SECTION
CHANGE

A - #8512	DATE	07/18/12
PART NO.	TOLERANCE	EXCEPT
AS NOTED	AS NOTED	AS NOTED
PRAC DIM ±.01	PRAC DIM ±.01	PRAC DIM ±.01
ANGLES ±1°	ANGLES ±1°	ANGLES ±1°
DATE	03FEB.00	SCALE
DATE	03FEB.00	SCALE
DATE	03FEB.00	SCALE
DATE	03FEB.00	SCALE

1200572

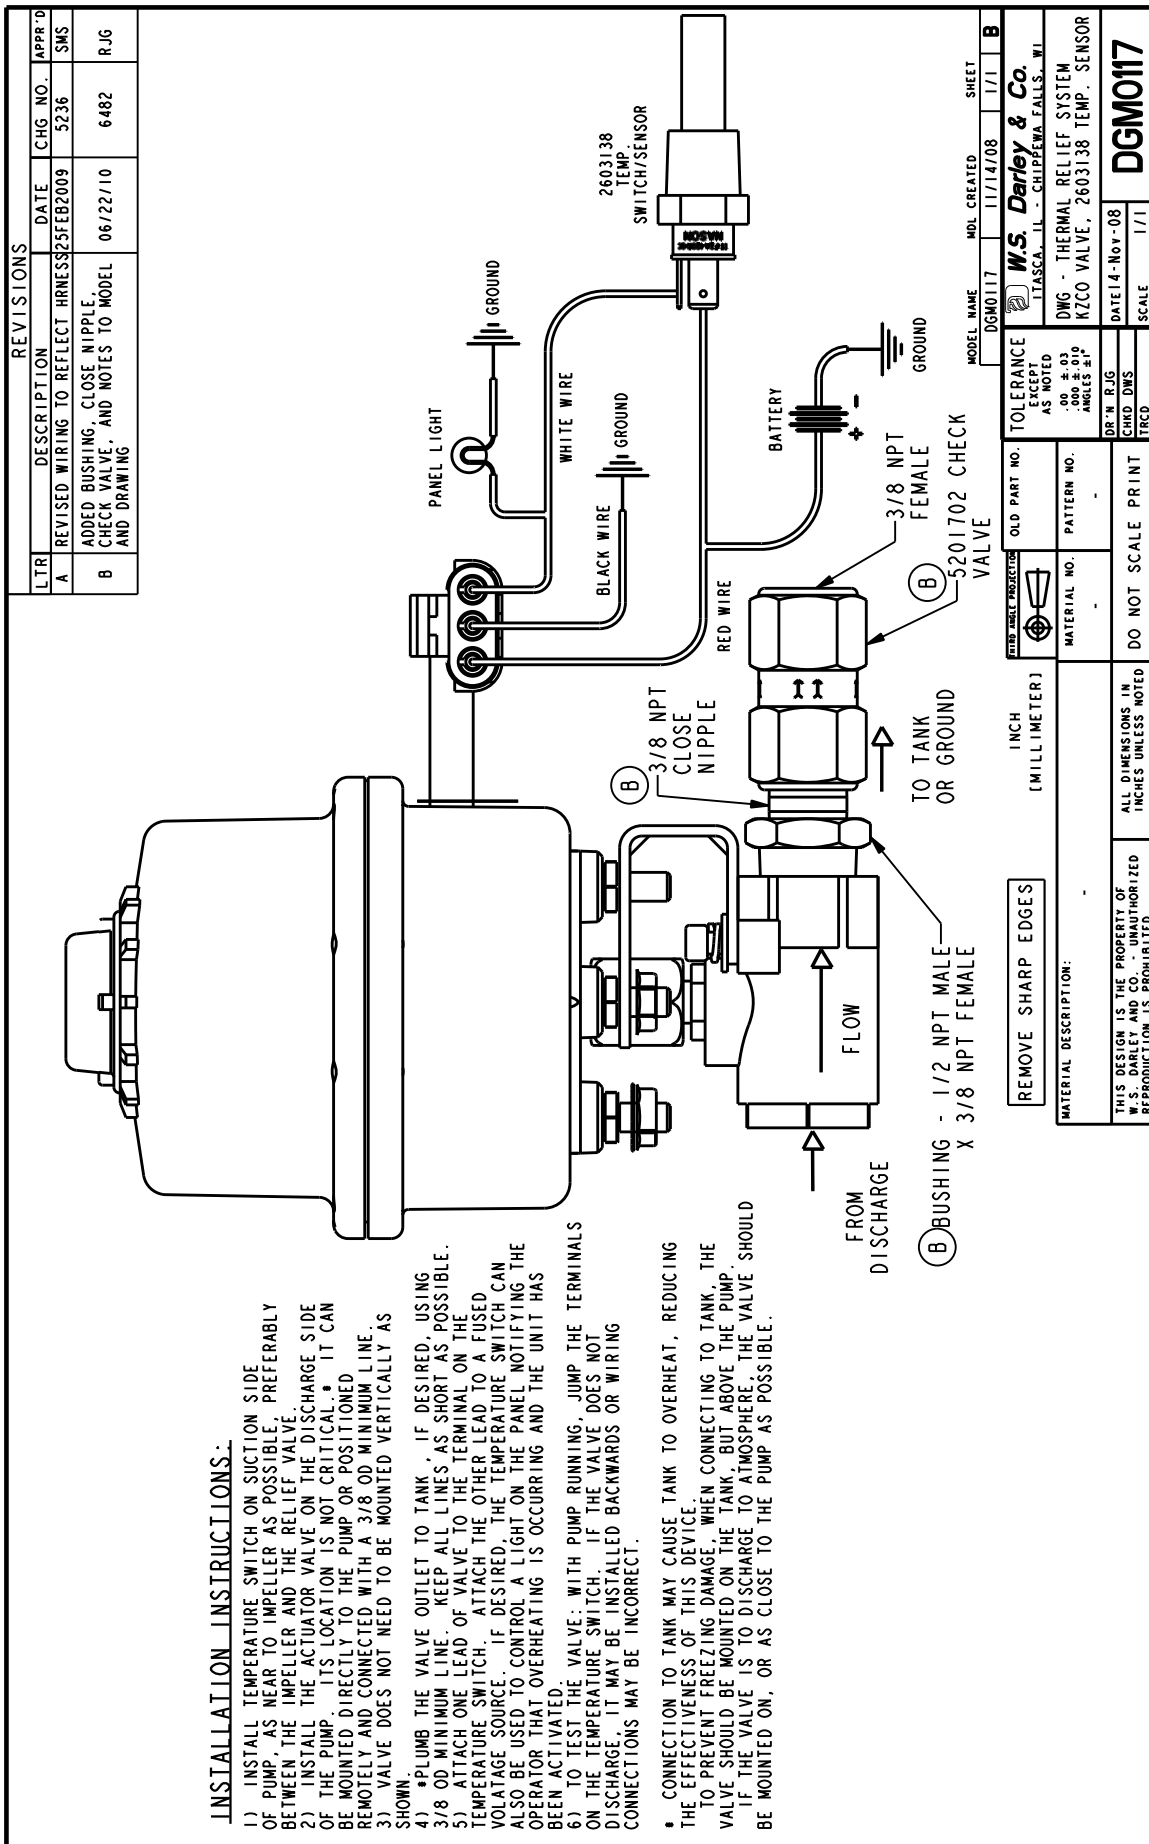

REVISIONS			
LTR	DESCRIPTION	DATE	CHG NO. APPR'D

CUSTOMER SUPPLIED

(1.88) (6.43) (5.03) .50 NPT FE

(7.04) (4.00) (2.05) (2.18)

REMOVE SHARP EDGES		INCH [MILLIMETER]	
THIRD ANGLE PROJECTION	OLD PART NO.	TOLERANCE EXCEPT AS NOTED	MODEL NAME
			5209401
MATERIAL NO.	PATTERN NO.	MDL CREATED	
-	-	11/13/08	
MATERIAL DESCRIPTION: KZCO 84D23-10D20-POI		SHEET	
		1/2	
		A	

W.S. Darley & Co.
 ITASCA, IL - CHIPPEWA FALLS, WI

VALVE - ACTUATED, 12VDC, .50NPT FE
 KZCO 84D23-10D20-POI


DATE 13-Nov-08

SCALE 1/4

5209401




60AD WIRING

Standard On/Off applications, SPST Switch
24 VDC

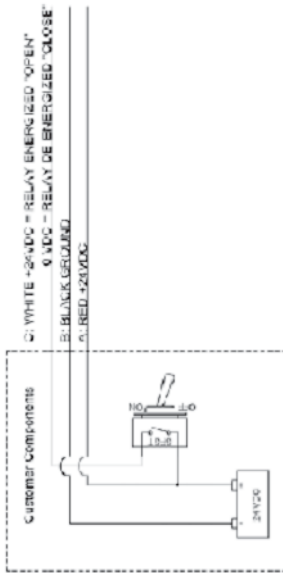

REVISIONS

LTR	DESCRIPTION	DATE	CHG NO.	APPR'D

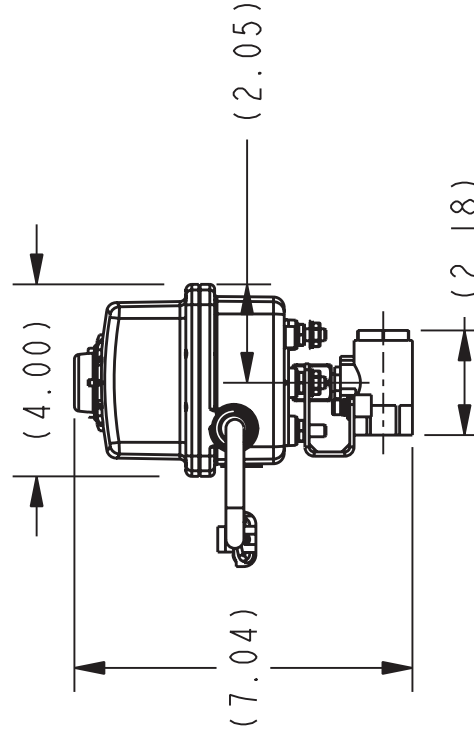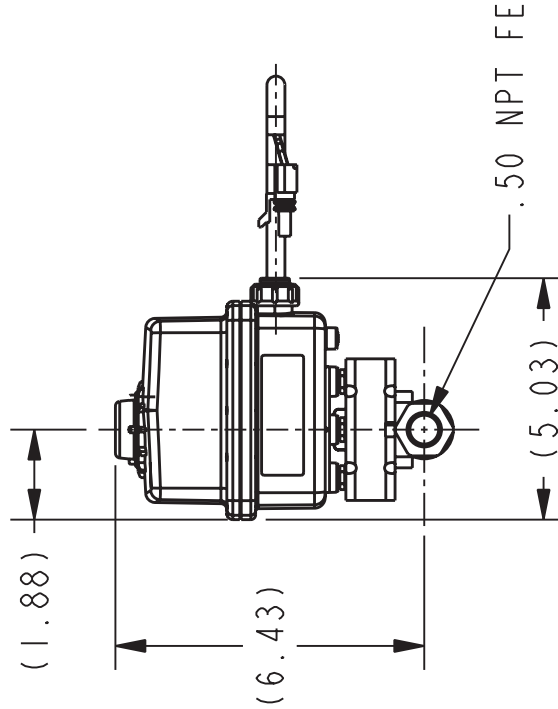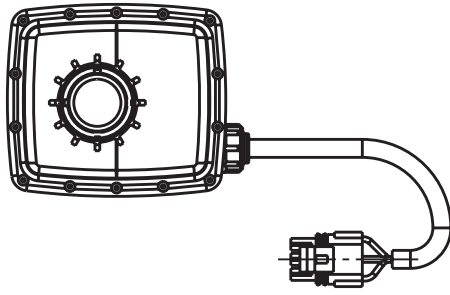

MODEL NAME 5209402 MDL CREATED 11/13/08 SHEET 1/3 A

REMOVE SHARP EDGES

INCH
[MILLIMETER]



OLD PART NO.

TOLERANCE
EXCEPT
AS NOTED

W.S. Darley & Co.
ITASCA, IL - CHIPPEWA FALLS, WI

MATERIAL DESCRIPTION:

KZCO 84D23-60AD-M

PATTERN NO.

.00 ±.03
.000 ±.010
ANGLES ±1°

VALVE - ACTUATED, 24VDC, .50NPT FE
KZCO 84D23-60AD-M

THIS DESIGN IS THE PROPERTY OF
W.S. DARLEY AND CO. - UNAUTHORIZED
REPRODUCTION IS PROHIBITED


ALL DIMENSIONS IN
INCHES UNLESS NOTED

DO NOT SCALE PRINT

DR 'N RJG
CHKD DWS
TRCD

DATE 13-Nov-08
SCALE 1/4


5209402

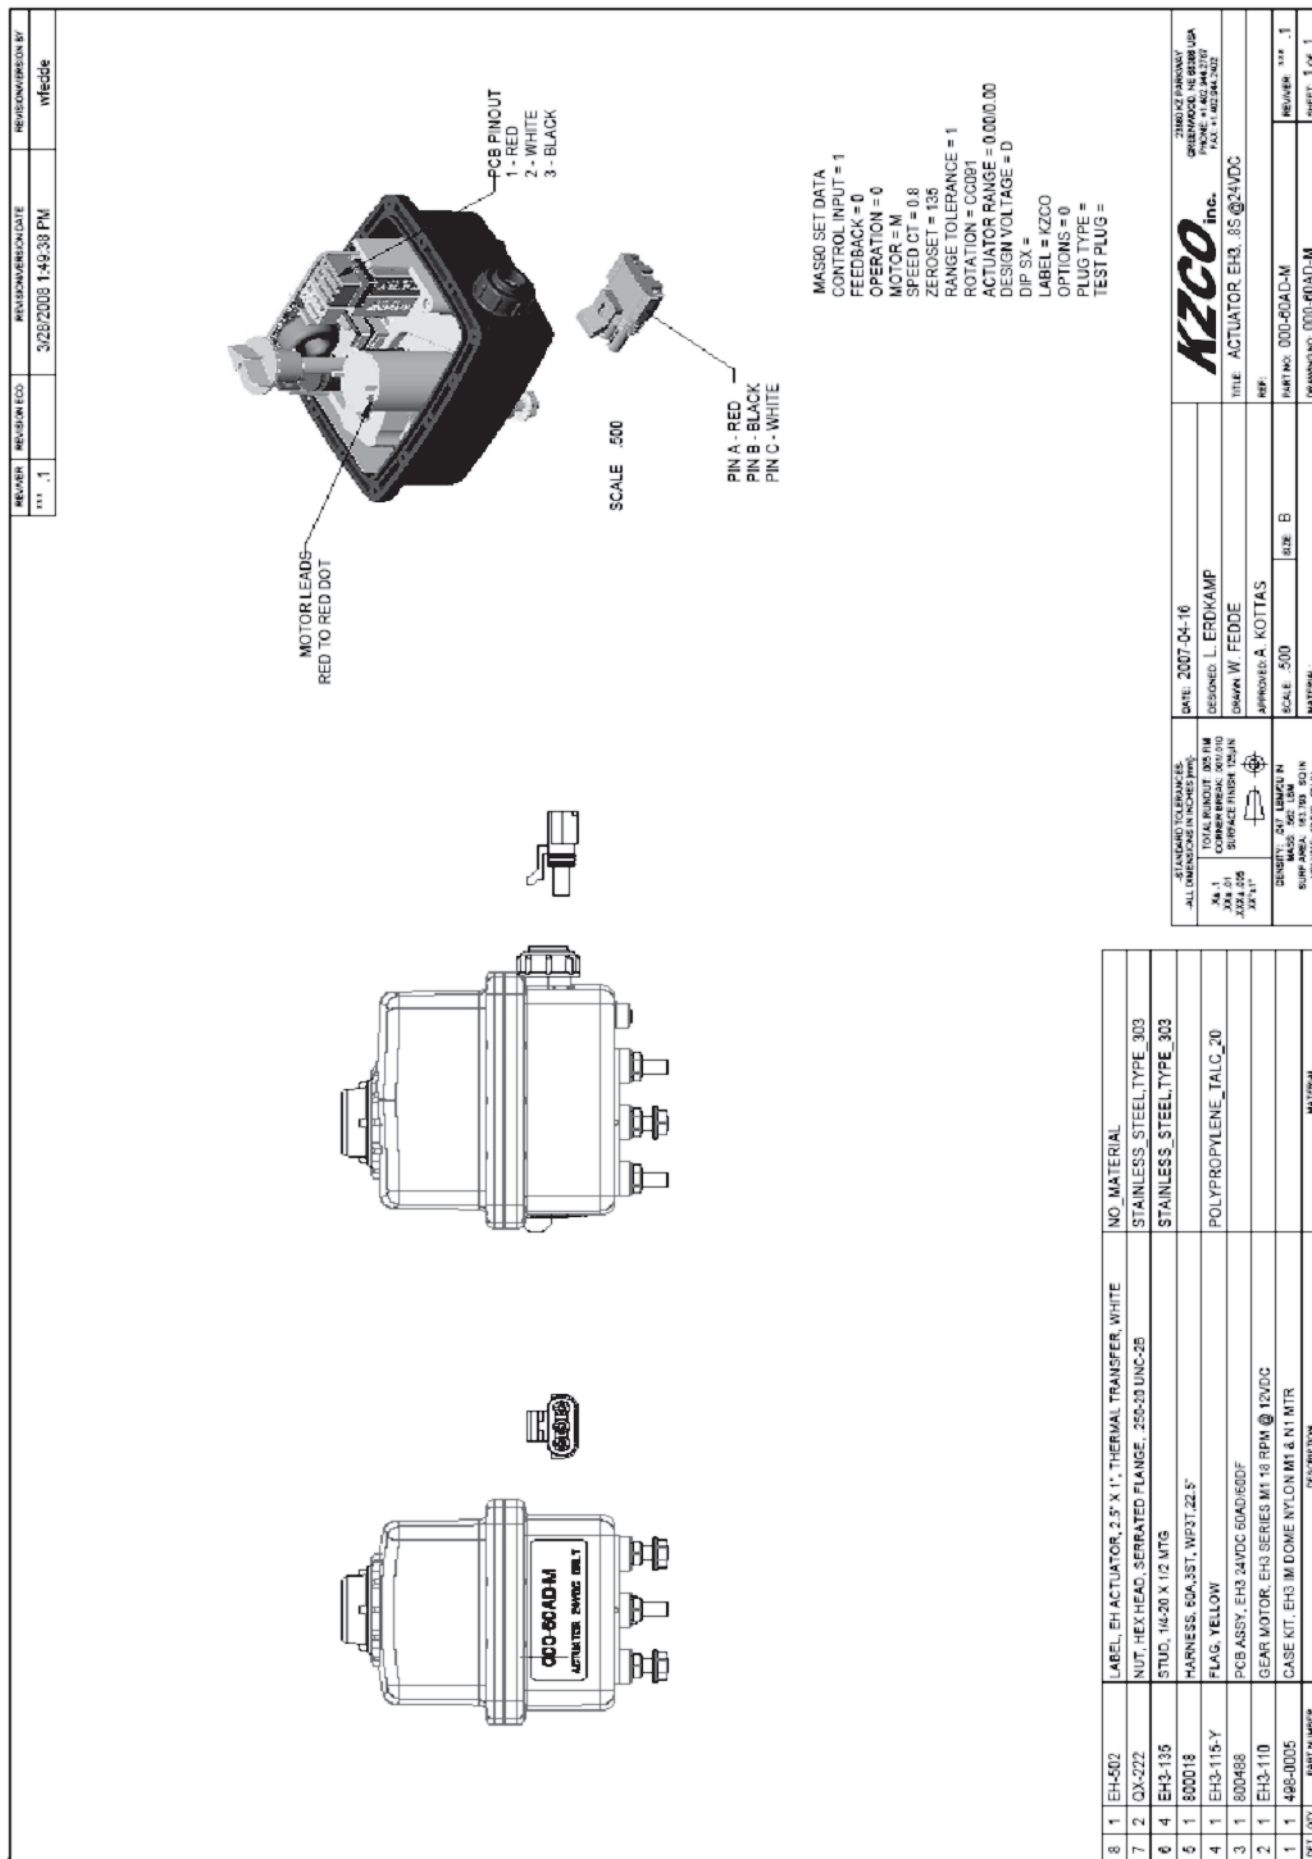

CREATED BY: bopendal CREATED ON: 6/12/2008 8:16:59 AM REV - VER 04 REL: Revision LOCATION: R001 R002 R003 R004 R005 R006 R007 R008 R009 R010 R011 R012 R013 R014 R015 R016 R017 R018 R019 R020 R021 R022 R023 R024 R025 R026 R027 R028 R029 R030 R031 R032 R033 R034 R035 R036 R037 R038 R039 R040 R041 R042 R043 R044 R045 R046 R047 R048 R049 R050 R051 R052 R053 R054 R055 R056 R057 R058 R059 R060 R061 R062 R063 R064 R065 R066 R067 R068 R069 R070 R071 R072 R073 R074 R075 R076 R077 R078 R079 R080 R081 R082 R083 R084 R085 R086 R087 R088 R089 R090 R091 R092 R093 R094 R095 R096 R097 R098 R099 R100 R101 R102 R103 R104 R105 R106 R107 R108 R109 R110 R111 R112 R113 R114 R115 R116 R117 R118 R119 R120 R121 R122 R123 R124 R125 R126 R127 R128 R129 R130 R131 R132 R133 R134 R135 R136 R137 R138 R139 R140 R141 R142 R143 R144 R145 R146 R147 R148 R149 R150 R151 R152 R153 R154 R155 R156 R157 R158 R159 R160 R161 R162 R163 R164 R165 R166 R167 R168 R169 R170 R171 R172 R173 R174 R175 R176 R177 R178 R179 R180 R181 R182 R183 R184 R185 R186 R187 R188 R189 R190 R191 R192 R193 R194 R195 R196 R197 R198 R199 R200 R201 R202 R203 R204 R205 R206 R207 R208 R209 R210 R211 R212 R213 R214 R215 R216 R217 R218 R219 R220 R221 R222 R223 R224 R225 R226 R227 R228 R229 R230 R231 R232 R233 R234 R235 R236 R237 R238 R239 R240 R241 R242 R243 R244 R245 R246 R247 R248 R249 R250 R251 R252 R253 R254 R255 R256 R257 R258 R259 R260 R261 R262 R263 R264 R265 R266 R267 R268 R269 R270 R271 R272 R273 R274 R275 R276 R277 R278 R279 R280 R281 R282 R283 R284 R285 R286 R287 R288 R289 R290 R291 R292 R293 R294 R295 R296 R297 R298 R299 R300 R301 R302 R303 R304 R305 R306 R307 R308 R309 R310 R311 R312 R313 R314 R315 R316 R317 R318 R319 R320 R321 R322 R323 R324 R325 R326 R327 R328 R329 R330 R331 R332 R333 R334 R335 R336 R337 R338 R339 R340 R341 R342 R343 R344 R345 R346 R347 R348 R349 R350 R351 R352 R353 R354 R355 R356 R357 R358 R359 R360 R361 R362 R363 R364 R365 R366 R367 R368 R369 R370 R371 R372 R373 R374 R375 R376 R377 R378 R379 R380 R381 R382 R383 R384 R385 R386 R387 R388 R389 R390 R391 R392 R393 R394 R395 R396 R397 R398 R399 R400 R401 R402 R403 R404 R405 R406 R407 R408 R409 R410 R411 R412 R413 R414 R415 R416 R417 R418 R419 R420 R421 R422 R423 R424 R425 R426 R427 R428 R429 R430 R431 R432 R433 R434 R435 R436 R437 R438 R439 R440 R441 R442 R443 R444 R445 R446 R447 R448 R449 R450 R451 R452 R453 R454 R455 R456 R457 R458 R459 R460 R461 R462 R463 R464 R465 R466 R467 R468 R469 R470 R471 R472 R473 R474 R475 R476 R477 R478 R479 R480 R481 R482 R483 R484 R485 R486 R487 R488 R489 R490 R491 R492 R493 R494 R495 R496 R497 R498 R499 R500 R501 R502 R503 R504 R505 R506 R507 R508 R509 R510 R511 R512 R513 R514 R515 R516 R517 R518 R519 R520 R521 R522 R523 R524 R525 R526 R527 R528 R529 R530 R531 R532 R533 R534 R535 R536 R537 R538 R539 R540 R541 R542 R543 R544 R545 R546 R547 R548 R549 R550 R551 R552 R553 R554 R555 R556 R557 R558 R559 R560 R561 R562 R563 R564 R565 R566 R567 R568 R569 R570 R571 R572 R573 R574 R575 R576 R577 R578 R579 R580 R581 R582 R583 R584 R585 R586 R587 R588 R589 R590 R591 R592 R593 R594 R595 R596 R597 R598 R599 R600 R601 R602 R603 R604 R605 R606 R607 R608 R609 R610 R611 R612 R613 R614 R615 R616 R617 R618 R619 R620 R621 R622 R623 R624 R625 R626 R627 R628 R629 R630 R631 R632 R633 R634 R635 R636 R637 R638 R639 R640 R641 R642 R643 R644 R645 R646 R647 R648 R649 R650 R651 R652 R653 R654 R655 R656 R657 R658 R659 R660 R661 R662 R663 R664 R665 R666 R667 R668 R669 R670 R671 R672 R673 R674 R675 R676 R677 R678 R679 R680 R681 R682 R683 R684 R685 R686 R687 R688 R689 R690 R691 R692 R693 R694 R695 R696 R697 R698 R699 R700 R701 R702 R703 R704 R705 R706 R707 R708 R709 R710 R711 R712 R713 R714 R715 R716 R717 R718 R719 R720 R721 R722 R723 R724 R725 R726 R727 R728 R729 R730 R731 R732 R733 R734 R735 R736 R737 R738 R739 R740 R741 R742 R743 R744 R745 R746 R747 R748 R749 R750 R751 R752 R753 R754 R755 R756 R757 R758 R759 R760 R761 R762 R763 R764 R765 R766 R767 R768 R769 R770 R771 R772 R773 R774 R775 R776 R777 R778 R779 R780 R781 R782 R783 R784 R785 R786 R787 R788 R789 R790 R791 R792 R793 R794 R795 R796 R797 R798 R799 R800 R801 R802 R803 R804 R805 R806 R807 R808 R809 R810 R811 R812 R813 R814 R815 R816 R817 R818 R819 R820 R821 R822 R823 R824 R825 R826 R827 R828 R829 R830 R831 R832 R833 R834 R835 R836 R837 R838 R839 R840 R841 R842 R843 R844 R845 R846 R847 R848 R849 R850 R851 R852 R853 R854 R855 R856 R857 R858 R859 R860 R861 R862 R863 R864 R865 R866 R867 R868 R869 R870 R871 R872 R873 R874 R875 R876 R877 R878 R879 R880 R881 R882 R883 R884 R885 R886 R887 R888 R889 R890 R891 R892 R893 R894 R895 R896 R897 R898 R899 R900 R901 R902 R903 R904 R905 R906 R907 R908 R909 R910 R911 R912 R913 R914 R915 R916 R917 R918 R919 R920 R921 R922 R923 R924 R925 R926 R927 R928 R929 R930 R931 R932 R933 R934 R935 R936 R937 R938 R939 R940 R941 R942 R943 R944 R945 R946 R947 R948 R949 R950 R951 R952 R953 R954 R955 R956 R957 R958 R959 R960 R961 R962 R963 R964 R965 R966 R967 R968 R969 R970 R971 R972 R973 R974 R975 R976 R977 R978 R979 R980 R981 R982 R983 R984 R985 R986 R987 R988 R989 R990 R991 R992 R993 R994 R995 R996 R997 R998 R999 R1000 R1001 R1002 R1003 R1004 R1005 R1006 R1007 R1008 R1009 R1010 R


SHIFT SAFETY INTERLOCK SCHEMATIC MID-SHIP GEAR CASE

The safety interlock prevents the main pump shift from actuating while the automatic truck transmission is in drive gear. This eliminates clashing and possible damage of the pump gear set.

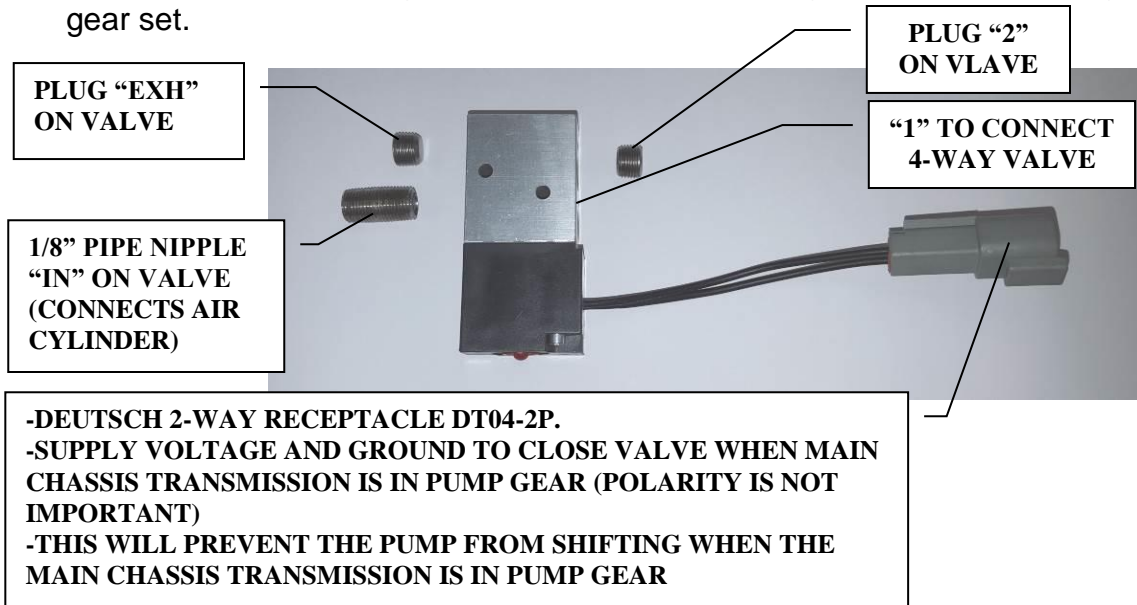

Assembly Notes:

- 1) Use Loctite 565 PST or equivalent pipe sealant on tapered pipe joints. (DO NOT USE TEFLON TAPE)
- 2) DO NOT over tighten fittings, doing so may damage thread.

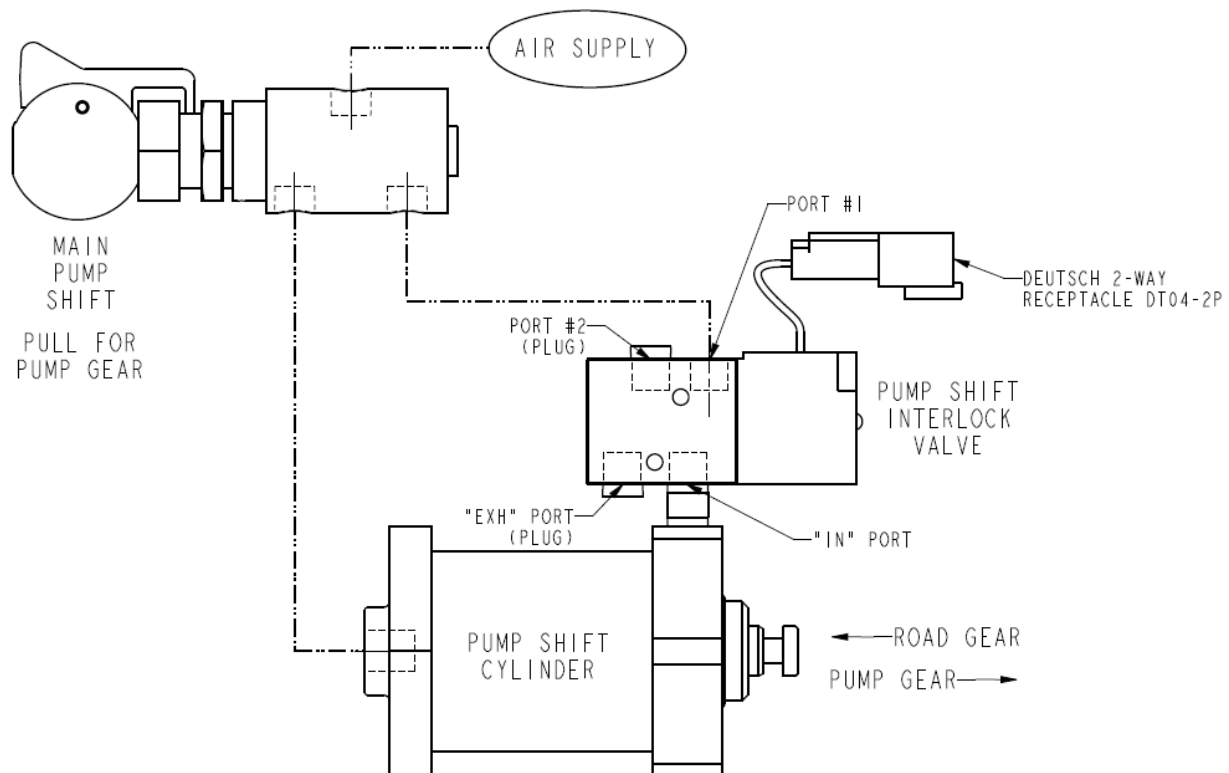


Prepared by: TED
Approved by: DJF


Date: Dec 07, 2015
Revision Date: Dec 07, 2015 - TED


Rev. #: 0
Page: 1 of 1

1205562.doc

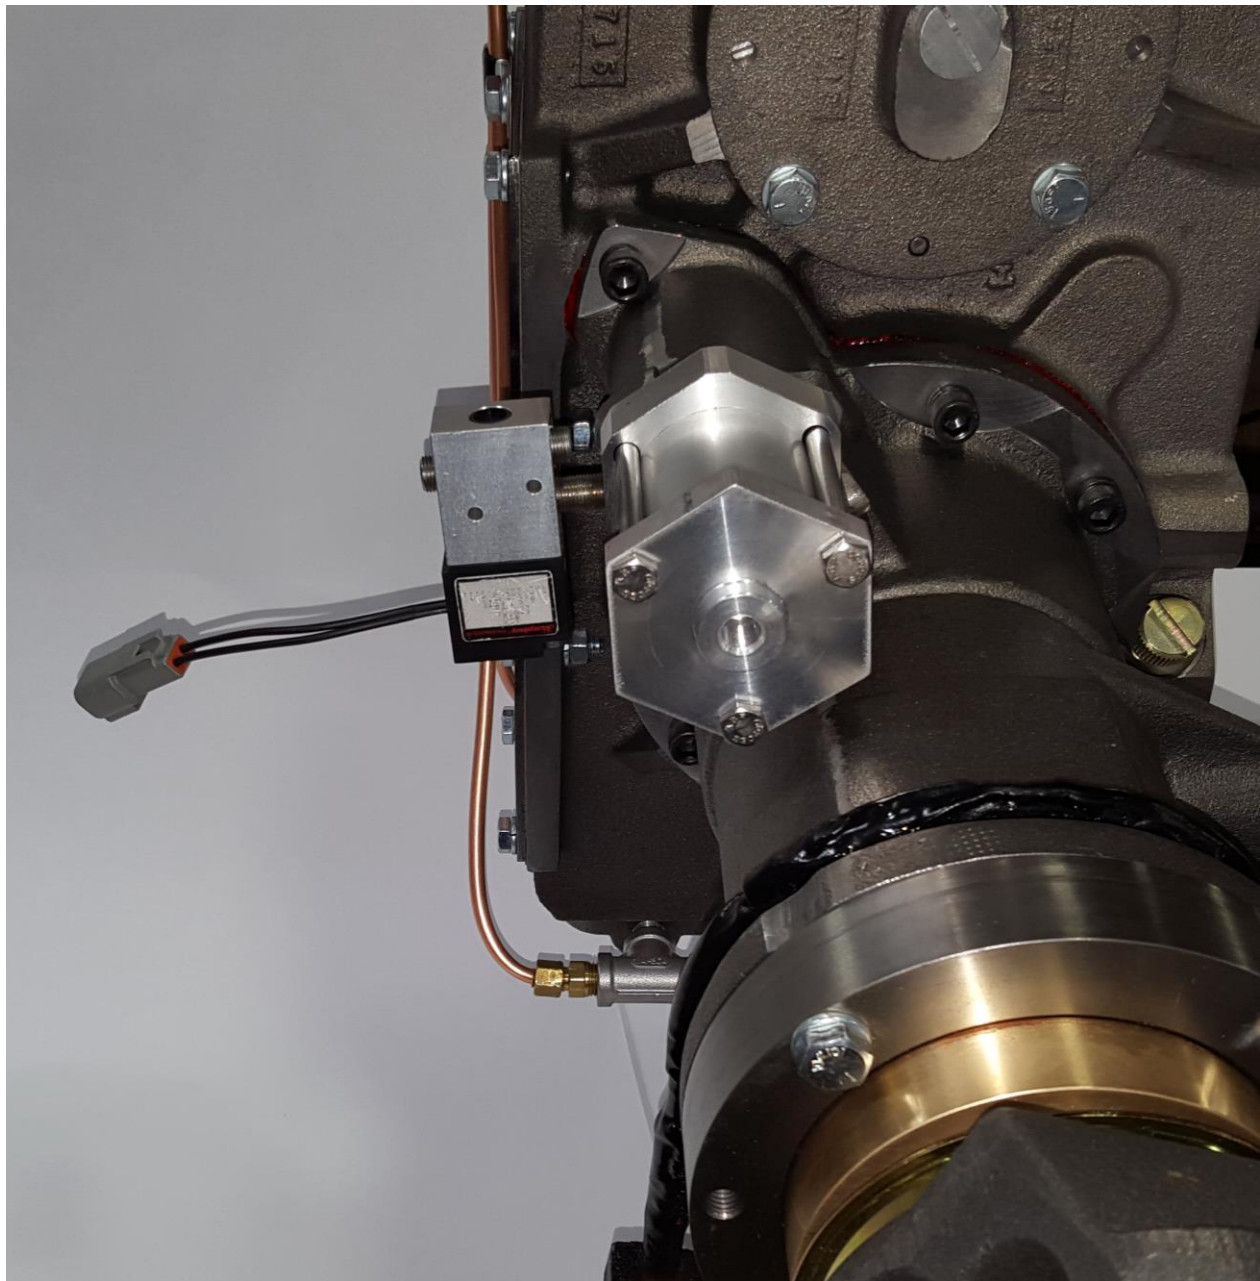

REVISIONS			
LTR	DESCRIPTION	DATE	CHG NO.
			APPR'D

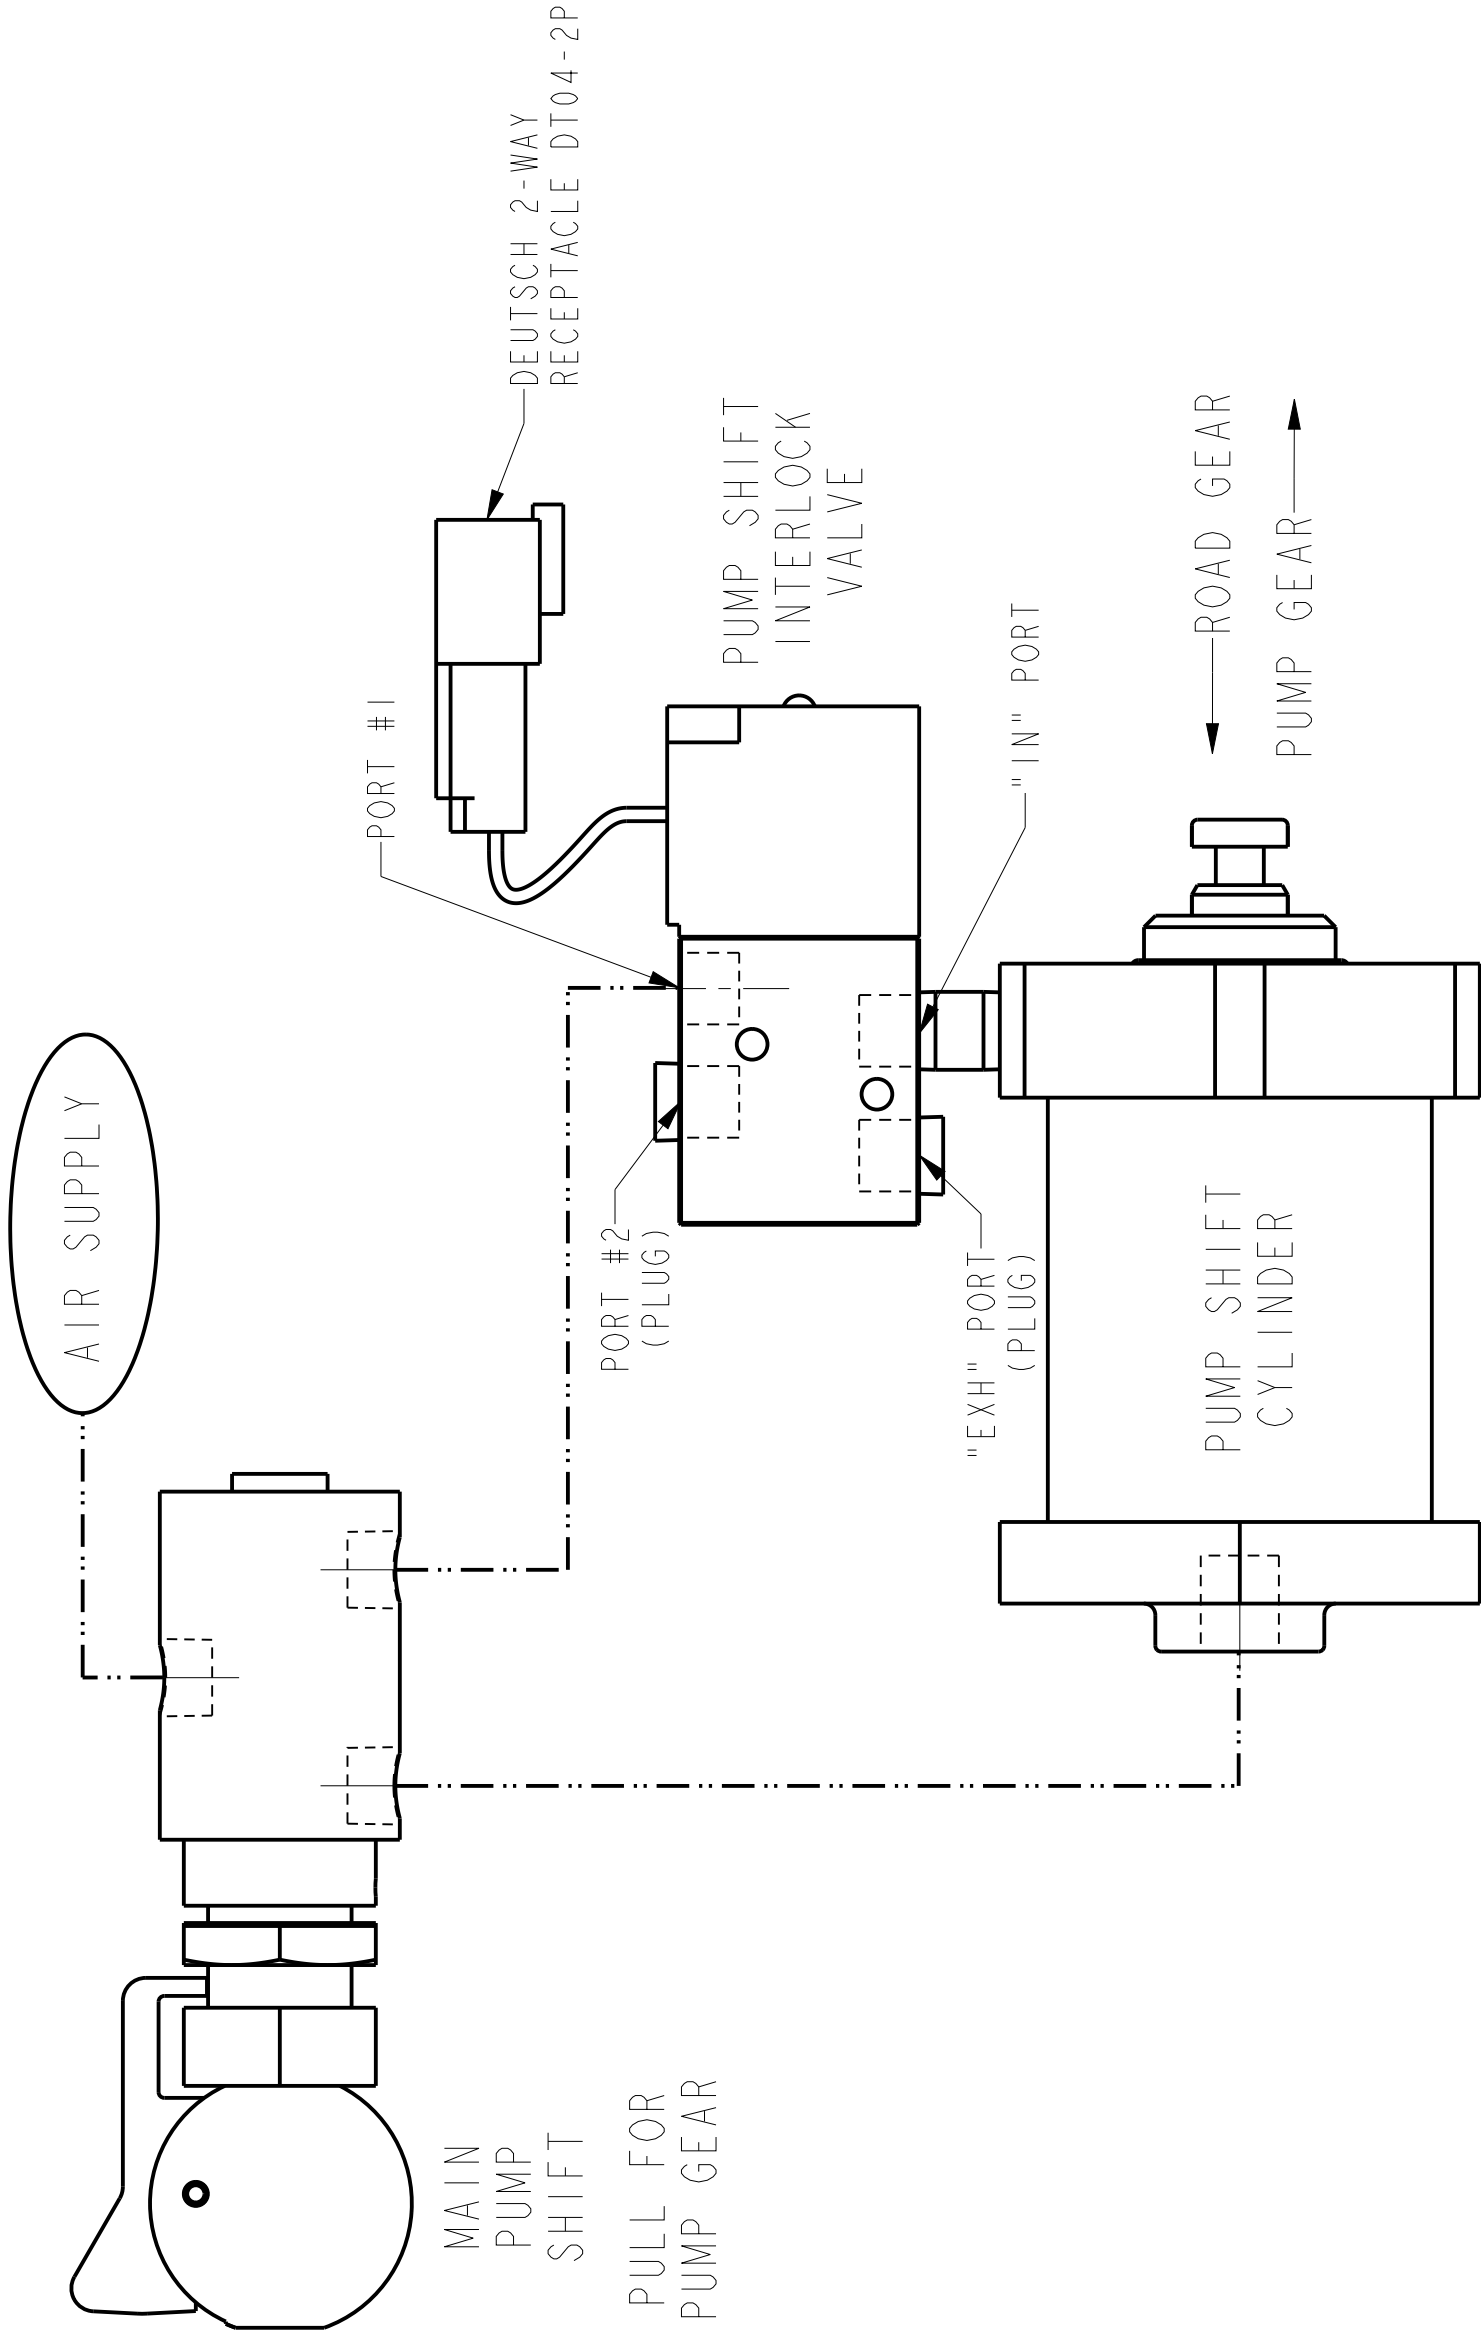

MODEL		1205562		MDL CREATED		SHEET			
						1 / 1			
						B			
TOLERANCE		OLD PART NO.		THIRD ANGLE PROJECTION					
EXCEPT AS NOTED									
.00 ±.03		PATTERN NO.		MATERIAL NO.				DO NOT SCALE PRINT	
.000 ±.010		-		-				ALL DIMENSIONS IN INCHES UNLESS NOTED	
ANGLES ±1°								THIS DESIGN IS THE PROPERTY OF W.S. DARLEY AND CO. - UNAUTHORIZED REPRODUCTION IS PROHIBITED	
DR'N TED									
CHKD WAH									
TRCD									